



How to Change Admin password in DCM-604

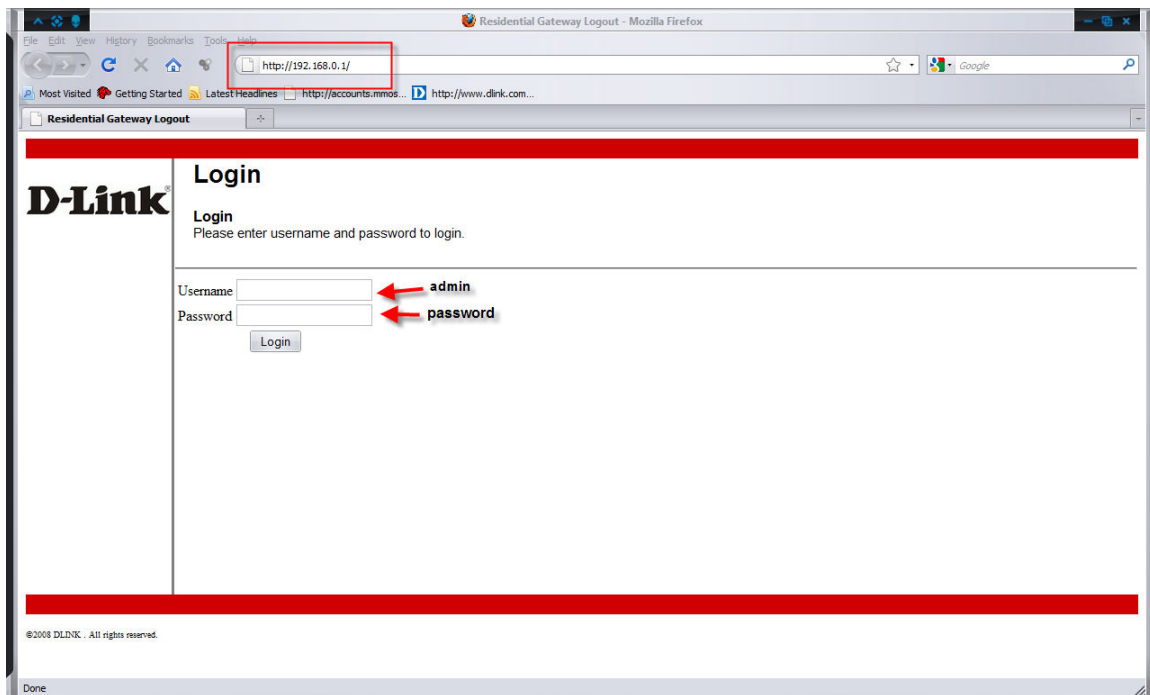

Go to 192.168.0.1
Enter the username and password

Username : admin
Password : password

Click on Login

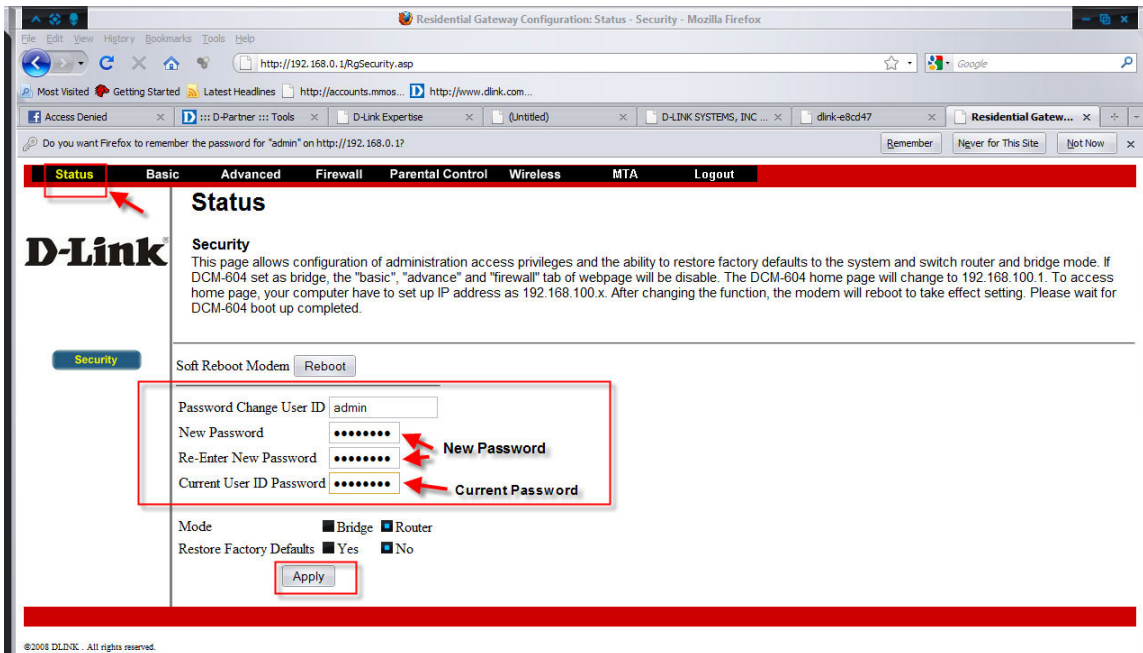

Go to Status.
Enter the username as admin and the new password and current password
Click Apply.
Done!!!