



## How to Change Admin password in DCM-604

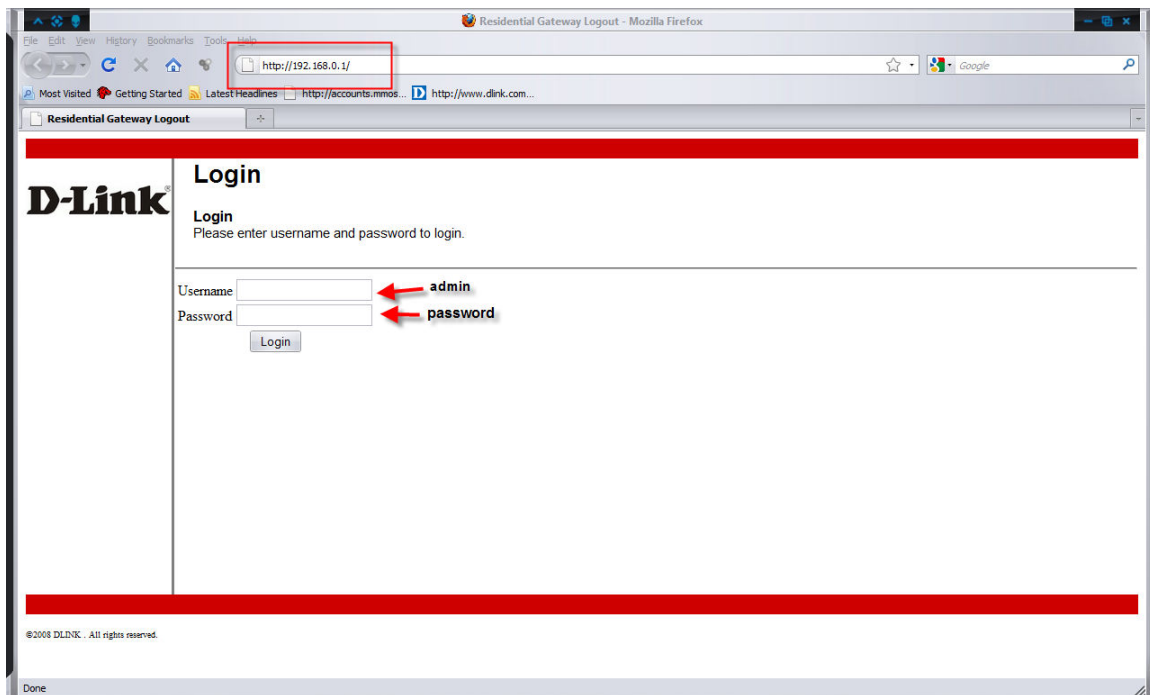

Go to 192.168.0.1  
Enter the username and password

Username : admin  
Password : password

Click on Login

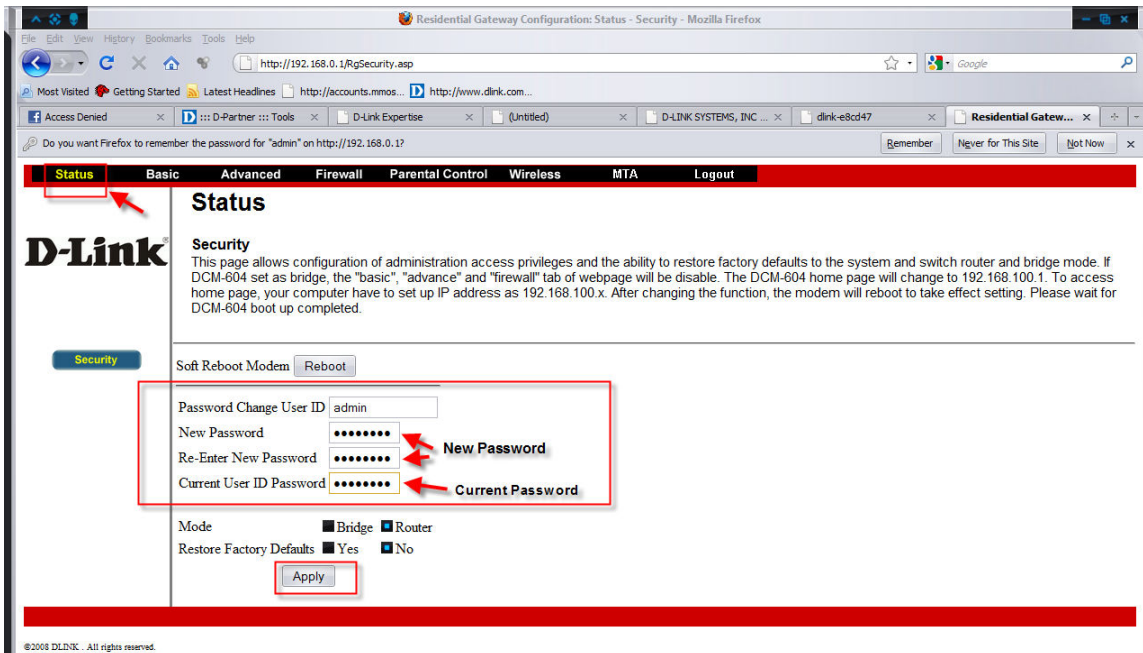

Go to Status.  
Enter the username as admin and the new password and current password  
Click Apply.  
Done!!!