

## How to Configure Port Forwarding in DCM-604

∧ ⊗ ₿			😻 Residential Gateway Logo	out - Mozilla Firefox		- @ x
Eile Edit View Higtory Bookr	marks <u>T</u> ools	Help	1			
C X C	<b>☆</b> %	http://192.168.0.1/			☆ + Google	٩
🖉 Most Visited 🕐 Geting Started 💊 Lates Headines 🔄 http://sccounts.nmos D http://www.dink.com						
Residential Gateway Log	jout	+				-
	Lo	ain				
<b>D-Link</b>						
	Login	n e enter username and nass	word to login			
			admin			
	Usernam	e	nassword			
	Password		pubblicitu			
		Login				
©2008 DLINK . All rights reserved.						
Done						11.

Go to 192.168.0.1 Enter the username and password

Username : admin Password : password

Click on Login



Go to Advanced -> Port Forwarding Enter the IP Address and ports that you want to open from WAN to LAN. Make sure you put a tick on the enable column. Click Apply. Done!!!