



How to configure Remote Management in DCM-604

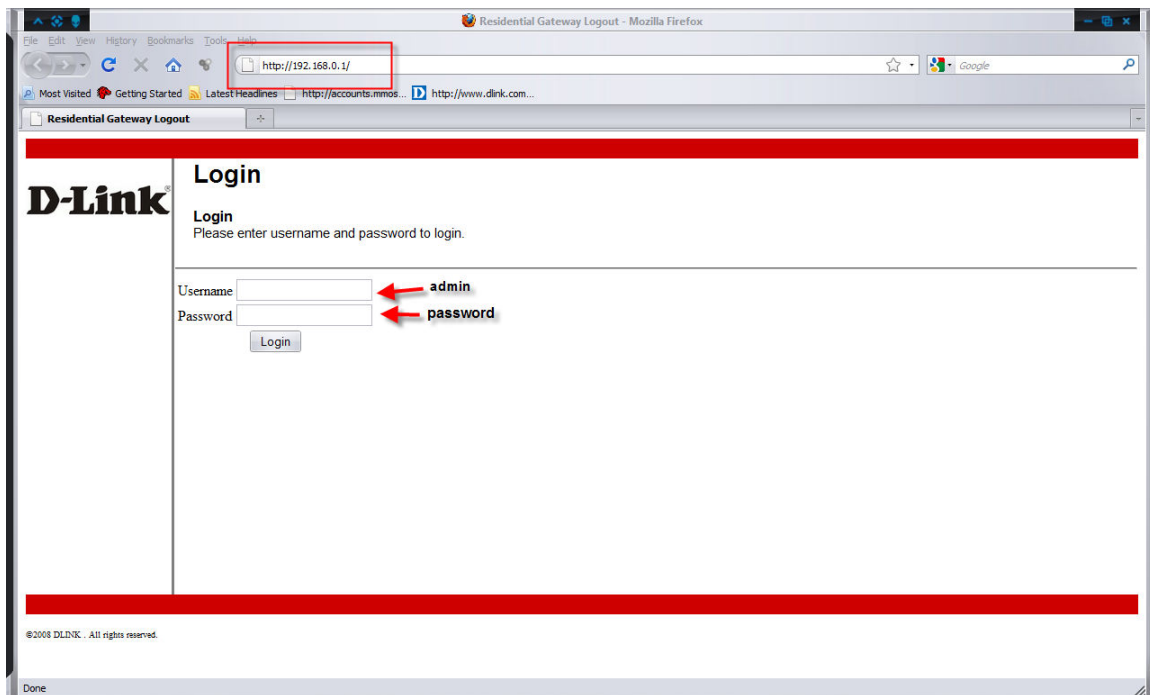

Go to 192.168.0.1
Enter the username and password

Username : admin
Password : password

Click on Login

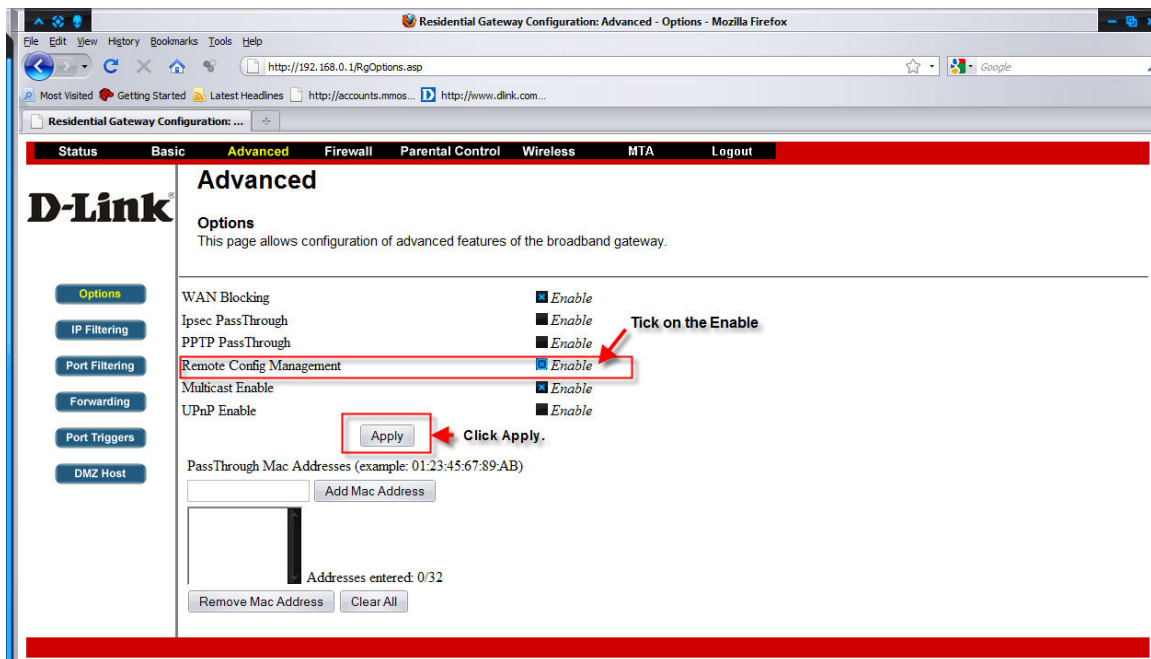

Go to Advanced -> Option
Tick on the Enable for “Remote Config Management”
Click Apply after your selection.
Done!!!

***Please take note that the Remote Management is running on port 8080.
You can access the Remote Management from outside of the network with
<http://xxx.xxx.xxx.xxx:8080>**

***The port is unchangeable.**