



How to Enable Bridge Mode in DCM-604

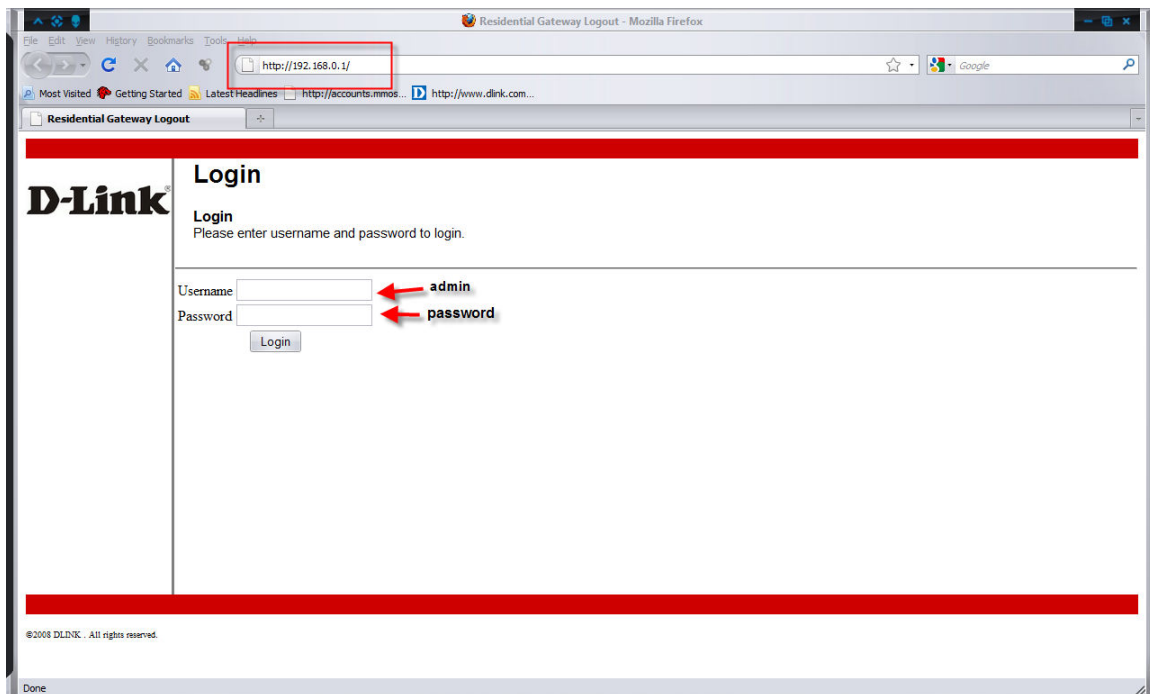


Go to 192.168.0.1
Enter the username and password

Username : admin
Password : password

Click on Login

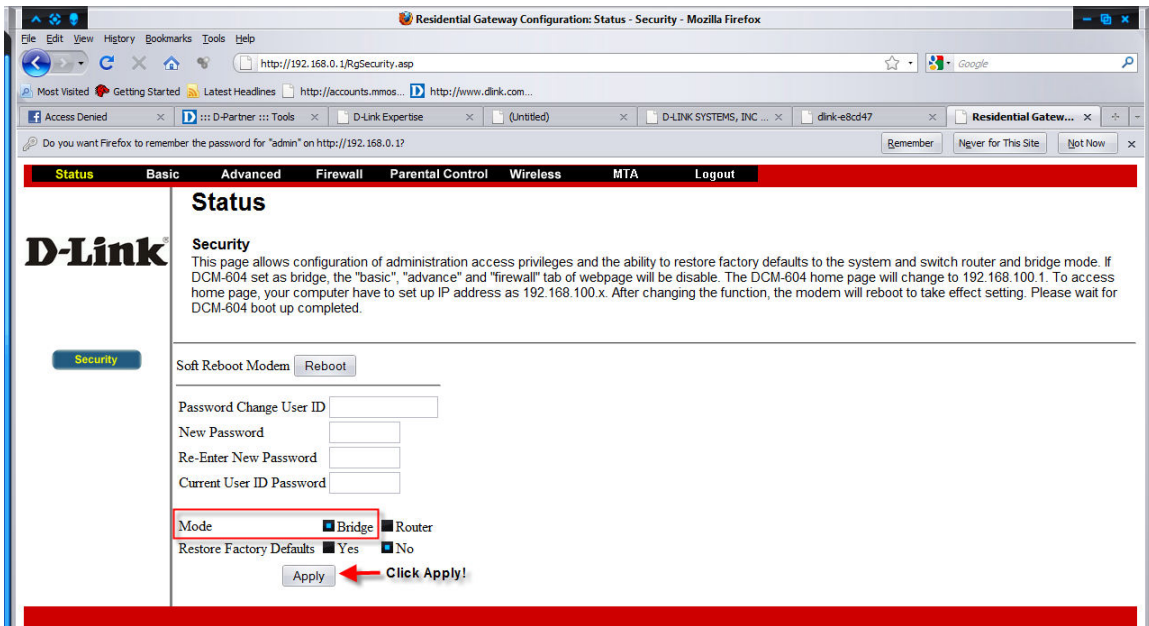

Go to Status
Put a tick on Bridge
Click Apply.
Done!!!

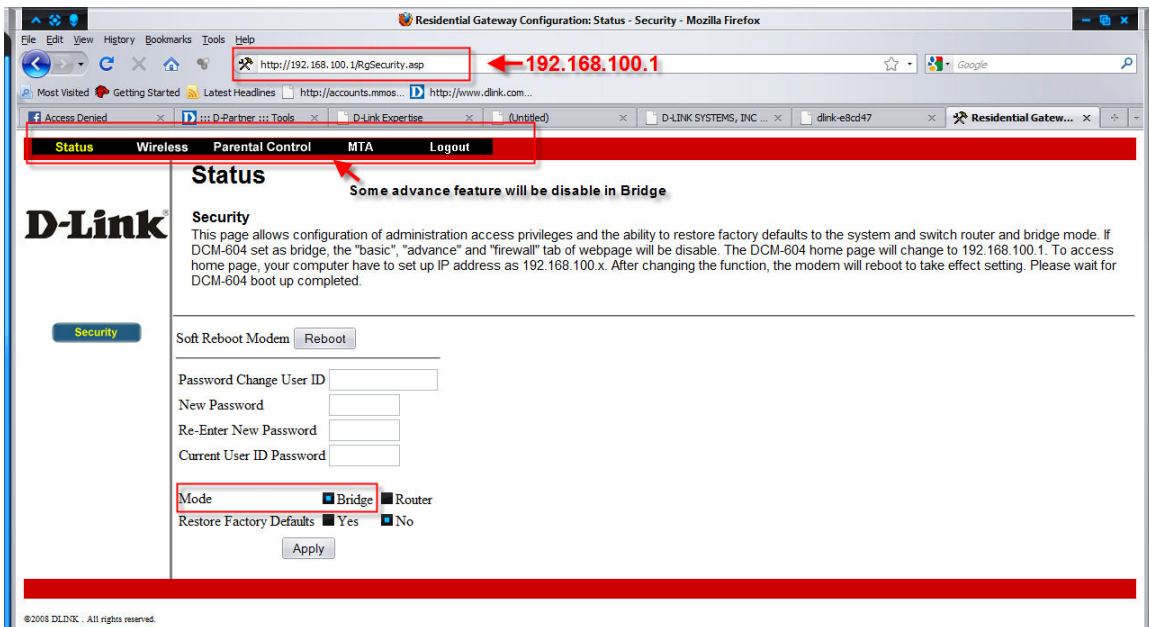

If DCM-604 set as bridge, the "basic", "advance" and "firewall" tab of webpage will be disable. The DCM-604 home page will change to 192.168.100.1. To access home page, your computer have to set up IP address as 192.168.100.x. After changing the function, the modem will reboot to take effect setting. Please wait for DCM-604 boot up completed.