



How to Enable DMZ Host in DCM-604

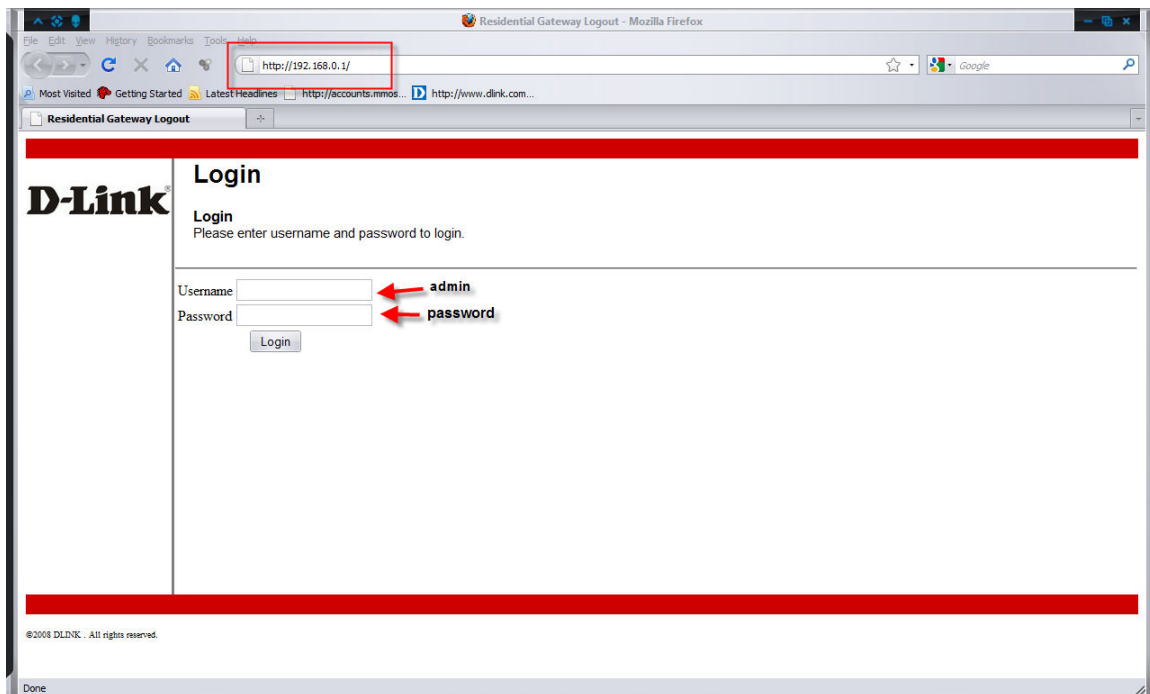

Go to 192.168.0.1
Enter the username and password

Username : admin
Password : password

Click on Login

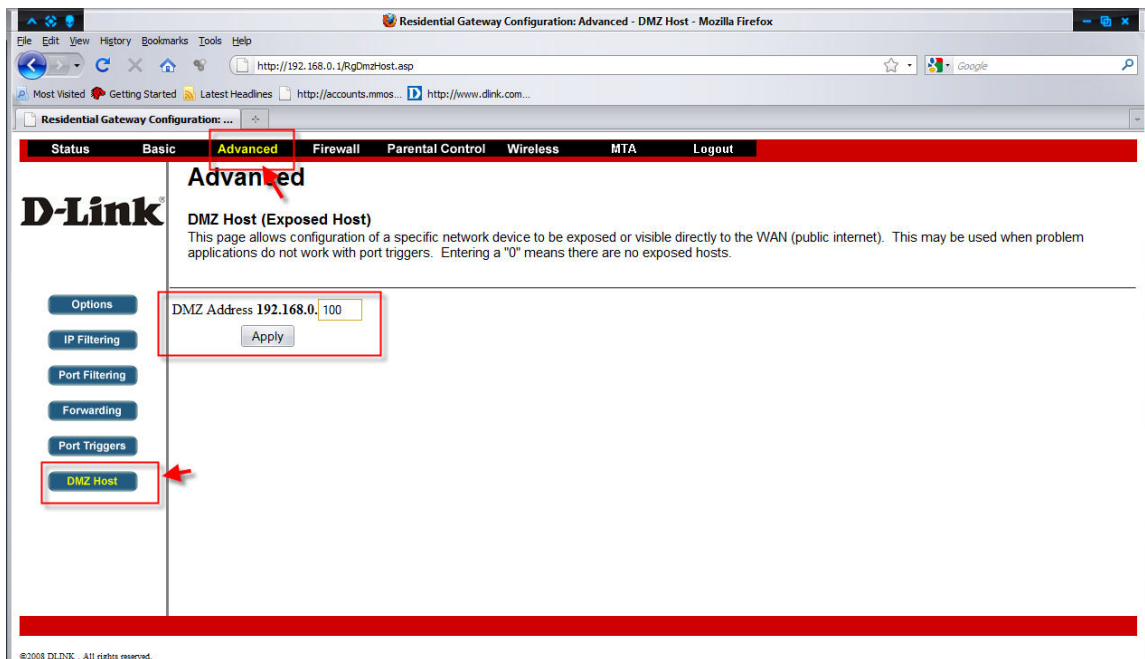

Go to Advanced -> DMZ Host
Enter the IP that is going to exposed or visible directly to the WAN (Public Internet)
It can be either in single IP or in range of IP.
Click Apply.
Done!!!