



## How to Enable PPTP and IPSEC Pass-through in DCM-604

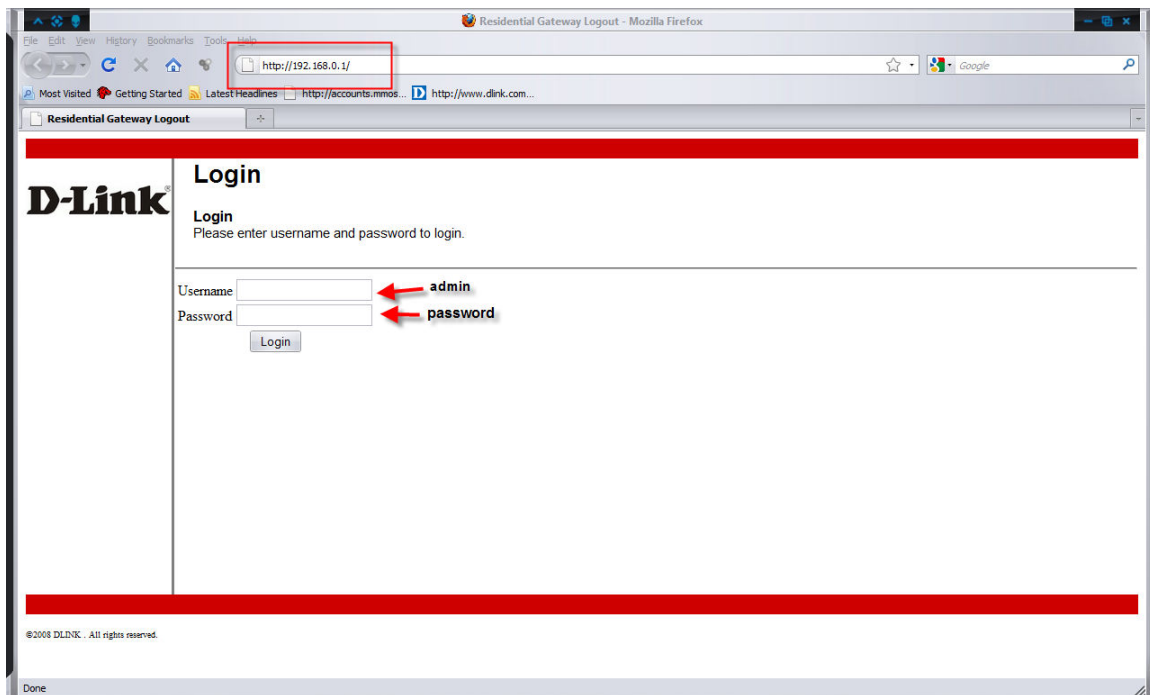

Go to 192.168.0.1  
Enter the username and password

Username : admin  
Password : password

Click on Login

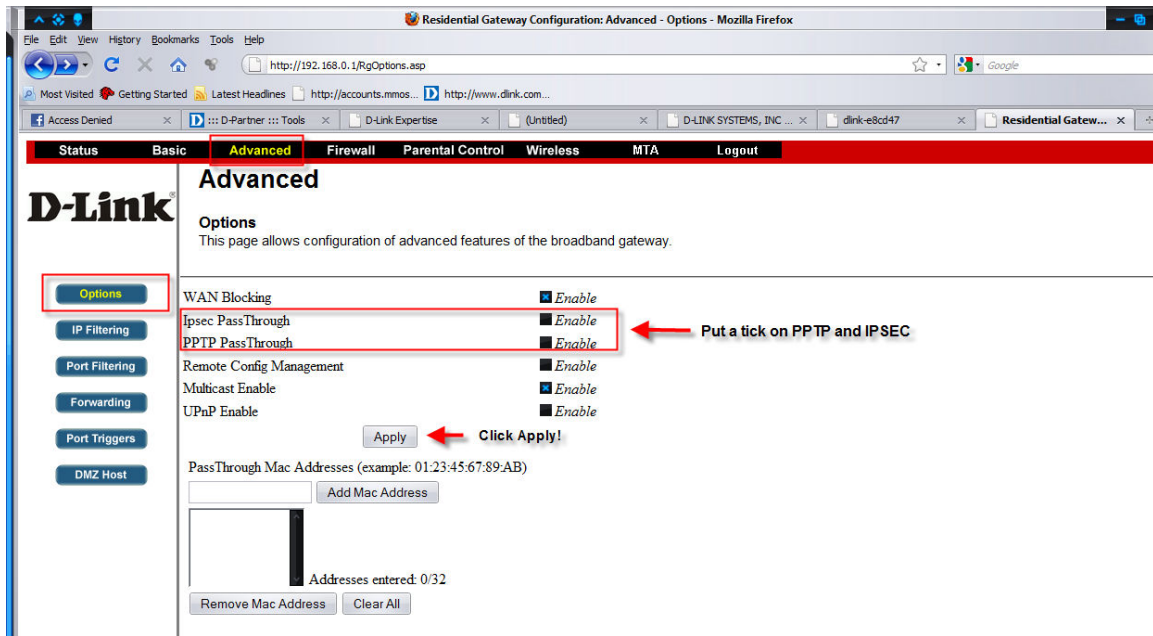

Go to Advanced -> Options  
Put a tick on the PPTP and IPSEC.  
Click Apply.  
Done!!!

***\*By Default , PPTP and IPSEC pass-through was disabled.***