## How to: Setup always recording to SD card


**Step 1:** Connect the power of the camera and connect LAN cable from the camera to your router.

**Step 2:** Run the downloaded wizard setup(available from http://sg.mydlink.com/support) on your computer.


Step 3: Click on Start



Step 4: Put a tick in the box beside 'I ... these terms and conditions.' Click on I Agree

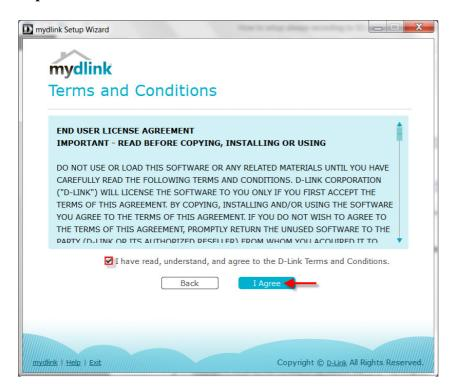


Step 5: Select DCS-5030L

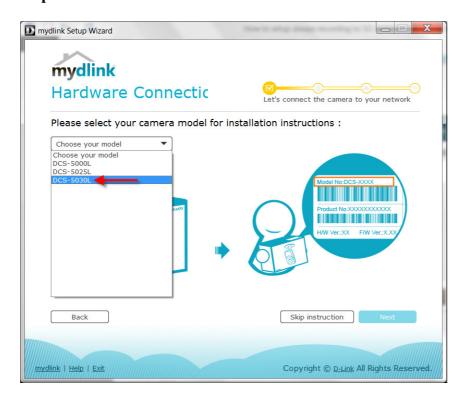

Step 6: Click on Next



**Step 7:** Copy down the IP address of the DCS-5030L displayed in the list.

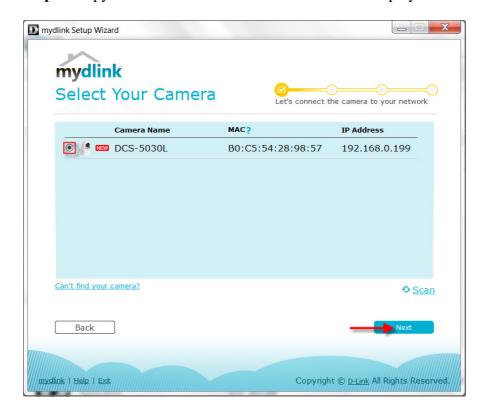


**Step 8:** Open Internet Explorer and enter the IP address of the camera that you had copy down on the URL bar.




**Step 9:** Enter the camera **user name** and **password** that was configured in the earlier wizard setup of the camera. Click on **OK**.




\*Note: Prior to recording setup, please ensure camera device Time & Date is correct as shown.

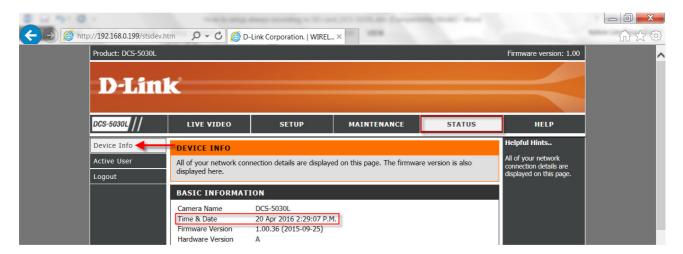

**Step 10:** Click on **Setup** Tab and **SD Recording** on the left.

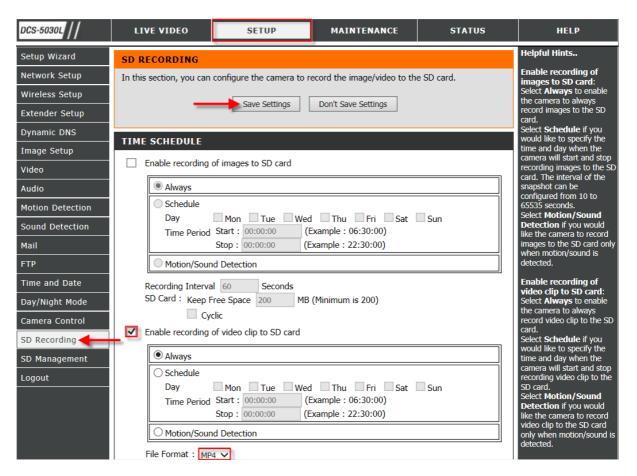


- Enable the recording of video clip to SD Card as shown.

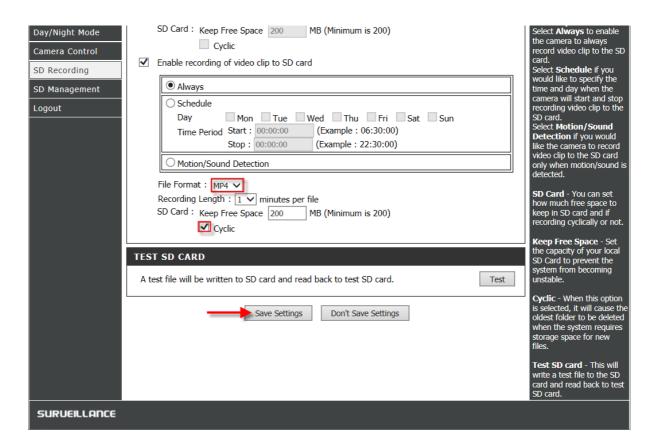

- Select File Format as MP4 as shown.
- Select desired **Recording Length** as shown.
- Enter a value in **Keep Free Space** or leave as default
- Enable **cyclic recording** for video to be automatically overwritten.


Please Save Settings to confirm changes successfully.

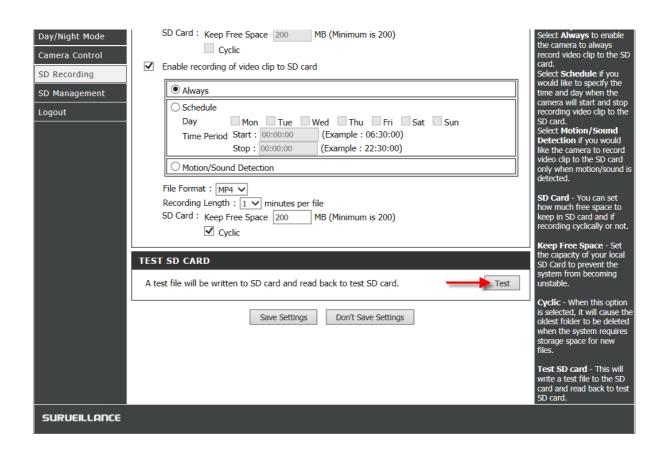

You may perform a **Test** as shown to ensure inserted SD Card is operational with the camera device.



**Step 11:** Click on **Setup** Tab and **SD Management** on the left.

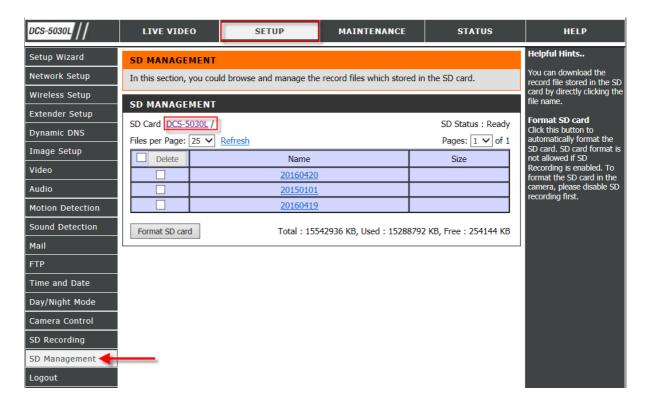

- Click on the desired **Date folder** to display the available recordings.

Step 12: Please verify if all the recordings are within in the number of pages listed in the view.

SD Card DCS-5030L / 20160420 / 10			SD Status : Ready	Format SD card Click this button to	/
Dynamic DNS	Files per Page: 25 V Refresh		Pages: 1 ∨ of 5	automatically format the	
Image Setup	Delete	Name	Size	SD card. SD card format is not allowed if SD	
Video		20160420_100024.jpg	106631 B	Recording is enabled. To format the SD card in the	
Audio		20160420_100024.mp4	8121823 B	camera, please disable SD	
Motion Detection		20160420 100124.jpg	104865 B	recording first.	
Sound Detection		20160420 100124.mp4	8099895 B		
	-	20160420 100224.jpg	99000 B		
Mail		20160420_100224.mp4	8060015 B		
FTP		20160420 100324.jpg	101999 B		
Time and Date		20160420 100324.mp4	8066127 B		
Day/Night Mode		20160420_100424.jpg	100089 B		
•		20160420_100424.mp4	8035487 B		
Camera Control		20160420 100524.mp4	8040527 B		
SD Recording		20160420_100524.jpg	89136 B		
SD Management		20160420_100624.jpg	90292 B		
Logout		20160420_100624.mp4	7978849 B		
	-	20160420 100724.jpg	91416 B		
		20160420 100724.mp4	8104807 B		
		20160420 100824.mp4	8088263 B		
		20160420_100824.jpg	89647 B		
		20160420 100924.jpg	89132 B		
		20160420 100924.mp4	8077367 B		
		20160420 101024.jpg	88173 B		
		20160420_101024.mp4	8059087 B		
		20160420 101124.jpg	88167 B		
		20160420 101124.mp4	8047110 B		
		20160420 101224.mp4	9647043 B		

## Thank you