


D-Link[®] Technical Support Setup Procedure

How to Delete the Camera on mydlink Account


Step 1: Open your web browser and type <http://www.mydlink.com> on the address bar. Press the enter key on your keyboard.



Step 2: Click on **Sign In to mydlink**.

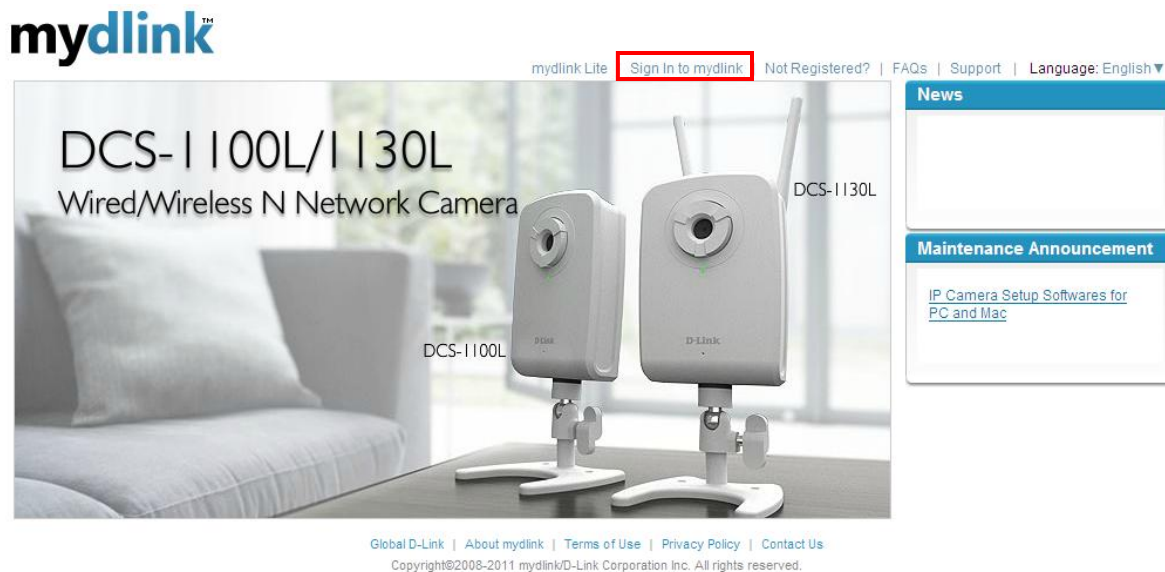

Step 3: Enter the E-Mail Address and the Password used to register on mydlink and then click on the **Sign In** button.

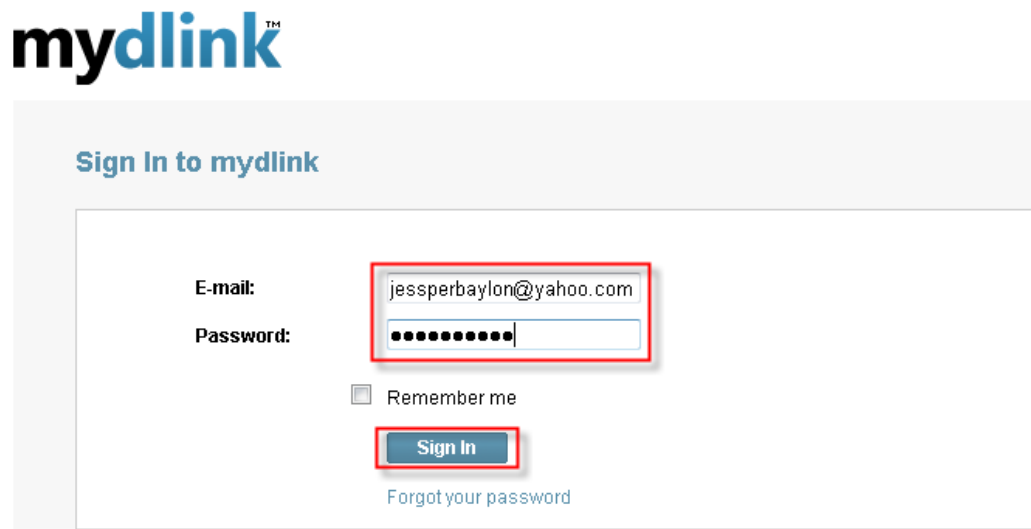

Step 4: Click on the **Delete Device** button on the upper left side of the screen.



My Devices

Delete Device

DCS-1130L
30038242

Live Video | **Camera Settings** | **Camera Info** | **Live Video Mode**

Step 5: Put a check mark on the camera you want to delete and click **Next** button.



Welcome, Jessper Baylon

[My Devices](#) | [My Profile](#) | [Sign out](#)

Delete Devices

1 Select Device Please select the devices you want to delete from your account, then click **Next**.

2 Confirm

3 Complete

	Model Name	Device Name	mydlink No.
<input checked="" type="checkbox"/> 1	DCS-1130L	DCS-1130L	30038242

Cancel **2** **Next >**

[Global D-Link](#) | [About mydlink](#) | [Terms of Use](#) | [Privacy Policy](#) | [Contact Us](#)
Copyright©2008-2011 mydlink/D-Link Corporation Inc. All rights reserved.

Step 6: Click **Next** button.



Welcome, Jessper Baylon

[My Devices](#) | [My Profile](#) | [Sign out](#)

Delete Devices

1 Select Device

2 Confirm **The following devices will be deleted from your account:**

DCS-1130L 30038242 DCS-1130L

3 Complete

Warning! Removing these devices will also remove any mydlink functions related to these devices.

If you are sure you want to delete these devices, click **Next**.

Cancel **< Back** **Next >**

[Global D-Link](#) | [About mydlink](#) | [Terms of Use](#) | [Privacy Policy](#) | [Contact Us](#)
Copyright©2008-2011 mydlink/D-Link Corporation Inc. All rights reserved.

Step 7: Type in your mydlink Password and click **Next** button.

Password Verification Needed

Please enter your mydlink password for verification:

mydlink Password:

Step 8: Click on **Finish** to proceed.

mydlink™ Welcome, Jessper Baylon

[My Devices](#) | [My Profile](#) | [Sign out](#)


Delete Devices

1 Select Device

2 Confirm

3 Complete

The following devices have been successfully deleted from your mydlink account:

	DCS-1130L	(30038242)	DCS-1130L
--	-----------	------------	-----------

To add the device to a mydlink account and enable remote access to it, please run the device's Setup Wizard again from its included CD.

[Global D-Link](#) | [About mydlink](#) | [Terms of Use](#) | [Privacy Policy](#) | [Contact Us](#)
Copyright©2008-2011 mydlink/D-Link Corporation Inc. All rights reserved.

Step 9: A Message "Your account has no devices yet" will appear when there is no more camera on your mydlink account.

mydlink™ Welcome, Jessper Baylon

[My Devices](#) | [My Profile](#) | [Sign out](#)

My Devices

Your account has no devices yet.

[Global D-Link](#) | [About mydlink](#) | [Terms of Use](#) | [Privacy Policy](#) | [Contact Us](#)
Copyright©2008-2011 mydlink/D-Link Corporation Inc. All rights reserved.