


D-Link® Technical Support Setup Procedure

How to Login to my IP Camera WEB Interface via mydlink Website

Step 1: Open your web browser and type <http://www.mydlink.com> on the address bar. Press the enter key on your keyboard.



Step 2: Click on **Sign In to mydlink**.

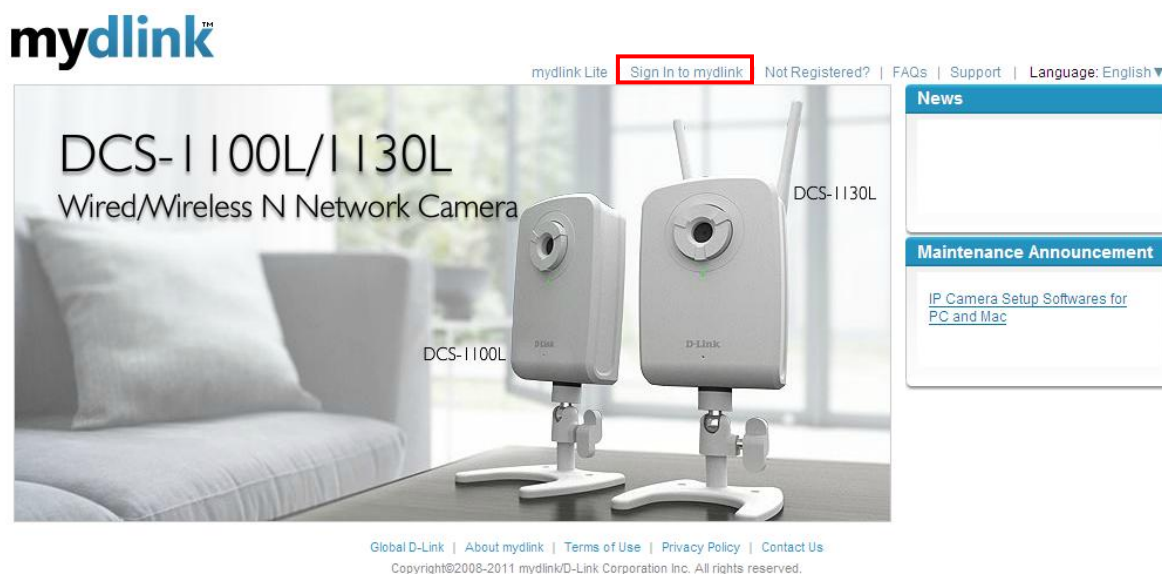

Step 3: Enter the E-Mail Address and the Password used to register on mydlink and then click on the **Sign In** button.

A screenshot of the mydlink "Sign In to mydlink" login form. The form is titled "Sign In to mydlink" and contains two input fields: "E-mail:" and "Password:". The "E-mail:" field contains the text "jessperbaylon@yahoo.com" and is highlighted with a red rectangle. The "Password:" field contains a series of dots and is also highlighted with a red rectangle. Below the password field is a checkbox labeled "Remember me". At the bottom of the form is a blue "Sign In" button, which is highlighted with a red rectangle. Below the button is a link that says "Forgot your password".

Step 4: Click on the **Camera Settings** Tab and then click on the button **Camera web page**.

mydlink™

mydlink Lite | **My Devices** | My Profile | Sign out

[Global D-Link](#) | [About mydlink](#) | [Terms of Use](#) | [Privacy Policy](#) | [Contact Us](#)
Copyright©2008-2011 mydlink/D-Link Corporation Inc. All rights reserved.

Step 5: Type in the username as "admin" and then type the password that you have entered on the setup wizard to secure the camera. Click **OK** button.

Step 6: Your ip camera's web interface will show up on your web browser.