



How to recover wifi password ?

Method 1

Step 1: Open an Internet browser (such as Internet Explorer) and enter `http://dlinkrouter.local` or `http://192.168.0.1` into the address bar.




 Step 2: Enter the password for your Admin account in the field provided. If you have not changed this password from the default, leave the field blank. Click **Log In**.

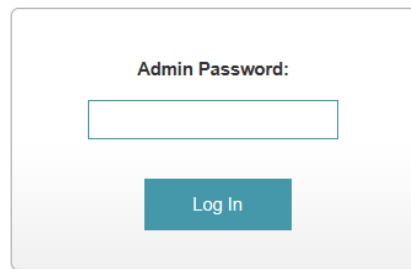


To access your storage with SharePort Web Access, [click here](#).

Step 3: Move the cursor to the Settings tab and then click Wireless from the drop-down menu.

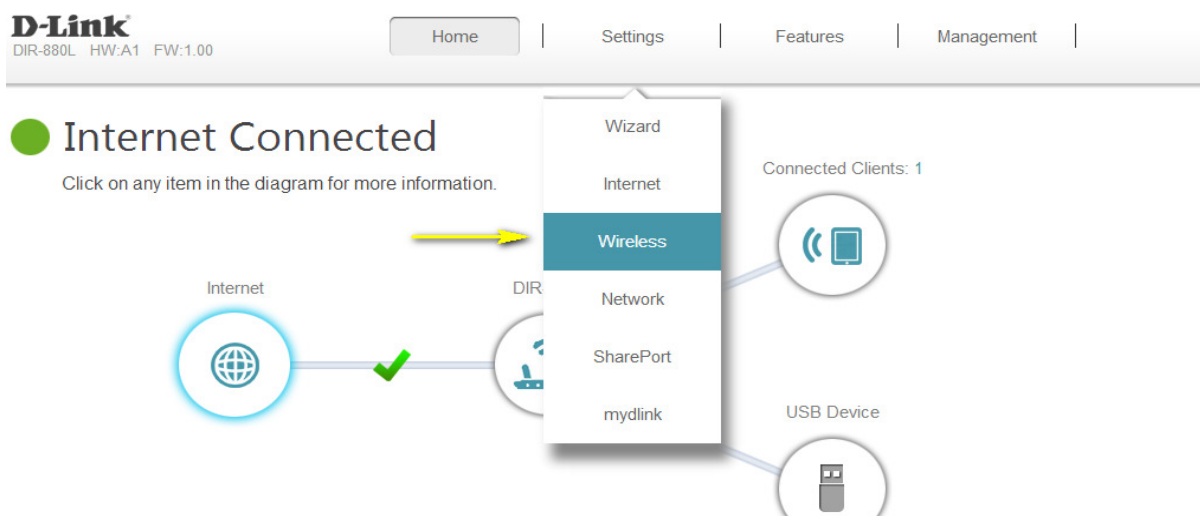

Your wireless network information should now be visible, including your wireless passwords for both the 2.4 GHz and 5 GHz networks.



Wireless


Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device.

Settings >> Wireless [Guest Zone](#) [Save](#)

2.4GHz

Status: Enabled

Wi-Fi Name (SSID):


Password: 

[Advanced Settings...](#)

5GHz

Status: Enabled


Wi-Fi Name (SSID):

Password: 


Method 2

If you've registered your router with mydlink, you may log in to the mydlink web portal at www.mydlink.com to modify your router's settings.

 
Step 1: Go to <https://www.mydlink.com>



Step 2: Log in to mydlink with your existing mydlink account name and password.

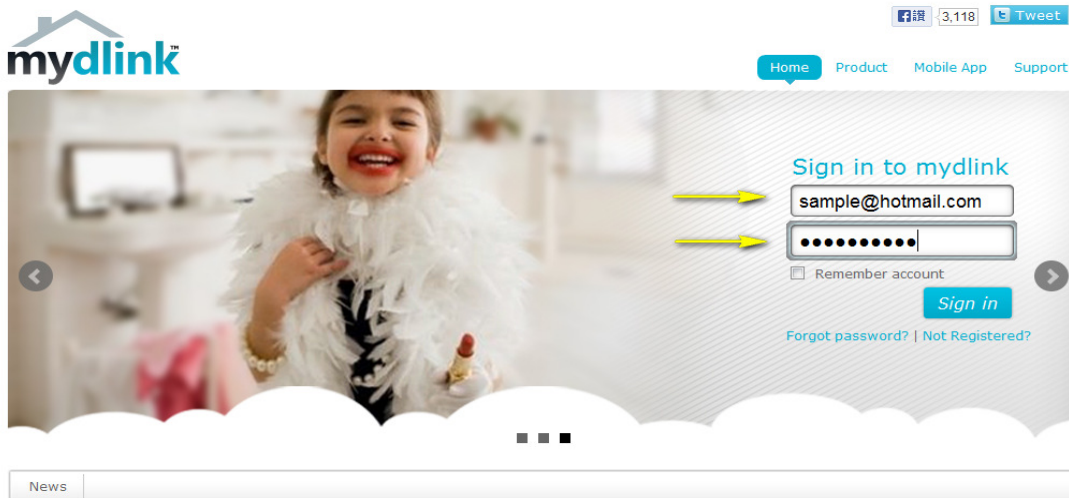


Step 3: Choose the router from My Devices on the left-hand side of the page. Go to the Settings tab.

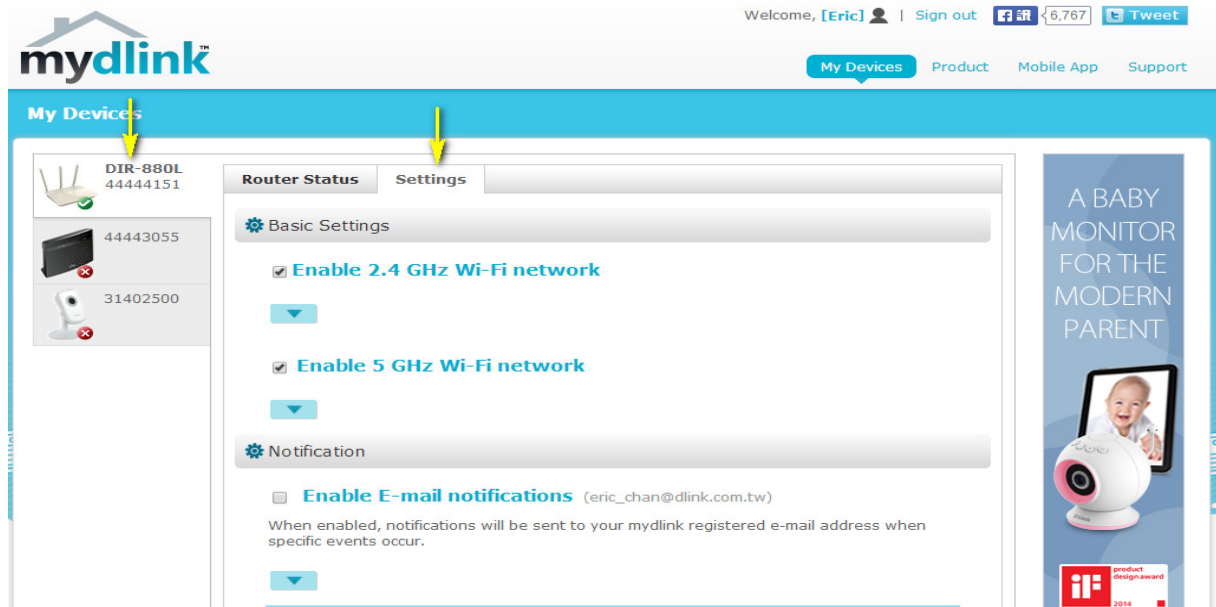

Step 4: Go to Basic Settings and click the arrow for the wireless band you wish to see the password for. The information for the band you selected will appear. Check the **Show Password** box next to the Wi-Fi Password field to view your password. You can also enter a new password at this time.

The screenshot displays the 'Basic Settings' configuration page. It features two expandable sections for Wi-Fi networks. The first section, 'Enable 2.4 GHz Wi-Fi network', is expanded to show the following fields: 'Wi-Fi Network Name(SSID):' with the value 'dlink-38BC-faq', 'Security Mode:' set to 'WPA/WPA2', and 'Wi-Fi Password:' with the value '00000000'. A yellow arrow points to the 'Show password' checkbox, which is checked. Another yellow arrow points to the 'Wi-Fi Password' input field. The second section, 'Enable 5 GHz Wi-Fi network', is collapsed. Below these sections is a 'Notification' section.

Step 5: Click **Save** if you have made changes to your settings.

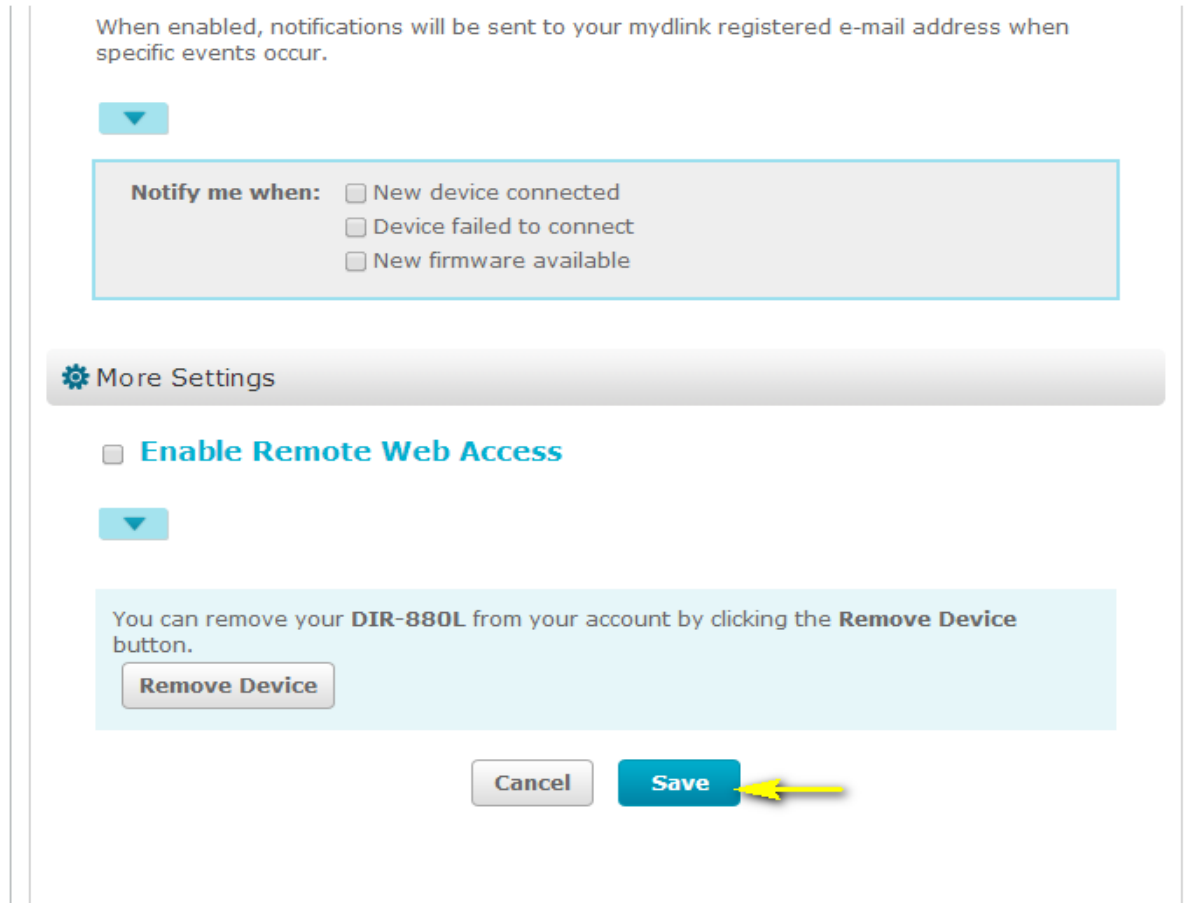

Step 6: To confirm the changes, click **Yes**. It will take at least 80 seconds to save the changes and reboot the router.

