


How to change the Wi-Fi Password?

Method 1

Step 1: Open an Internet browser (such as Internet Explorer) and enter `http://dlinkrouter.local` or `http://192.168.0.1` into the address bar.




Step 2: Enter the password for your Admin account in the field provided. If you have not changed this password from the default, leave the field blank. Click **Log In**.

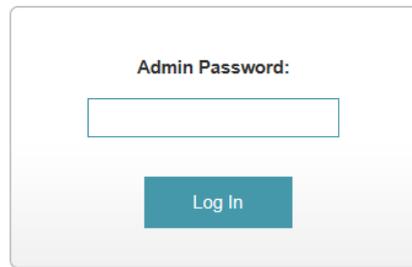

To access your storage with SharePort Web Access, [click here](#).

Step 3: Move the cursor to the Settings tab and then click Wireless from the drop-down menu.

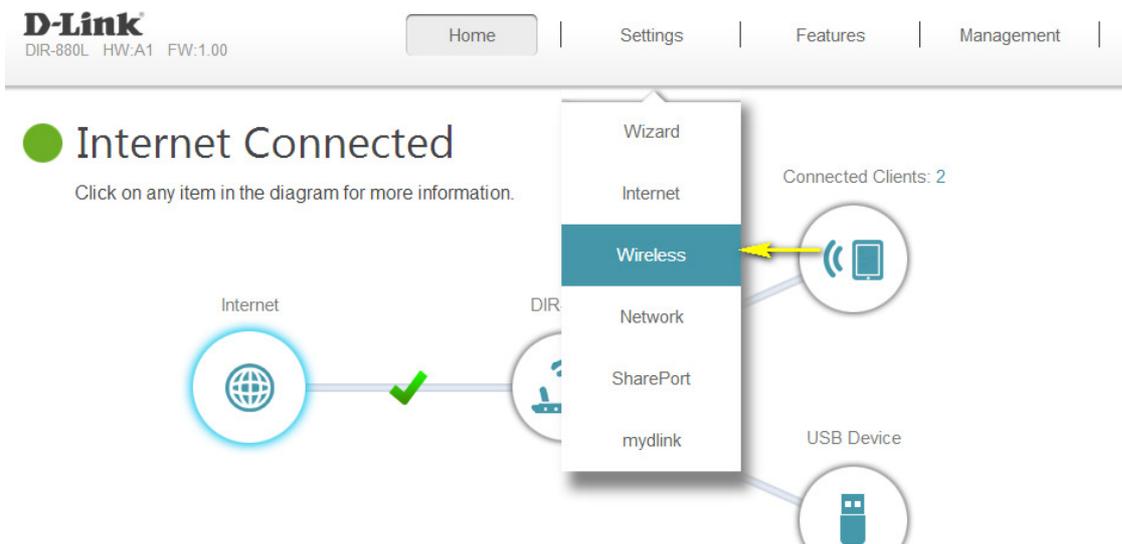

Step 4: In the **Password** field, specify the new wireless password for the desired wireless band. The password should be different for the 2.4 GHz and 5 GHz bands. Wireless clients will need this password in order to access your wireless network. This may require you to update your wireless clients' configuration.

USE THIS SECTION TO CONFIGURE THE WIRELESS SETTINGS FOR YOUR D-LINK ROUTER. PLEASE MAKE SURE THAT ANY CHANGES MADE IN THIS SECTION WILL NEED TO BE UPDATED ON YOUR WIRELESS DEVICE.

Settings >> Wireless [Guest Zone](#) **Save**

2.4GHz

Status: Enabled

Wi-Fi Name (SSID):

Password: ←

[Advanced Settings...](#)

5GHz

Status: Enabled

Wi-Fi Name (SSID):

Password: ←

[Advanced Settings...](#)

COPYRIGHT © 2013 D-Link

Step 5: Click **Save** to save your configuration.


Method 2

If you've registered your router with mydlink, you may log in to the mydlink web portal at www.mydlink.com to modify your router's settings.


Step 1: Go to <https://www.mydlink.com>



Step 2: Log in to mydlink with your existing mydlink account and password.

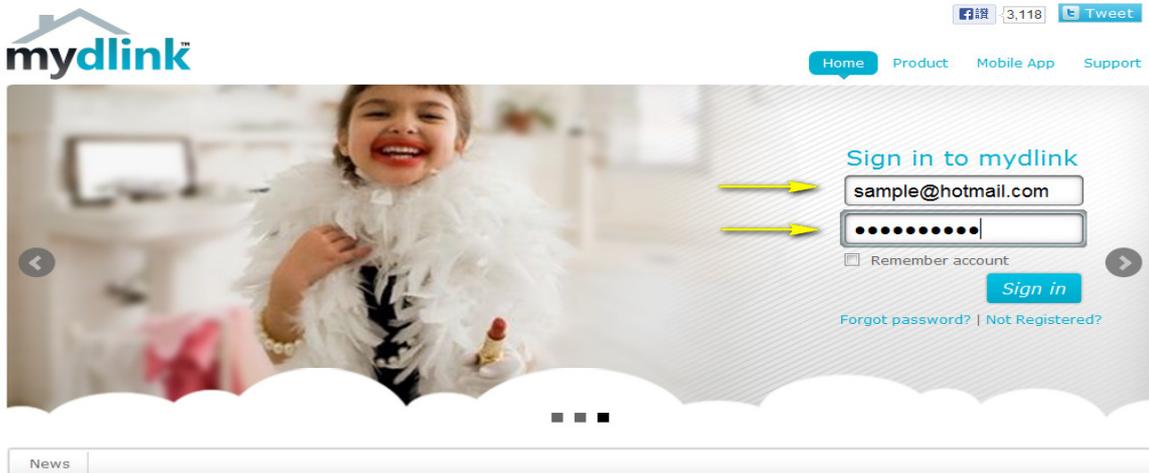

Step 3: Choose the router from My Devices. Go to Settings.

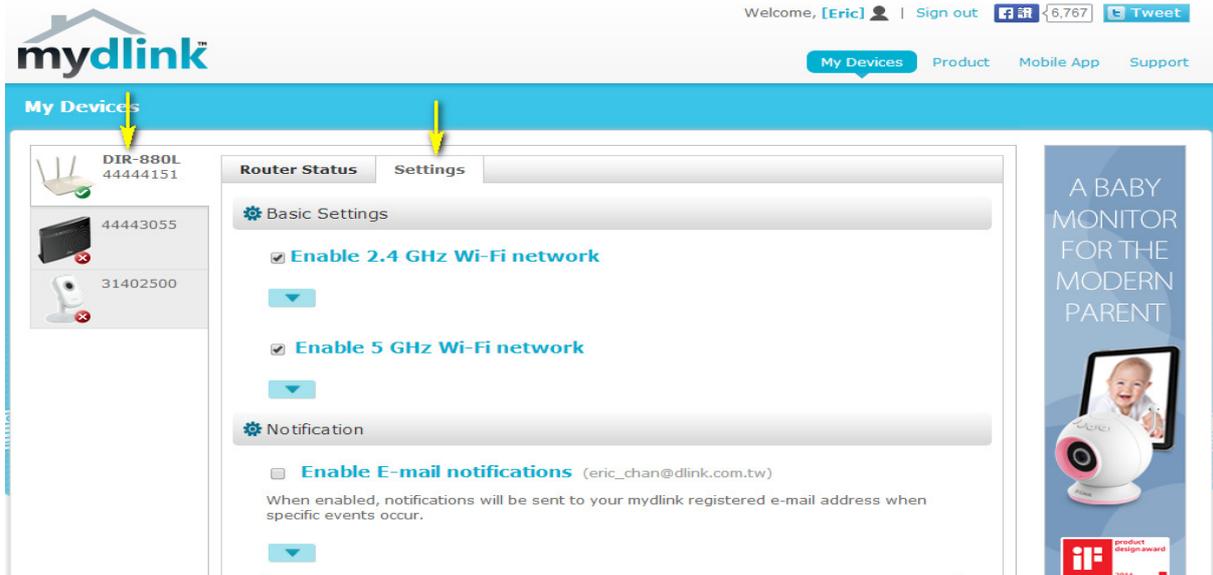

Step 4: Go to Basic Settings to modify your password. Check the **Show Password** to display the password on your screen. You can enter a new password in this field.

Basic Settings

Enable 2.4 GHz Wi-Fi network

▲

Wi-Fi Network Name(SSID):

Security Mode:

Wi-Fi Password: Show password

Enable 5 GHz Wi-Fi network

▲

Wi-Fi Network Name(SSID):

Security Mode:

Wi-Fi Password: Show password

Step 5: Click **Save** if you have made changes.

▼

Notify me when: New device connected
 Device failed to connect
 New firmware available

More Settings

Enable Remote Web Access

▼

You can remove your **DIR-880L** from your account by clicking the **Remove Device** button.

Step 6: Click **Yes** to confirm the new settings on the router. It will take at least 80 seconds to save the changes and reboot the router.

