

How to setup Singnet VLAN settings on DIR-890L?

(Please ensure your Firmware for DIR-890L is 1.01SG or higher)

Step 1: Open an Internet browser (such as Internet Explorer) and enter http://dlinkrouter, http://dlinkrouter.local or http://192.168.0.1 into the address bar



Step 2: Enter your login information. If you have not changed the default settings, the password field should be left blank. Click **Log In**.

D-Link	Model Name: DIR-890L	Hardware Version: A1	Firmware Version: 1.01SG	Language: English 🗸
	ſ			
		Admin Pas	ssword:	
			In	

To access your storage with SharePort Web Access, click here.

Step 3: Click the Settings tab at the top of the page and then click Internet from the menu list.



D-Link Technical Support Setup Procedure

Step 4: Click on Advanced Settings. Select Enable for VLAN.

Settings >> Internet		<u>IPv6</u>	Save
Device Mode:	Router Mode V		
My Internet Connection is:	Dynamic IP (DHCP)		
			Advanced Settings.
Host Name:	dlinkrouter		
Primary DNS Server:			
Secondary DNS Server:			
MTU:	Auto 🗸		
Mac Address Clone:	6C:72:20:3E:55:31	<< MAC Address	\sim
VLAN:	Enabled		
NAT:	Enabled		

Step 5: Set the SingNet VLAN setting show below.

VLAN BRIDGE					
	Internet VLan ID:	10	(2~4095)		
	IPTV VLan ID:	20	(2~4095)		
	VolP VLan ID:	30	(2~4095)		
	Interface			WAN Connecti	on
	LAN Port1			Internet	1
	LAN Port2			Internet	`
	LAN Port3			Internet	•
	LAN Port4			Internet	
	Wireless 2.4G:dlink-B91C				
Wireless 2.4G Guest Zone:dlink-guest				Internet	
Wireless 5G:dlink-B91C-5GHz				Internet	1
Wireless 5G Guest Zone:dlink-5GHz-guest				Internet	

Step 5: Click on Save

Settings >> Internet	<u>IPv6</u>	Save

--- END ----