

How to configure DDNS on DIR-895L?

Step

Step 1: Open an Internet browser (such as Internet Explorer) and enter http://dlinkrouter, http://dlinkrouter.local or http://192.168.0.1 into the address bar.



Step 2: Enter your login information. If you have not changed the default settings, the password field should be left blank. Click **Login**.



Step 3: Click the Features tab at the top of the page and then click Dynamic DNS from the menu list.

Features Dynamic DNS QoS Engine Quick VPN 4: a) Select Enable beside Enable Dynamic DNS: Quick VPN b) Select dyndns.com. C) Enter your DDNS information. d) Click on Save. Advanced >> Dynamic DNS Advanced >> Dynamic DNS Save	
QoS Engine Quick VPN 4: a) Select Enable beside Enable Dynamic DNS: b) Select dyndns.com. b) Select dyndns.com. c) Enter your DDNS information. d) Click on Save.	
4: a) Select Enable beside Enable Dynamic DNS: b) Select dyndns.com. c) Enter your DDNS information. d) Click on Save. Advanced >> Dynamic DNS Enable Dynamic DNS: Enabled	
Advanced >> Dynamic DNS	
Enable Dynamic DNS: Enabled	
Status: Disconnected	
Server Address: dyndns.com dyndns.com	
Host Name: ahhagh1208.dyndns.com	
User Name: ahhagh1208	
Password:	
Time Out: 24 hours	

--- END ----