


## How to Enable DMZ on DIR-895L?


**Step 1:** Open an Internet browser (such as Internet Explorer) and enter <http://dlinkrouter/>, <http://dlinkrouter.local> or <http://192.168.0.1> into the address bar.



**Step 2:** Enter your login information. If you have not changed the default settings, the password field should be left blank. Click **Login**.

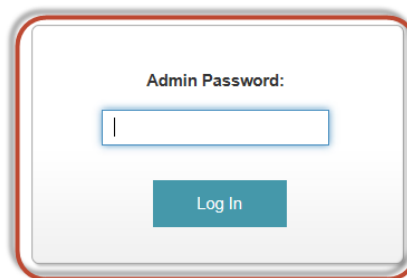


**Step 3:** Click the **Features** tab at the top of the page and then click **Firewall** from the menu list.

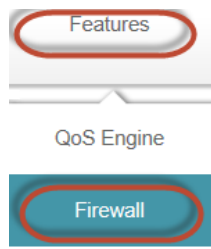

**Step 4:** a) Select **Enable** beside **Enable DMZ**:

b) Select **computer IP address** in the box beside **DMZ IP Address**

c) Click on **Save**.

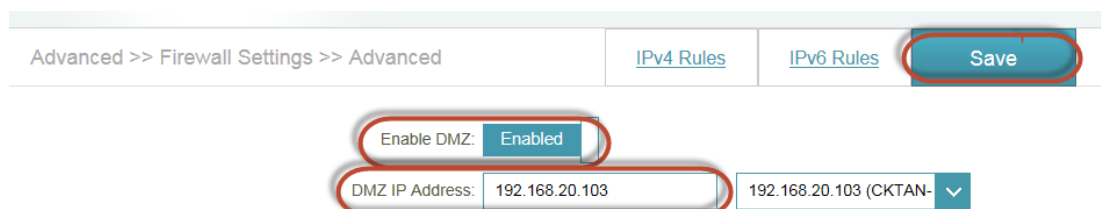

--- END ---