 



How to Enable Port Forwarding on DIR-895L?

Step 1: Open an Internet browser (such as Internet Explorer) and enter <http://dlinkrouter/>, <http://dlinkrouter.local> or <http://192.168.0.1> into the address bar.




Step 2: Enter your login information. If you have not changed the default settings, the password field should be left blank. Click **Login**.

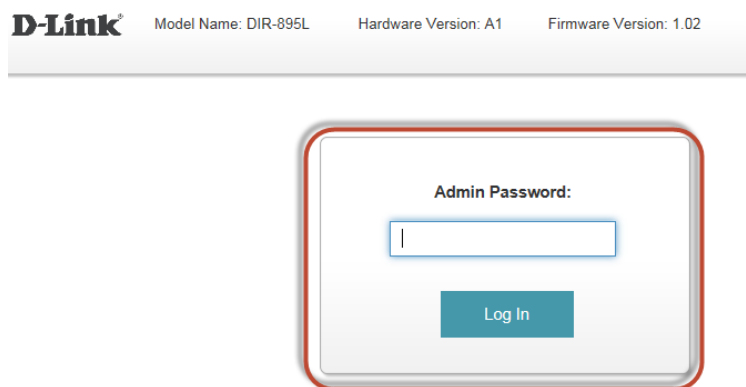

Step 3: Click the **Features** tab at the top of the page and then click **Port Forwarding** from the menu list.



Step 4: Click on **Add Rule**.

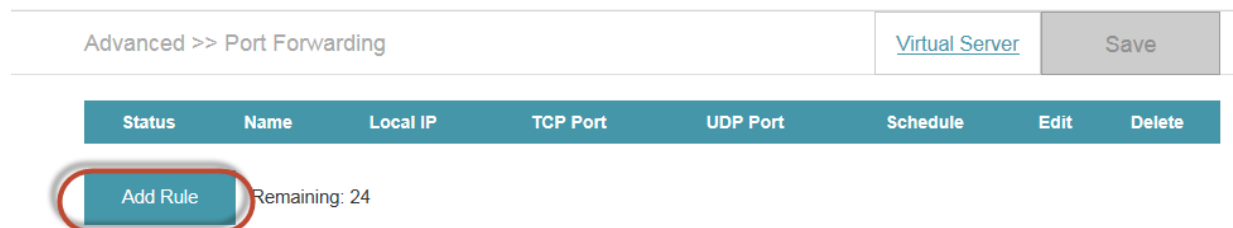

- Step 5 :** a) Enter a **Name** in the box beside **Name:**
- b) Select **computer IP address**.
- c) Enter the **Port number** in the box beside **TCP Port**.
- d) Click on **Apply**.

Create New Rule

Name: game1

Local IP: 192.168.20.103

TCP Port: 8005

UDP Port:

Schedule: Always Enable

Apply

- Step 6:** Click on **Save**

Advanced >> Port Forwarding

Virtual Server

Save

| Status | Name | Local IP | TCP Port | UDP Port | Schedule | Edit | Delete |
|-------------------------------------|-------|----------------|----------|----------|---------------|------|--------|
| <input checked="" type="checkbox"/> | game1 | 192.168.20.103 | 8005 | N/A | Always Enable | | |

Add Rule

Remaining: 23

--- END ---