

FAQ : How to Change the DSL Modulation Type on the DSL-2750E

Release date : 27/05/2013

Model Support : DSL-2750E


H/W: T1

S/W:1.04

D-Link® Technical Support Setup Procedure

การเปลี่ยน DSL Modulation บน DSL-2750E สามารถทำได้อย่างไร


ขั้นตอนที่ 1: เปิดเว็บเบราว์เซอร์ เช่น อินเทอร์เน็ตเอกซ์พลอเรอร์ , โมซิลลา , ไฟร์ฟอกซ์ , ซาฟารี และอื่น ๆ บนช่องของ Address ให้ใส่ค่าของ IP Address ของ DSL-2750E เป็น **192.168.1.1** และให้กดปุ่ม Enter บนคีย์บอร์ดของคุณ กรุณาใส่หมายเลข IP Address ใหม่ในกรณีที่ท่านได้ทำการเปลี่ยนแปลงค่า

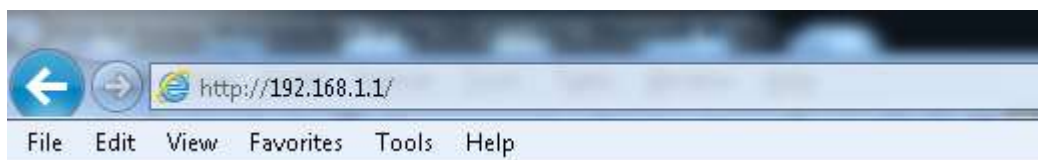

ขั้นตอนที่ 2 : หน้าจอเพื่อให้ทำการล็อกอินจะปรากฏขึ้น ให้ค่าของบัญชีผู้ใช้งาน (User Name) และรหัสผ่าน(Password) เป็น “**admin**” โดยใส่เป็นลักษณะอักษรตัวพิมพ์เล็ก และให้ทำการคลิกบนปุ่ม **Log In**

A screenshot of the login form on the D-Link DSL-2750E web interface. The form has an orange header with the word "LOGIN" in white. Below the header, it says "Input username and password". There are two input fields: "Username" and "Password". The "Username" field has a dropdown menu showing "admin" and a red text label "default username : admin". The "Password" field has a masked password "*****" and a red text label "default password : admin". Below these fields is a checkbox labeled "Remember my login info. on this computer". At the bottom of the form is a "Login" button.

ขั้นตอนที่ 3 : ตอนนี้ที่หน้าจอแสดงเว็บอินเตอร์เฟซของ DSL-2750E คลิกบนแท็บของ Advance เลือก Network Tools ที่อยู่ทางด้านซ้าย เลือก ADSL

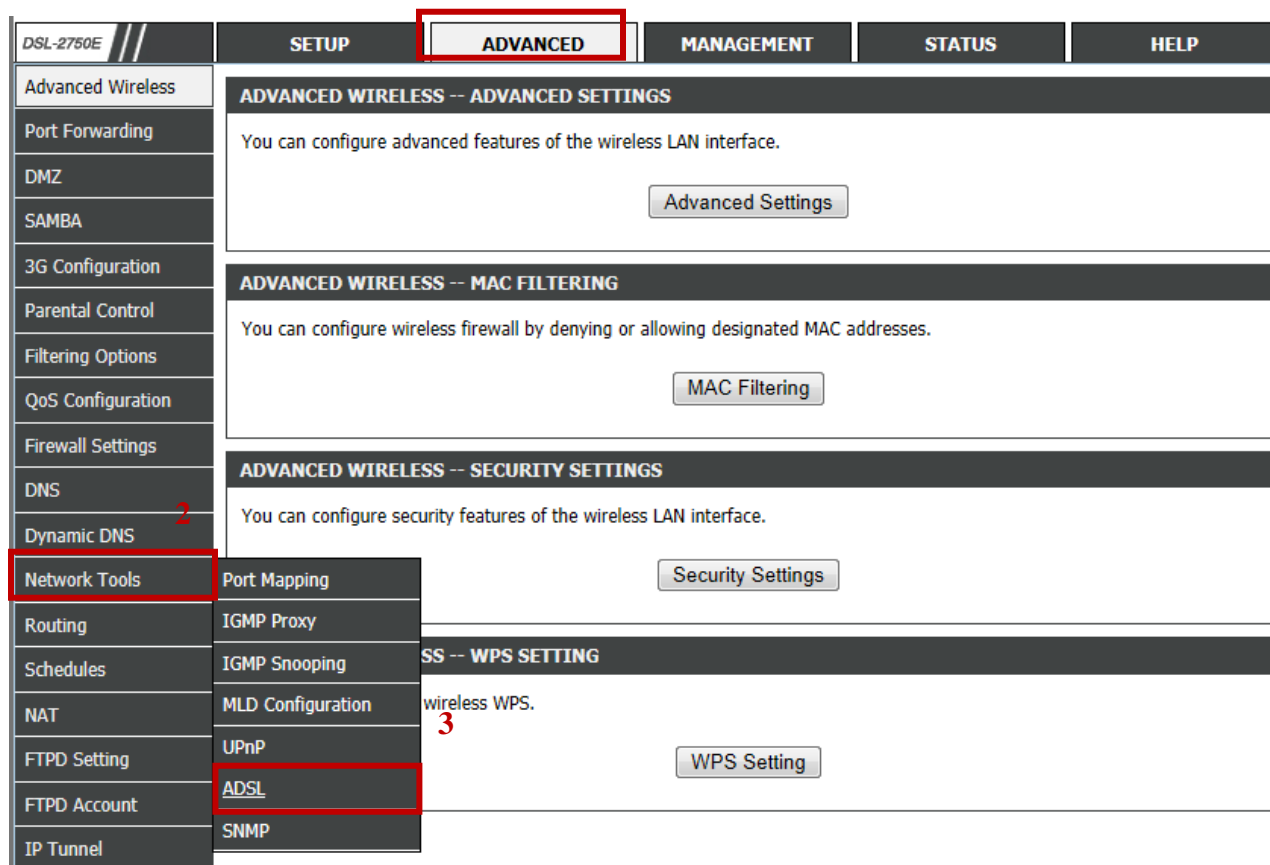

ขั้นตอนที่ 4 : ภายใต้ ADSL Settings เลือกชนิดของ DSL Modulation ที่ใช้ คลิกบนปุ่ม Apply

ADSL SETTINGS

☒ Enable DSL

☒ All ☐ Multimode


- ☒ G.Dmt Enabled
- ☒ G.Lite Enabled
- ☒ G.Inp Enabled
- ☒ T1.413 Enabled
- ☒ ADSL2 Enabled
- ☒ AnnexL Enabled
- ☒ ADSL2+ Enabled
- ☒ AnnexM Enabled
- Capability
- ☒ Bitswap Enabled
- ☒ SRA Enabled
- ☐ 1 bit Constellation Modulation Enable

Apply

D-Link® Technical Support Setup Procedure

How to Change the DSL Modulation Type on the DSL-2750E

Step 1: Open a web browser such as Internet Explorer, Mozilla Firefox, Safari and etc. On the Address bar, enter the LAN IP Address of the DSL-2750E. The default ip address is **192.168.1.1**. Press 'Enter' key on your keyboard. Please enter the new ip address of the router if you have changed it.

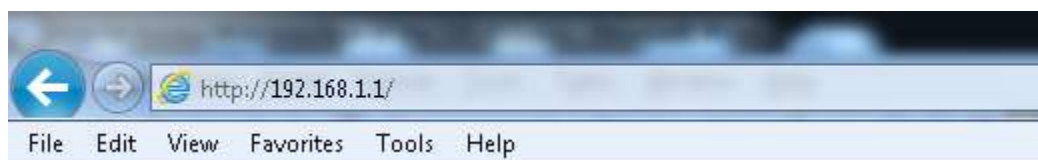

Step 2: A login screen will appear, type in the User Name and Password as "**admin**" all in lower case (This is the default setting, please enter the new username and password if you have changed it). Click on the **Log In** button.

A screenshot of the login form on the D-Link router's web interface. The form has an orange header with the word "LOGIN" in white. Below the header, the text "Input username and password" is displayed. The form contains two input fields: "Username" and "Password". The "Username" field has a dropdown menu showing "admin" and a red label "default username : admin". The "Password" field has a masked input (dots) and a red label "default password : admin". Below these fields is a checkbox labeled "Remember my login info. on this computer". At the bottom of the form is a "Login" button.

Step 3: You are now at the DSL-2750E web interface. Click on the **ADVANCED** tab, select **Network Tools** on the left. Select **ADSL**.

DSL-2750E	SETUP	ADVANCED 1	MANAGEMENT	STATUS	HELP
-----------	-------	-------------------	------------	--------	------

Advanced Wireless	ADVANCED WIRELESS -- ADVANCED SETTINGS				
Port Forwarding	You can configure advanced features of the wireless LAN interface.				
DMZ	<input type="button" value="Advanced Settings"/>				
SAMBA					
3G Configuration	ADVANCED WIRELESS -- MAC FILTERING				
Parental Control	You can configure wireless firewall by denying or allowing designated MAC addresses.				
Filtering Options	<input type="button" value="MAC Filtering"/>				
QoS Configuration					
Firewall Settings	ADVANCED WIRELESS -- SECURITY SETTINGS				
DNS	You can configure security features of the wireless LAN interface.				
Dynamic DNS	<input type="button" value="Security Settings"/>				
Network Tools 2					
Routing	Port Mapping				
Schedules	IGMP Proxy				
NAT	IGMP Snooping	WPS -- WPS SETTING			
FTPD Setting	MLD Configuration	wireless WPS.			
FTPD Account	UPnP	<input type="button" value="WPS Setting"/>			
IP Tunnel	ADSL 3				
	SNMP				

Step 4: Under **ADSL Settings**, select the DSL modulation type to use. Click on **Apply** button.

ADSL SETTINGS

☒ Enable DSL

☒ All ☐ Multimode

☒ G.Dmt Enabled

☒ G.Lite Enabled

☒ G.Inp Enabled

☒ T1.413 Enabled

☒ ADSL2 Enabled

☒ AnnexL Enabled

☒ ADSL2+ Enabled

☒ AnnexM Enabled

Capability

☒ Bitswap Enable

☒ SRA Enable

☐ 1 bit Constellation Modulation Enable

Apply

ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997

ภาษาไทย : จันทร์ ถึง สุกร์ เวลา 9.00 น. – 18.00 น.

Thai : Mon – Fri : Time 9.00 – 18.00.

ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนชดฤกษ์ และ วันธรรมดา หลัง 18.00 น.

English : Sat – Sun , Public Holiday and after 18.00 weekday.

Website : www.dlink.co.th

email: support@dlink.com.sg

Facebook : <http://www.facebook.com/DLinkThailandFans>

Nationwide D-Link Service Centres

Chiang Mai Branch 2/1 Moo 3, Chiang Mai-Lampang Road Tumbon Chiang Pueak, Amphoe Muang Chiang Mai Changwat Chiang Mai 50300, Thailand Tel : +66 (0) 5340-9482-6 Fax : +66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm	Phitsanulok Branch 117/7 Praongdam Road Tumbon Nai Musang, Amphoe Muang Phitsanulok Changwat Phitsanulok 65000, Thailand Tel : +66 (0) 5521-2323-5 Fax : +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to 6pm	
Cham Issara Tower II 3rd Floor, Cham Issara Tower II 2922/138 New Perchburi Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10320, Thailand Tel : +66 (0) 2308-2040 Fax : +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm	Pantip Plaza Branch 4th Fl. Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Thanon Petchburi, Khet Ratchathewi Bangkok 10400, Thailand Tel : +66 (0) 2656 6037 Tel : +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm	Rayong Branch 217/24 Sukhumvit Road Tumbon Noen Phra, Amphoe Muang Rayong Changwat Rayong 21000, Thailand Tel : +66 (0) 3880-0631-3 Fax : +66 (0) 3880-0634 Operating hours: Mondays till Sunday 9am to 6pm

<p>Surat Thani Branch 412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand</p> <p>Tel : +66 (0) 7721-7907-10 Fax : +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm</p>	<p>Phuket Branch 156/3 Phang Nga Road Tumbon Taratyai, Amphoe Mueang Phuket Changwat Phuket 83000, Thailand</p> <p>Tel : +66 (0) 7623-2906-9 Fax : +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm</p>	<p>Hat Yai Branch 48/106 Phadungpakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand</p> <p>Tel : +66 (0) 7435-4559-61 Fax : +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm</p>
--	---	--