

FAQ: How to configure USB Modem Dongle connection

Release date: 9/07/2015

Model Support: DSL-2877AL

H/W: A1 , A2

S/W: 1.00.10TH


# D-Link® Technical Support Setup Procedure

## การตั้งค่าเพื่อใช้งาน USB Modem Dongle ร่วมกับ DSL-2877AL สามารถทำได้อย่างไร

ขั้นตอนที่ 1 : เปิดเว็บเบราว์เซอร์ของคุณ แล้วพิมพ์ <http://192.168.1.1> ในช่องของ Address Bar



ชื่อผู้ใช้งานที่มาจากโรงงานคือ admin แล้วใส่รหัสผ่านของคุณ ในกรณีรหัสผ่านไม่ได้มีการเปลี่ยนแปลง ให้ใช้ค่าที่มาจากโรงงานเป็น admin แล้วคลิก Login

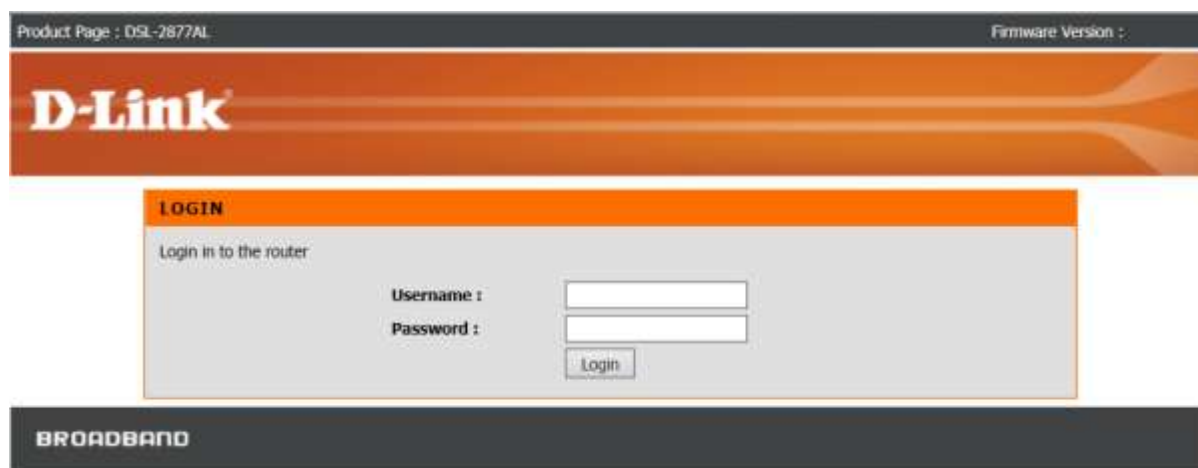


FAQ : How to configure USB Modem Dongle Connection

ขั้นตอนที่ 2 : คลิกบนแท็บของ Setup ที่อยู่ทางด้านบนแล้วคลิก 3G/4G Setup จากเมนูที่อยู่ทางด้านซ้ายมือ



ขั้นตอนที่ 3 : เลือก Status เป็น Activated


Note : คุณอาจตั้งค่าแบบ Manual ได้ตามข้อมูลของผู้ให้บริการ (ISP) : APN , User Name และรหัสผ่านใน ISP Settings

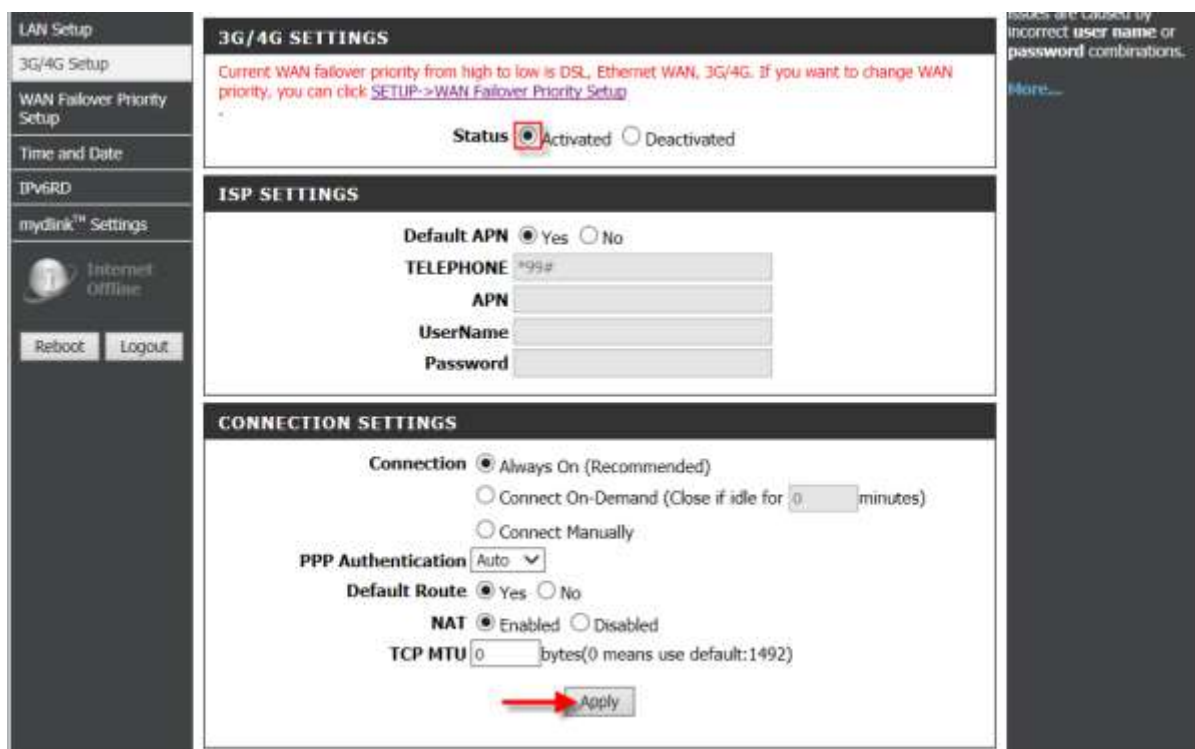


FAQ : How to configure USB Modem Dongle Connection

คลิก Apply เพื่อบันทึกการตั้งค่า

ขั้นตอนที่ 4 : คลิก Status เพื่อตรวจสอบการตั้งค่าของอุปกรณ์ USB Modem

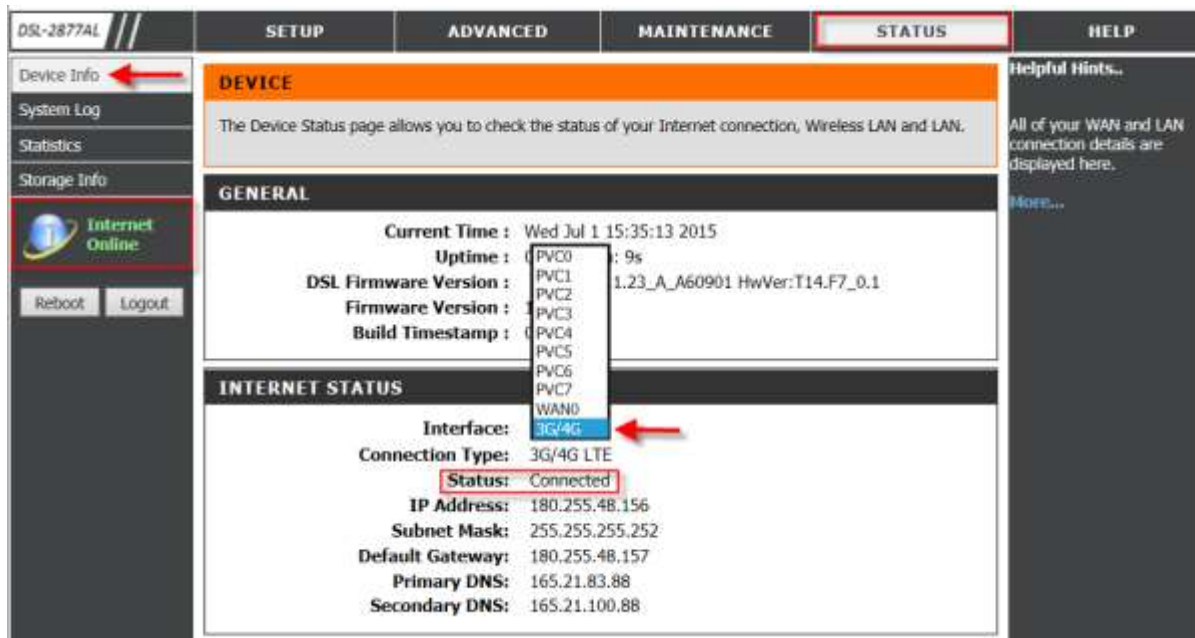

ถ้าการเชื่อมต่อสำเร็จจะแสดงเป็น Connected พร้อมกับได้รับ IP Address จากผู้ให้บริการ  
Active Internet Online จะแสดงสถานะเป็นสีเขียว

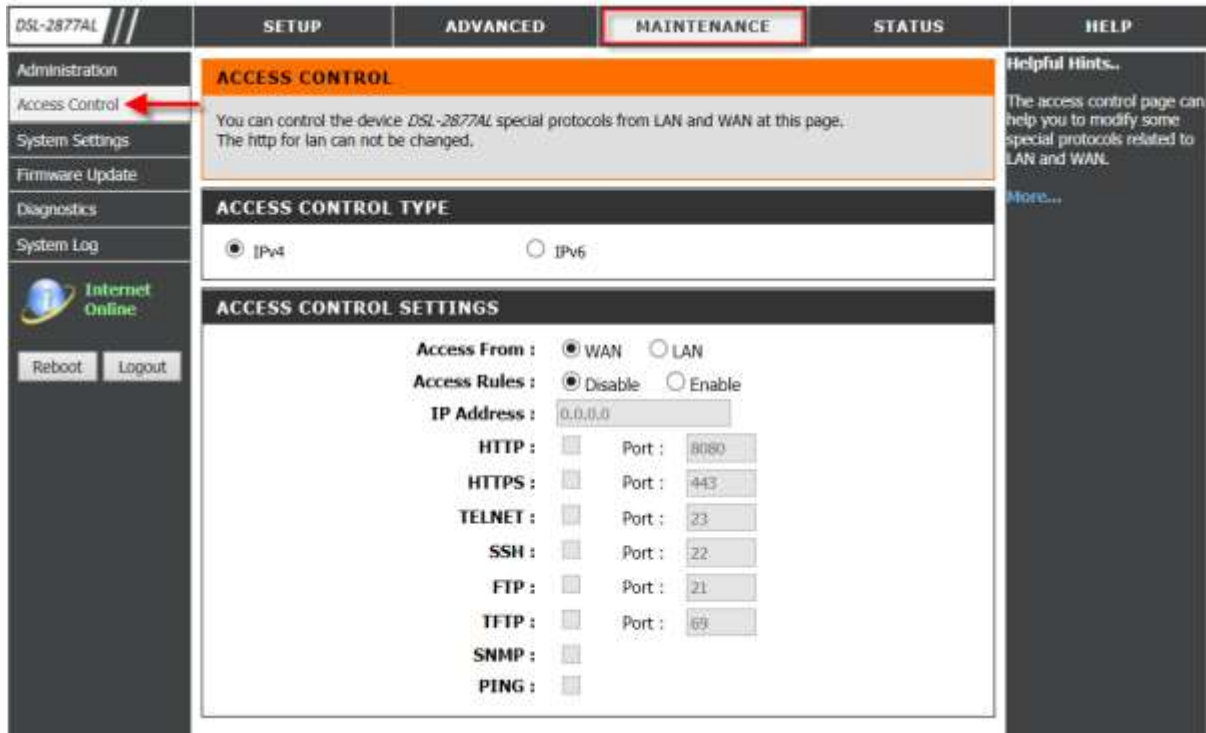

DSL-2877AL // SETUP ADVANCED MAINTENANCE STATUS HELP

Administration  
Access Control  
System Settings  
Firmware Update  
Diagnostics  
System Log

Internet Online  
Reboot Logout

### ACCESS CONTROL

You can control the device DSL-2877AL special protocols from LAN and WAN at this page.  
The http for lan can not be changed.

#### ACCESS CONTROL TYPE

IPv4  IPv6

#### ACCESS CONTROL SETTINGS

Access From :  WAN  LAN  
Access Rules :  Disable  Enable  
IP Address : 0.0.0.0

HTTP :	<input type="checkbox"/>	Port :	8080
HTTPS :	<input type="checkbox"/>	Port :	443
TELNET :	<input type="checkbox"/>	Port :	23
SSH :	<input type="checkbox"/>	Port :	22
FTP :	<input type="checkbox"/>	Port :	21
TFTP :	<input type="checkbox"/>	Port :	69
SNMP :	<input type="checkbox"/>		
PING :	<input type="checkbox"/>		

Helpful Hints...  
The access control page can help you to modify some special protocols related to LAN and WAN.  
More...

 
FAQ : How to configure USB Modem Dongle Connection

# D-Link® Technical Support Setup Procedure

---

- **How do I configure USB Modem Dongle connection to my router?**

**Step 1:** Open your Internet browser and enter <http://192.168.1.1> into the address bar.

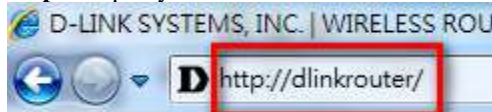

Enter your login information. If you have not changed the default settings, the

- **Username** field is Admin and
- **Password** field should Admin. Click **Login**.



FAQ : How to configure USB Modem Dongle Connection

**Step 2:** Click the **Setup** tab at the top of the page and then click **3G/4G Setup** from the menu on the left-hand side.

DSL-2877AL // **SETUP** ADVANCED MAINTENANCE STATUS HELP

Wizard  
Internet Setup  
Wireless Setup  
LAN Setup  
**3G/4G Setup**  
WAN Failover Priority Setup  
Time and Date  
IPv6RD  
mydlink™ Settings  
Internet Offline  
Reboot Logout

**3G/4G NETWORK**  
This section allows you to configure the 3g network settings of your router. Please note that this section is optional and you should not need to change any of the settings here to get your network up and running.

**3G/4G SETTINGS**  
Current WAN failover priority from high to low is DSL, Ethernet WAN, 3G/4G. If you want to change WAN priority, you can click [SETUP->WAN Failover Priority Setup](#)  
Status  Activated  Deactivated

**ISP SETTINGS**  
Default APN  Yes  No  
TELEPHONE   
APN   
UserName   
Password

Helpful Hints..  
Note that the **user name** and **password** are case-sensitive. Most connection issues are caused by incorrect **user name** or **password** combinations.  
More...

**Step 3:** Select status as **Activated**.

**Note:** You may need to refer to your Service Provider to manually configure **APN**, **User Name** and **Password** in ISP Settings.

LAN Setup  
**3G/4G Setup**  
WAN Failover Priority Setup  
Time and Date  
IPv6RD  
mydlink™ Settings  
Internet Offline  
Reboot Logout

**3G/4G SETTINGS**  
Current WAN failover priority from high to low is DSL, Ethernet WAN, 3G/4G. If you want to change WAN priority, you can click [SETUP->WAN Failover Priority Setup](#)  
Status  Activated  Deactivated

**ISP SETTINGS**  
Default APN  Yes  No  
TELEPHONE   
APN   
UserName   
Password

**CONNECTION SETTINGS**  
Connection  Always On (Recommended)  
 Connect On-Demand (Close if idle for  minutes)  
 Connect Manually  
PPP Authentication   
Default Route  Yes  No  
NAT  Enabled  Disabled  
TCP MTU  bytes(0 means use default:1492)

Issues are caused by incorrect **user name** or **password** combinations.  
More...

Click **Apply** to save the current configuration.

**Step 4:** Click **Status** to verify connection status of the USB Modem Device.

FAQ : How to configure USB Modem Dongle Connection

The screenshot shows the web interface for a D-Link DSL-2877AL device. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE, STATUS (highlighted), and HELP. On the left sidebar, there are links for Device Info (with a red arrow pointing to it), System Log, Statistics, Storage Info, and Internet Online (with a green status indicator). Below these are Reboot and Logout buttons. The main content area is titled 'DEVICE' and contains a message: 'The Device Status page allows you to check the status of your Internet connection, Wireless LAN and LAN.' Below this is a 'GENERAL' section with fields for Current Time (Wed Jul 1 15:35:13 2015), Uptime (9s), DSL Firmware Version (1.23\_A\_A60901), Firmware Version (HwVer:T14.F7\_0.1), and Build Timestamp. The 'INTERNET STATUS' section shows Interface: 3G/4G (with a dropdown menu open showing options PVC0 through WAND and a red arrow pointing to 3G/4G), Connection Type: 3G/4G LTE, Status: Connected (highlighted with a red box), IP Address: 180.255.48.156, Subnet Mask: 255.255.255.252, Default Gateway: 180.255.48.157, Primary DNS: 165.21.83.88, and Secondary DNS: 165.21.100.88. On the right, there is a 'Helpful Hints...' section with text about WAN and LAN connection details and a 'More...' link.

Successful connection status shows **Connected** status with a valid SIM card and IP address assigned from Internet Service Provider.

Active **Internet Online** status is being displayed in green.

FAQ : How to configure USB Modem Dongle Connection



## ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997

ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น.

Thai : Mon – Fri : Time 9.00 – 18.00.

ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนซ์ตฤกษ์ และ วันธรรมดา หลัง 18.00 น.

English : Sat – Sun , Public Holiday and after 18.00 weekday.

Website : [www.dlink.co.th](http://www.dlink.co.th)

email: [support@dlink.com.sg](mailto:support@dlink.com.sg)

Facebook : <http://www.facebook.com/DLinkThailandFans>

## Nationwide D-Link Service Centres :

<p><b>Cham Issara Tower II</b> 3rd Floor, Cham Issara Tower II 2922/138 New Perchburi Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10320, Thailand</p> <p>Tel : +66 (0) 2308-2040 Fax : +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm</p>	<p><b>Pantip Plaza Branch</b> 4th Fl. Pantip Plaza 604/2 Petchburi Road Room 439-440 Kwang Thanon Petchburi, Khet Ratchathewi Bangkok 10400, Thailand Tel : +66 (0) 2656 6037 Tel : +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm</p>	<p><b>Rayong Branch</b> 217/24 Sukhumvit Road Tumbon Noen Phra, Amphoe Mueang Rayong Changwat Rayong 21000, Thailand</p> <p>Tel : +66 (0) 3880-0631-3 Fax : +66 (0) 3880-0634 Operating hours: Mondays till Sunday 9am to 6pm</p>
<p><b>Surat Thani Branch</b> 412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand</p> <p>Tel : +66 (0) 7721-7907-10 Fax : +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm</p>	<p><b>Phuket Branch</b> 156/3 Phang Nga Road Tumbon Taratyai, Amphoe Mueang Phuket Changwat Phuket 83000, Thailand</p> <p>Tel : +66 (0) 7623-2906-9 Fax : +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm</p>	<p><b>Hat Yai Branch</b> 48/106 Phadungpakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand</p> <p>Tel : +66 (0) 7435-4559-61 Fax : +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm</p>
<p><b>Chiang Mai Branch</b> 2/1 Moo 3, Chiang Mai-Lampang Road Tumbon Chang Pueak, Amphoe Mueang Chiang Mai Changwat Chiang Mai 50300, Thailand</p> <p>Tel : +66 (0) 5340-9482-6 Fax : +66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm</p>	<p><b>Phitsanulok Branch</b> 117/7 Praongdam Road Tumbon Nai Musang, Amphoe Mueang Phitsanulok Changwat Phitsanulok 65000, Thailand</p> <p>Tel : +66 (0) 5521-2323-5 Fax : +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to 6pm</p>	

FAQ : How to configure USB Modem Dongle Connection