

FAQ: How to enable Remote WAN port

Release date: 9/07/2015

Model Support: DSL-2877AL

H/W: A1, A2

S/W: 1.00.10TH



การเปิดใช้งานเพื่อให้สามารถ remote ผ่าน WAN Ports สามารถทำได้อย่างไร

ขั้นตอนที่ 1 : เปิดเวบบราวเซอร์ของกุณ แล้วพิมพ์ <u>http://192.168.1.1</u> ในช่องของ Address Bar

2 6 Lu (10216011	
nπp://192.108.1.1	

ชื่อผู้ใช้งานที่มาจากโรงงานคือ admin แล้วใส่รหัสผ่านของคุณ ในกรณีรหัสผ่านไม่ได้มีการเปลี่ยนแปลง ให้ใช้ ค่าที่มาจากโรงงานเป็น admin แล้วคลิ๊ก Login

Product Page : DSL-2877AL	Firmware Version :
D-Link	
LOGIN	
Login in to the router	
Username :	
Password :	
BROADBAND	

ขั้นตอนที่ 2 : คลิ๊กบนแท็บของ Advanced ที่อยู่ทางค้านบนแล้วคลิ๊ก Access Control จากมนูที่อยู่ทางค้าน ซ้ายมือ



FAQ : How to enable Remote WAN ports

-3-

ขั้นตอนที่ 3 : ตรวจสอบการตั้งค่า ตามรายละเอียดด้านล่าง

- เลือก Access From WAN (ค่า Default)
- เถือ Access Rules เป็น Enable
- ใส่ IP Address เป็น 0.0.0.0 (อนุญาติทุก ๆ WAN IP Address มายังเราเตอร์ได้)
- ตรวจสอบ WAN Service และพอร์ตว่า ถูกต้องหรือไม่ แล้วใส่ค่าดังกล่าว

D5L-2877AL	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Administration	ACCESS CONTRO	ii.			Helpful Hints
Access Control	You can control the de	vice /05/-28274/ special proh	wols from LAN and WAN at this or	NDP	The access control page can bein you to modify some
System Settings	The http for lan can no	t be changed.			special protocols related to
Firmware Update					DAN GIRL WARE
Diagnostics	ACCESS CONTRO	IL TYPE			Morean
System Log	IPv4	O IPv	6		
	ACCESS CONTRO	E SETTINGS			
Reboot Logout		Access From : Access Rules : IP Address : HTTP : HTTP : TELNET : SSH : TFTP : SNMP : PING :	Apply		

คลิ๊ก Apply

Note : ตรวจสอบให้แน่ใจว่า ได้เลือก WAN Service และหมายเลขพอร์ตในปัจจุบันไม่ได้ถูกบล๊อคจากผู้ ให้บริการอินเตอร์เน็ต (ISP) คุณสามารถใช้หมายเลขพอร์ตอื่น ๆ ถ้าหมายเลขพอร์ตของ WAN ที่มาจากโรงงาน ถูกบล๊อค

ขั้นตอนที่ 4 : ตรวจสอบให้แน่ใจว่า WAN Port Information สามารถทำงานได้

ping.eu Online Ping, Traceroute, DNS lookup, W Network mask calculator, Country by D	vHOIS, Port check, Reverse lookup, Proxy checke P, Unit converter	r, Bandwidth meter, Network calculator,
Your IP is 219.75.26.189	and your proxy address is 220.255.1.	167
Online service Port check	enacified ID	
IP address or host name: 219.75.26.189	Port number: 8080	Go
219.75.26.189:8080 port is open Other functions: Ping Traceroute DNS lookup WHOIS Port check Network calculator Network mask calculator Country	k Reverse lookup Proxy checker Ban (by IP Unit converter	dwidth meter 1

คุณอาจใช้อุปกรณ์เคลื่อนที่ (Mobile Device) ในการเข้าถึง IP จริง (Public IP) (ตัวอย่าง <u>http://ipaddress:port) คัง</u> แสดงภาพด้านล่าง

21	9.75 × +	÷	
\leftarrow	→ C ® http://219.75.26.189:8080/cgi-bin/login.asp?t=659 ☆	Q, 🛛	_
	Product Page DBL 2877AL Firmware Version		ш.
	D-Link		
	LOGIN Login in to the router Password : Login		
	BROADBAND Copyright ID 2013 2014 D Law Bystems, Inc		¢
			>



How do I enable Remote WAN ports access on my router?

Step 1: Open your Internet browser and enter http://192.168.1.1 into the address bar.

Login

BROADBAND

D5L-2877AL	SETUP	ADVANCED		MAI	NTENANCE	STATUS	HELP
Administration	ACCESS CONTRO	n.					Helpful Hints
Access Control	You can control the de	ura DEL 38774/ morial i	austocolo	them 1 M	i and WAN at this of	100	The access control page car help you to modify some
System Settings	The fittp for lan can no	t be changed.	protocols	1011.59	and more at this p	iyei	special protocols related to
Firmware Update							LAN and WAN.
Diagnostics	ACCESS CONTRO	OL TYPE					Morea
System Log	IPv4	0	IPv6				
	ACCESS CONTRO	L SETTINGS					
		Access From :	• WA	N OI	AN		
Report Logout		Access Rules :	Disa	able (Enable		
		IP Address :	0.0.0.0				
		HTTP :	100	Port :	8080		
		HTTPS :	103	Port :	443		
		TELNET :	103	Port :	23		
		SSH :	商	Port :	22		
		FTP :		Port :	21		
		TFTP :	111	Port :	69		
		SNMP :	101				
		PING :	111				

Step 2: Click on the Advanced Tab at the top and then click Access Control on the left side as shown.

Step 3: Ensure the following information has been correctly enabled/entered.

- Select Access Rules as Enable.
- Enter IP Address as 0.0.0.0(Allow all WAN IP addresses to access Router).
- Check and ensure desired WAN service and Port is correctly selected and entered as shown.

DSL-2877AL	SETUP	ADVANCED	MAI	NTENANCE	STATUS	HELP
Administration	ACCESS CONTROL					Helpful Hints.
Access Control	You can control the devic	e OSI-28774/ enerial pro	occile from EA	s and WAN at this n	ana	The access control page can help you to modify some
System Settings	The http for lan can not t	e changed.	20005 11001 220	rand mental ons p	oye.	special protocols related to
Firmware Update		and the second				LAN and WAN.
Diagnostics	ACCESS CONTROL	TYPE				Moreau
System Log	IPv4	O IPA	6			
	ACCESS CONTROL	SETTINGS				
Reboot Logout		Access From : 0 Access Rules : 0 IP Address : 0. HTTP : 9	Desable	AN Enable		
		TEINET .	I POIL:	442		
		ELNET: L	I Port:	42		
		55H: L	i Port:	2.2		
		FIP: L	Port:	21		
		IFIP: L	I Port:	69		
		SNMP :	1			
		PING:	4			

Click **Apply** as shown.

Note: Please ensure that the selected **WAN Service** and current **Port Number** has not been blocked by the Internet Service Provider. You may enter a different **Port Number** if the **default** WAN **Port Number** is blocked.

Step 4: Ensure that the current WAN Port information is active.

Your IP is 219.75.26.18	9 and your proxy address is 220.255.1.167
Inline service Port check	
	an enabled ID
Port check – Tests if port is opened	on specified IP

You may use a mobile device to browse to the **Public IP**(Eg. http://**ipaddress**:port) as shown.

219.7	5 × +		11
$\leftarrow \rightarrow$	C @ http://2	19.75.26.189:8080/cgi-bin/logi	in.asp?t=659 🏠 🔍 📮
P	roduct Page OSL 3877AL		Firmware Vession
	D-Link		
)	LOGIN		
		Veemane : Passacod : Logn	
	BROADBAND		
		Oxpyright © 2013-2014 D Lone Bysteme, fee	

ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997 ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น. Thai : Mon – Fri : Time 9.00 – 18.00. ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนขัตฤกษ์ และ วันธรรมดา หลัง 18.00 น. English : Sat – Sun , Public Holiday and after 18.00 weekday. Website : <u>www.dlink.co.th</u> email: <u>support@dlink.com.sg</u> Facebook : <u>http://www.facebook.com/DLinkThailandFans</u>

Nationwide D-Link Service Centres :

Cham Issara Tower II

3rd Floor, Cham Issara Tower II 2922/138 New Perchburi Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10328, Thailand

Tel : +66 (0) 2308-2040 Fax +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm

Surat Thani Branch

412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand

Tel : +66 (0) 7721-7907-10 Fax : +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm

Chang Mai Branch

2/1 Moo 3, Chiang Mail ampang Road Tumbon Chang Pueak, Amphoe Mueang Chiang Mal Tumbon Nal Mueang, Changwat Chiang Mai 50300, Thailand

Tel : +66 (0) 5340-9452-6 Fax | +66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm

Panto Plaza Branch 4th FI. Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Thanon Petchburl, Rhet Ratchathewi Bangkok 10400, Thailand Tel : +66 (0) 2656 6037 Tel: +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm

Phuket Branch

156/3 Phang Nga Road Tumbon Taratyai, Amphoe Mueang Phuket Changwat Phuket 83000, Thailand

Tel : +66 (0) 7623-2906-9 Fax: +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm

Phitsanulok Branch

117/7 Praongdam Road Amphoe Mueang Philtsanulok Changwat Phitsanulok 65000, Thailand

Tel : +66 (0) 5521-2323-5 Fax: +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to 6pm

Rayong Branch

217/24 Sukhumvit Road Tumbon Noen Phra, Amphoe Mueang Rayong Changwat Rayong 21000, Thailand

Tel:+66 (0) 3890-0631-3 Fax : +66 (0) 3990-0634 Operating hours: Mondays till Sunday 9am to 6pm

Hat Yai Branch

48/106 Phadunopakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand

Tel : +66 (0) 7435-4559-61 Fax: +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm