

FAQ: How to perform firmware upgrade

Release date: 9/07/2015

Model Support: DMG-112A

H/W: A1, A2

S/W: 1.00.10TH



การอัพเกรด firmware (DMG-112A) สามารถทำได้อย่างไร

ขั้นตอนที่ 1 : เปิดเวบบราวเซอร์ของคุณ แล้วพิมพ์ <u>http://192.168.1.1</u> ในช่องของ Address Bar

ชื่อผู้ใช้งานที่มาจากโรงงานคือ admin แล้วใส่รหัสผ่านของคุณ ในกรณีรหัสผ่านไม่ได้มีการเปลี่ยนแปลง ให้ใช้ ค่าที่มาจากโรงงานเป็น admin แล้วคลิ๊ก Login

Product Page : DSL-2877AL		Firmware Version :
D-Link		
LOGIN		
Login in to the router		
	Username :	
	Login	
вконовнио		

FAQ : How to perform firmware upgrade of DMG-112A

-2-

ขั้นตอนที่ 2 : คลิ๊กบนแท็บของ Setup ที่อยู่ทางค้านบนแล้วคลิ๊ก LAN Setup จากมนูที่อยู่ทางค้านซ้ายมือ

D51-2877AL	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	LOCAL NETWORK	¢			Helpful Hints
Internet Setup	This section allows you	to configure the local netwo	rk settings of your router. Please r	note that this section is	These are the IP settings of
Wireless Setup	optional and you should	I not need to change any of	the settings here to get your netw	ork up and running.	Device. These settings may
LAN Setup	ROUTER SETTIN	GS		E	settings. You may change
3G/4G Setup	Use this section to confi	ioure the local network setti	ans of your matter. The IP Address	that is configured here	needed.
WAN Failover Priority Setup	is the IP Address that y Address here, you may	ou use to access the Web-ba need to adjust your PC's ne	ased management interface. If you twork settings to access the netwo	i change the IP rk again.	The LAN IP address is private to your internal
Time and Date		2.4 5.0 			network and cannot be seen on the Internet.
IPv6RD		LAN Group : Group	1 🗸		If you already have a DHCP
mydlink <sup>th</sup> Settings	Inte	rface Grouping			server on your network or are using static IP
an Internet	1000	nace crouping			addresses on all the devices
Online		LAN Interfaces	ADD	_ 1	Disable DHCP Server to
		port1	×.		disable this feature.
Reboot Logout		port2	×		Hore
		most3	- G2E		

ขั้นตอนที่ 3 : ตรวจสอบ IP Address ของ DMG-112A ที่ได้มาจาก DSL-2877AL

Host Name	IP Address	MAC Address	Status
	192.168.1.4 🗸	Manual Config V	Static 🗸
Kelvin-PC	192.168.1.2	34:E6:D7:0A:0A:6D	Auto
Kelvin-PC	192.168.1.3	82:19:34:51:1E:5F	Auto
DMG-112A- EE2280E45255	192.168.1.6	EE:22:80:E4:52:55	Auto

Product Page :	DMG-112A			Firmware Version 7	Build Timestamp :	
D-L	ink					
	and a second					
	LOGIN					
	Login in to the repeater			1		
		Password :				
			Logim			
BROAD	8900					

้ขั้นตอนที่ 4 : เปิดเวบบราวเซอร์อีกหน้าต่างหนึ่ง แล้วพิมพ์ IP Address ที่ได้มาจากขั้นตอนก่อนหน้านี้

ชื่อผู้ใช้งานที่มาจากโรงงานคือ admin

รหัสผ่านของอุปกรณ์ จะถูกสร้างโดยการใช้ One-Touch App แล้ว Login

ขั้นตอนที่ 5 : คลิ๊กบนแท็บของ Maintenance ที่อยู่ทางค้านบนแล้วคลิ๊ก Firmware Update จากมนูที่อยู่ทางค้าน ซ้ายมือ



เลือก Browse เพื่อระบุตำแหน่งของ image file แล้วคลิ๊ก Update เพื่อเริ่มต้นการ update



### How do I perform firmware upgrade of DMG-112A?

**Note:** Ensure that you have successfully connected the DMG-112A and DSL-2877AL. Please see guide on One-Touch App.

Step 1: Open your Internet browser and enter http://192.168.1.1 into the address bar.

(=) (=) (= http://192.168.1.1

Enter your login information. If you have not changed the default settings, the

- Username field is Admin and
- **Password** field should Admin. Click **Login**.

-

Product Page : DSL-2877AL			Firmware Version :
D-Link			
LOGIN			
Login in to the router	Username : Password :	Login	
BROADBAND			

**Step 2:** Click the **Setup** tab at the top of the page and then click **LAN Setup** from the menu on the left-hand side. **Scroll down to DHCP Table**.

FAQ : How to perform firmware upgrade of DMG-112A

DSL-2877AL	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	LOCAL NETWORK	ł			Helpful Hints
Internet Setup	This section allows you	to configure the local netwo	rk settings of your router. Please r	note that this section is	These are the IP settings of the LAN interface for the
Wireless Setup	optional and you should	not need to change any of	the settings here to get your netw	work up and running.	Device. These settings may
LAN Setup 🔶	ROUTER SETTING	s			settings. You may change
3G/4G Setup	then this section to comb	ours the local natural: estin	one of your courter. The ID Address	that is configured here	the LAN IP address if needed.
WAN Failover Priority Setup	is the IP Address that yo Address here, you may	gure the local network second ou use to access the Web-ba need to adjust your PC's net	ased management interface. If you twork settings to access the netwo	u change the IP ork again.	The LAN IP address is private to your internal
Time and Date		201 - 10 - 100/10			network and cannot be seen on the Internet.
IPv6RD		LAN Group : Group	1 🗸		If you already have a DHC
mydlink <sup>74</sup> Settings	Inter	face Grouping			server on your network or are using static IP addresses on all the device
Online		LAN Interfaces	ADD		on your network, click on Disable DHCP Server to
		port1	s.	- · · · · · · · · · · · · · · · · · · ·	disable this feature.
Reboot Logout		port2	1		Hore
		mont?	- C.P.		

Step 3: Please find the DMG-112A and its corresponding IP Address assigned from DSL-2877AL.

DHCP TABLE			
Host Name	IP Address	MAC Address	Status
	192.168.1.4 🗸	Manual Config V	Static 🗸
Kelvin-PC	192.168.1.2	34:E6:D7:0A:0A:6D	Auto
Kelvin-PC	192.168.1.3	82:19:34:51:1E:5F	Auto
DMG-112A- EE2280E45255	192.168.1.6	EE:22:80:E4:52:55	Auto
		Apply	

Step 4: Launch a new Browser Window. Please key in the IP Address(Eg. http://ipaddress) from the previous step.

Product Page : DMG-112A		Firms	sre Version F Build	Timestamp :
D-Link				
front front which in the				
LOGIN				
Login in to the repeat	er			
	Password :			
		Logim		

Enter your login information. If you have not changed the default settings, the

- Username field is Admin and
- **Password** is the device password created using **One-Touch App**. Click **Login**.

**Step 5:** Click on **Maintenance** tab at the top of the page and then click **Firmware Update** from the menu on the left-hand side.

Product Page : DMG-11	2A	Firmware Version :	Build Timestamp :
D-Lin	k		
DMG-112A	SETUP	MAINTENANCE	HELP
Administration System Settings Firmware Update Device Info Station Ust Reboot Logout	FIRMWARE UPGRADE Step 1: Obtain an updated software image file Step 2: Enter the path to the image file loca image file. Step 3: Click the "Update" button once to u Note: The update process takes about 1 mi	file from your ISP. Ition in the box below or click the "Browse" button to locate the pload the new image file. nutes to complete, and your Router will reboot.	Helpful Hints Firmware updates are released periodically to improve the functionality of your router and also to add features. If your run into a problem with a specific feature of the router, check our support site by clicking on the link and see if an updated firmware is
	FIRMWARE UPDATE	Browse	Hore_

Browse to the location of the folder where the firmware is stored. Click Update start flashing.

# ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997 ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น. Thai : Mon – Fri : Time 9.00 – 18.00. ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนขัตฤกษ์ และ วันธรรมดา หลัง 18.00 น. English : Sat – Sun , Public Holiday and after 18.00 weekday. Website : <u>www.dlink.co.th</u> email: <u>support@dlink.com.sg</u> Facebook : <u>http://www.facebook.com/DLinkThailandFans</u>

## **Nationwide D-Link Service Centres :**

#### Cham Issara Tower II

3rd Floor, Charn Issara Tower II 2922/138 New Perchburi Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10328, Thailand

Tel : +66 (0) 2308-2040 Fax +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm

#### Surat Thani Branch

412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand

Tel : +66 (0) 7721-7907-10 Fax : +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm

#### Chang Ma Branch

2/1 Moo 3, Chiang MaH ampang Road Tumbon Chang Pueak, Amphoe Mueang Chiang Mal Tumbon Nal Mueang, Changwat Chiang Mai 50300, Thailand

Tel : +66 (0) 5340-9452-6 Fax 1+66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm

#### Panto Plaza Branch

4th FL Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Thanon Petchburl, Rhet Ratchathewi Bangkok 10400, Thailand Tel 1 466 (0) 2656 6037 Tel: +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm

Phuket Branch 156/3 Phang Nga Road Tumbon Taratyai, Amphoe Mueang Phuket Changwat Phuket 83000, Thailand

Tel : +66 (0) 7623-2906-9 Fax: +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm

#### Phitsanulok Branch

117/7 Pracingdam Road Amphoe Muearig Phitsanulok Changwat Phitsanulok 65000, Thailand

Tel : +66 (0) 5521-2323-5 Fax: +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to tipm

Tumbon Noen Phra, Amphoe Mueang Rayong Changwat Rayong 21000, Thailand

Tel:+66 (0) 3880-0631-3 Fax : +66 (0) 3990-0634 Operating hours: Mondays till Sunday 9am to 6pm

#### Hat Yal Branch

48/106 Phadungpakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand

Tel : +66 (0) 7435-4559-61 Fax: +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm