

FAQ : How to Enable DDNS on DCS-942L / DCS-5222L

Release date : 1/05/2012

Model Support : DCS-942L / DCS-5222L

H/W:A1

S/W:1.xx

D-Link Technical Support Setup Procedure

การเปิดใช้งาน DDNS บน DCS-942L/DCS-5222L ทำได้อย่างไร

ขั้นตอนที่ 1 : จัดหา Install CD ให้พร้อม โดยแผ่น CD มาพร้อมกับ mydlink Cloud Cameras และ มองหาซอฟท์แวร์ที่เรียกว่า SetupWizardSE_Setup.exe กรุณาติดตั้ง SetupWizardSE_Setup.exe บนเครื่องคอมพิวเตอร์ของคุณ

Note: กรุณาตรวจสอบให้แน่ใจว่า คุณได้เชื่อมต่อกล้องของคุณไปยังพอร์ตแลนของเราเตอร์ของคุณ โดยเครื่องคอมพิวเตอร์ของคุณสามาถเชื่อมต่อไปยังเราเตอร์ผ่านสาย/ไร้สาย

ขั้นตอนที่ 2: คลิ๊กบนปุ่ม Start บนเครื่องคอมพิวเตอร์ของคุณแล้วเลือก All Programs



ขั้นตอนที่ 3: ภายใต้ All Programs เถือก D-Link > Setup Wizard SE แล้วคลิ๊กบนปุ่ม D-Link Setup Wizard SE



ขั้นตอนที่ 4 : คลิ๊กบนปุ่ม Search โดยซอฟท์แวร์จะแสดงกล้องชนิด IP ของ D-Link ที่มีอยู่ทั้งหมด ในระบบเน็ตเวิร์ค เลือกกล้องที่คุณต้องการเข้าถึงจากรายชื่อที่แสดงแล้วคลิ๊กบนปุ่ม Link

D-Link Rulding Networks for People					
	I				
	MAC Address	Current IP Address	Device Name		
	00.24.01.10.4c.65	192.168.0.197	DCS-2121		
Wizard	28.10.7b.00.a4.4d	192.168.0.100	DCS-942L		
Search Link					
About					
Exit					

ขั้นตอนที่ 5 : หน้าจอล็อกอินจะปรากฏขึ้น ใส่ค่า username เป็น admin และรหัสผ่าน ตามที่คุณได้ สร้างไว้เมื่อคุณเรียกใช้งาน installation wizard เพื่อใช้การล็อกอินไปยังเวบคอนฟิกูเรชั่นของคุณ คลิ๊กบนปุ่ม OK

Connect to 192.168	3.0.100 ? ×				
	G				
The server 192.168. and password.	0.100 at DCS-942L requires a username				
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).					
User name:	🖸 admin 💌				
Password:	••••••				
	Remember my password				
	OK Cancel				

ขั้นตอนที่ 6 : คลิ๊กบนแท็บของ SETUP แล้วคลิ๊ก Dynamic DNS ที่อยู่ทางค้านซ้ายมือ ภายใต้ส่วน ของ DYNAMIC DNS SETTINGS ตั้งค่าตามค้านล่าง

- 1. ทำเครื่องหมายเพื่อเลือก DDNS
- 2. เลือก DDNS Server ที่คุณได้ลงทะเบียนไว้
- 3. ใส่ค่าของ Host Name ที่คุณได้ลงทะเบียนไว้ที่ DDNS
- 4. ใส่บัญชีผู้ใช้งาน (Username) ที่ใช้ในการถ็อกอินไปยัง DDNS Server
- 5. ใส่รหัสผ่าน (Password) ที่ใช้ในการถือกอินไปยัง DDNS Server
- 6. คลิ๊กบนปุ่ม Save Settings

Product: DCS-942L Firmware version: 1.02					
D-Lin	ĸ				\prec
DCS-942L	LIVE VIDEO	SETUP	MAINTENANCE	STATUS	HELP
Setup Wizard Network Wireless Setup Dynamic DNS Image Setup Audio and Video Time and Date Video Clip Snapshot SD Recording Motion Detection	DYNAMIC DNS The Dynamic DNS feature (www.yourdomain.com) to Internet service providers a enter your domain name tr Sign up for D-Link's Free D DYNAMIC DNS SETTI DDNS Server Address Host Name User Name	Helpful Hints Dynamic DNS is useful if you have a DSL or Cable service provider that changes your modem IP address periodically. This will allow you to assign a website domain name to your camera instead of connecting through an IP address.			
SD Management	Password	•••••			
	Confirm Password Timeout Status	576 Disabled Save Settings Don't	hours Save Settings		



How to Enable DDNS on DCS-942L / DCS-5222L

Step 1: Browse the Installation CD that came with the mydlink Cloud Cameras and look for a software called **SetupWizardSE_Setup.exe**. Please install the **SetupWizardSE_Setup.exe** on your computer.

Note: Please ensure you have connected your ip camera to the LAN port of your router. Your PC is connected to the router via wired/wireless.

Step 2: Click on the Start button on your computer and then select on All Programs.



-7-

Step 3: Under the All Programs select on D-Link > Setup Wizard SE and then click on D-Link Setup Wizard SE button.



Step 4: Click on **Search** button, the software will display all D-Link ip cameras available in the network. Select the camera you want to access from the list and then click on the **Link** button.

D-Link ultiling Networks for People	SECURICAM Network				
	MAC Address	Current IP Address	Device Name		
(00.24.01.10.4c.65	192.168.0.197	DCS-2121		
Wizard	28.10.7b.00.a4.4d	192.168.0.100	DCS-942L		
	-				
Search					
Link					
About					
Exit					

Step 5: A login screen will appear, enter the username as "**admin**" and then the password you created when you run the installation wizard to login to the camera Web Configuration. Click on **OK** button.

Connect to 192.168	.0.100			
	E Star			
The server 192.168. and password.	0.100 at DCS-942L requires a username			
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).				
<u>U</u> ser name:	😰 admin 🔽			
Password:	••••••			
	Remember my password			
	OK Cancel			

Step 6: Click on the SETUP tab on top and then click on the Dynamic DNS on the Left Hand Side. Under the **DYNAMIC DNS SETINGS** configure the following;

- 1. Put a check on DDNS check box
- Put a check on DDNS check box
 Select the **DDNS Server** where you've registered
 Enter the **Host Name** used when you've registered to a DDNS
 Enter the **Username** used to login to the DDNS Server
 Enter the **Password** used to login to the DDNS Server
 Click on the **Save Settings** button

Product: DCS-942L					Firmware version: 1.02	
D-Lin	k					
DCS-942L	LIVE VIDEO	SETUP	MAINTENANCE	STATUS	HELP	
Setup Wizard	DYNAMIC DNS				Helpful Hints	
Network	The Dynamic DNS feature	allows you to use a domain nan	ne that you have purcha	ased	Dynamic DNS is useful if	
Wireless Setup	(www.yourdomain.com) to access your camera with a dynamically assigned IP address. Most broadband Internet service providers assign dynamic (changing) IP addresses. By using a DDNS service, you can service provider that the service provider the service provider that the service provider that the service provider the service provid					
Dynamic DNS	enter your domain name to connect to your camera no matter what your IP address is. changes your modem IP sign up for D-Link's Free DDNS service at www.DLinkDDNS.com. address is.					
Audio and Video	Save Settings Don't Save Settings This will all assign a wassign a wa					
Time and Date					name to your camera instead of connecting	
Video Clip	DYNAMIC DNS SETT	ING			through an IP address.	
Snapshot	DDNS	uusu dinkdaa com				
SD Recording	Host Name	ncomendador@dlinkddns.com		is.com		
Motion Detection	User Name	pcomendador				
SD Management	Password					
Logout	Confirm Password	•••••				
	Timeout	576	hours			
	Status	Disabled				
	L	Save Settings Don't 9	Save Settings			
		Durce	ere sounds			

ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997 ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น. Thai : Mon – Fri : Time 9.00 – 18.00. ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนขัตฤกษ์ และ วันธรรมดา หลัง 18.00 น. English : Sat – Sun , Public Holiday and after 18.00 weekday. Website : <u>www.dlink.co.th</u> email: <u>support@dlink.com.sg</u> Facebook : <u>http://www.facebook.com/DLinkThailandFans</u>

Nationwide D-Link Service Centres

Chang Ma Branch Phitsanulok Branch 117/7 Praongdam Road 2/1 Moo 3, Chiang Mail ampang Road Tumbon Chang Pueak, Amphoe Mueang Chiang Mai Tumbon Nal Mueang, Changwat Chiang Mai 50300, Thailand Tel: +66 (0) 5340-9482-6 Fax | +66 (0) 5340-9486 Operating hours: Operating hours: Mondays till Friday 9am to 6pm 9am to 6pm Cham Issara Tower II Panto Plaza Eranch

3rd Floor, Cham Issara Tower II 2922/138 New Perchburi Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10328, Thailand

Tel : +66 (0) 2308-2040 Fax: +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm

Surat Thani Branch

412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand

Tel : +66 (0) 7721-7907-10 Fax: +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm

Amphoe Mueang Phitsanulok Changwat Phitsanulok 65000, Thailand

Tel : +66 (0) 5521-2323-5 Fax: +66 (0) 5521-2326 Mondays till Friday

Phuket Branch

Tumbon Taratyai,

156/3 Phang Nga Road

Amphoe Mueang Phuket

Tel ; +66 (0) 7623-2906-9

Fax: +66 (0) 7623-2909

Operating hours:

9am to 6pm

Mondays till Friday

Changwat Phuket 83000, Thailand

4th FL Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Thanon Petchburl, Khet Ratchathewi Bangkok 10400, Thailand Tel : +66 (0) 2656 6037 Tel: +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm

Rayong Branch

217/24 Sukhumvit Road Tumbon Noen Phra, Amphoe Mueang Rayong Changwat Rayong 21000, Thailand

Tel : +66 (0) 3880-0631-3 Fax: +66 (0) 3980-0634 Operating hours: Mondays till Sunday 9am to 6pm

Hat Yai Branch

48/106 Phadungpakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand

Tel:+66 (0) 7435-4559-61 Fax: +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm