

# **D-Link<sup>®</sup>** Technical Support Setup Procedure

---

FAQ : How to Set Static IP Address on DCS-942L / DCS-5222L

Release date : 1/05/2012

Model Support : DCS-942L / DCS-5222L

H/W:A1

S/W:1.xx

# D-Link® Technical Support Setup Procedure

## การตั้งค่า Static IP Address บน DCS-942L/DCS-5222L ทำได้อย่างไร


**ขั้นตอนที่ 1 :** จัดหา Install CD ให้พร้อม โดยแผ่น CD มาพร้อมกับ mydlink Cloud Cameras และมองหาซอฟต์แวร์ที่เรียกว่า **SetupWizardSE\_Setup.exe** กรุณาติดตั้ง **SetupWizardSE\_Setup.exe** บนเครื่องคอมพิวเตอร์ของคุณ

**Note:** กรุณาตรวจสอบให้แน่ใจว่า คุณได้เชื่อมต่อกล้องของคุณไปยังพอร์ตแลนของเราเตอร์ของคุณ โดยเครื่องคอมพิวเตอร์ของคุณสามารถเชื่อมต่อไปยังเราเตอร์ผ่านสาย/ไร้สาย

**ขั้นตอนที่ 2:** คลิกบนปุ่ม Start บนเครื่องคอมพิวเตอร์ของคุณแล้วเลือก All Programs



ขั้นตอนที่ 3: ภายใต All Programs เลือก D-Link > Setup Wizard SE แล้วคลิกบนปุ่ม D-Link Setup Wizard SE

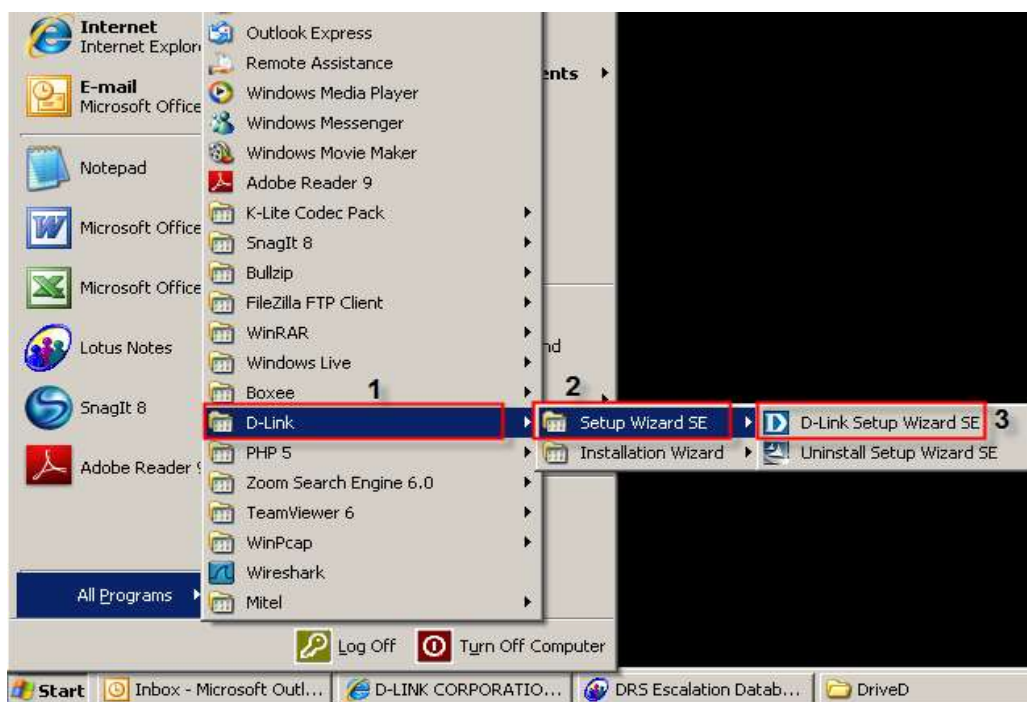

ขั้นตอนที่ 4 : คลิกบนปุ่ม Search โดยซอฟต์แวร์จะแสดงกล้องชนิด IP ของ D-Link ที่มีอยู่ทั้งหมดในระบบเน็ตเวิร์ค เลือกกล้องที่คุณต้องการเข้าถึงจากรายชื่อที่แสดงแล้วคลิกบนปุ่ม Link



ขั้นตอนที่ 5 : หน้าจอล็อกอินจะปรากฏขึ้น ใส่ค่า username เป็น admin และรหัสผ่าน ตามที่คุณได้สร้างไว้เมื่อคุณเรียกใช้งาน installation wizard เพื่อใช้การล็อกอินไปยังเว็บคอนฟิกูเรชันของคุณ  
คลิกบนปุ่ม OK



ขั้นตอนที่ 6 : คลิกบนแท็บ Setup แล้วคลิกบนปุ่ม Network ที่อยู่ทางด้านซ้ายมือ

DCS-942L	LIVE VIDEO	SETUP	MAINTENANCE	STATUS	HELP
Setup Wizard <b>Network</b> Wireless Setup Dynamic DNS Image Setup Audio and Video Time and Date Video Clip Snapshot SD Recording Motion Detection SD Management Logout	<b>NETWORK</b> You can configure your LAN and Internet settings here. <div>Save Settings    Don't Save Settings</div>				<b>Helpful Hints..</b>  Select if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically.  <b>HTTP Port</b> Allocate the port of camera to allow you to connect via a standard web browser.  <b>RTSP Port</b> Allocate the port of camera to allow you to connect by using QuickTime or streaming mobile devices.  <b>UPnP</b> Enable UPnP will allow you to discover camera as an UPnP device in the network.  <b>Bonjour</b> Enable Bonjour will allow you to discover camera with an Apple computer.
	<b>LAN SETTINGS</b> <b>LAN SETTINGS</b> <input checked="" type="radio"/> Automatic IP Address <input type="radio"/> Static IP Address <input type="checkbox"/> PPPoE <b>PORT SETTINGS</b> HTTP Port: 80 RTSP Port: 554 <b>UPnP</b> <input checked="" type="checkbox"/> UPnP <input checked="" type="checkbox"/> UPnP Port Forward External HTTP: 80 External RTSP: 554 <b>Apple</b> <input checked="" type="checkbox"/> Bonjour				

ขั้นตอนที่ 7 : ภายใต LAN SETTINGS เลือกตัวเลือก Static IP Address โดยตั้งค่าเป็น Static IP ที่อยู่ภายใต้ช่วง IP เดียวกับเราเตอร์ของคุณ แล้วคลิกบนปุ่ม Save Settings

**LAN SETTINGS**  
**LAN SETTINGS**  
☐ Automatic IP Address  
☒ **Static IP Address**  

IPv4 Address: 192.168.0.100  
 Subnet Mask: 255.255.255.0  
 Default Gateway (Router): 192.168.0.1  
 Optional Primary DNS:   
 Optional Secondary DNS:   
☐ PPPoE

**PORT SETTINGS**  
 HTTP Port: 80  
 RTSP Port: 554  
**UPnP**  
☒ UPnP  
☒ UPnP Port Forward  
     External HTTP: 80  
     External RTSP: 554  
**Apple**  
☒ Bonjour

Save Settings    Don't Save Settings

# D-Link<sup>®</sup> Technical Support Setup Procedure

## How to Set Static IP Address on DCS-942L / DCS-5222L


**Step 1:** Browse the Installation CD that came with the mydlink Cloud Cameras and look for a software called **SetupWizardSE\_Setup.exe**. Please install the **SetupWizardSE\_Setup.exe** on your computer.

**Note:** Please ensure you have connected your ip camera to the LAN port of your router. Your PC is connected to the router via wired/wireless.

**Step 2:** Click on the **Start** button on your computer and then select on **All Programs**.



**Step 3:** Under the **All Programs** select on **D-Link > Setup Wizard SE** and then click on **D-Link Setup Wizard SE** button.

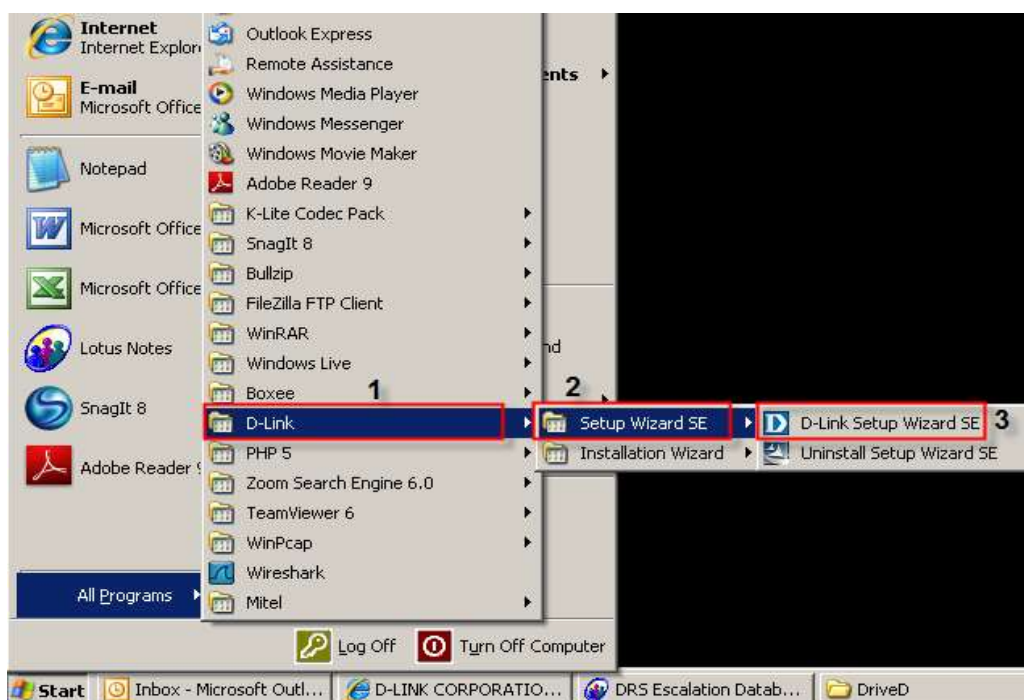

**Step 4:** Click on **Search** button, the software will display all D-Link ip cameras available in the network. Select the camera you want to access from the list and then click on the **Link** button.



**Step 5:** A login screen will appear, enter the username as “**admin**” and then the password you created when you run the installation wizard to login to the camera Web Configuration. Click on **OK** button.



**Step 6:** Click on **SETUP** tab then Click on **Network** on the left hand side.



DCS-942L	LIVE VIDEO	SETUP	MAINTENANCE	STATUS	HELP
Setup Wizard <b>Network</b> Wireless Setup Dynamic DNS Image Setup Audio and Video Time and Date Video Clip Snapshot SD Recording Motion Detection SD Management Logout	<div> <b>NETWORK</b> </div> <div>           You can configure your LAN and Internet settings here.           <div>             Save Settings             Don't Save Settings           </div> </div> <div> <b>LAN SETTINGS</b> </div> <div> <b>LAN SETTINGS</b> <div> <input checked="" type="radio"/> Automatic IP Address           <input type="radio"/> Static IP Address           <input type="checkbox"/> PPPoE         </div> </div> <div> <b>PORT SETTINGS</b> <div>           HTTP Port <input type="text" value="80"/>           RTSP Port <input type="text" value="554"/> </div> </div> <div> <b>UPnP</b> <div> <input checked="" type="checkbox"/> UPnP           <input checked="" type="checkbox"/> UPnP Port Forward           <div>             External HTTP <input type="text" value="80"/>             External RTSP <input type="text" value="554"/> </div> </div> </div> <div> <b>Apple</b> <div> <input checked="" type="checkbox"/> Bonjour           </div> </div>				<b>Helpful Hints..</b> <p>Select if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically.</p> <p><b>HTTP Port</b> Allocate the port of camera to allow you to connect via a standard web browser.</p> <p><b>RTSP Port</b> Allocate the port of camera to allow you to connect by using QuickTime or streaming mobile devices.</p> <p><b>UPnP</b> Enable UPnP will allow you to discover camera as an UPnP device in the network.</p> <p><b>Bonjour</b> Enable Bonjour will allow you to discover camera with an Apple computer.</p>

**Step 7:** Under **LAN SETTINGS** select the option **Static IP Address** then set the camera on Static IP with the same range of your router then Click on **Save Settings** button.

## ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997

ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น.

Thai : Mon – Fri : Time 9.00 – 18.00.

ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนักษัตฤกษ์ และ วันธรรมดา หลัง 18.00 น.

English : Sat – Sun , Public Holiday and after 18.00 weekday.

Website : [www.dlink.co.th](http://www.dlink.co.th)

email: [support@dlink.com.sg](mailto:support@dlink.com.sg)

Facebook : <http://www.facebook.com/DLinkThailandFans>

## **Nationwide D-Link Service Centres**

<b>Chiang Mai Branch</b> 2/1 Moo 3, Chiang Mai-Lampang Road Tambon Chang Pueak, Amphoe Muang Chiang Mai Changwat Chiang Mai 50300, Thailand  Tel : +66 (0) 5340-9482-6 Fax : +66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm	<b>Phitsanulok Branch</b> 117/7 Praongdam Road Tambon Nai Musang, Amphoe Muang Phitsanulok Changwat Phitsanulok 65000, Thailand  Tel : +66 (0) 5521-2323-5 Fax : +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to 6pm	
<b>Cham Issara Tower II</b> 3rd Floor, Cham Issara Tower II 2922/138 New Perchuri Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10320, Thailand  Tel : +66 (0) 2308-2040 Fax : +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm	<b>Pantip Plaza Branch</b> 4th Fl. Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Tharon Petchburi, Khet Ratchathewi Bangkok 10400, Thailand Tel : +66 (0) 2656 6037 Tel : +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm	<b>Rayong Branch</b> 217/24 Sukhumvit Road Tambon Noen Phra, Amphoe Muang Rayong Changwat Rayong 21000, Thailand  Tel : +66 (0) 3890-0631-3 Fax : +66 (0) 3890-0634 Operating hours: Mondays till Sunday 9am to 6pm
<b>Surat Thani Branch</b> 412/8 Talat Mai Road Tambon Talat, Amphoe Muang Surat Thani Changwat Surat Thani 84000, Thailand  Tel : +66 (0) 7721-7907-10 Fax : +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm	<b>Phuket Branch</b> 156/3 Phang Nga Road Tambon Taratjai, Amphoe Muang Phuket Changwat Phuket 83000, Thailand  Tel : +66 (0) 7623-2905-9 Fax : +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm	<b>Hat Yai Branch</b> 48/106 Phadungpakdee Road Tambon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand  Tel : +66 (0) 7435-4559-61 Fax : +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm