

FAQ: How to configure the Wireless Settings on the DCS-2132L

Release date: 21/04/2014

Model Support: DCS-2132L

H/W: A1 / B1

S/W: 1.03



การตั้งค่าเครือข่ายไร้สายบน DCS-2132L ทำได้อย่างไร

ขั้นตอนที่ 1 : เริ่มต้นโดยการเปิดหน้าที่ใช้ในการตั้งค่ากล้อง โดยใช้หมายเลข IP Address โดยใน ตัวอย่างนี้ใช้ IP Address เป็น 192.168.0.100 เมื่อหน้าจอในการล็อคอินปรากฏขึ้น ให้ใส่บัญชี ผู้ใช้งาน (username) และ รหัสผ่าน(password) ที่ได้กำหนดขึ้น ถ้าไม่มีรหัสผ่าน ให้เว้นไว้เป็น ช่องว่าง แล้วกดปุ่ม OK

The server 19. server reports	2.168.0.100 is asking for your user name and password. The that it is from DCS-2132L.
Narning: You authenticatio	r user name and password will be sent using basic n on a connection that isn't secure.
	admin
	Password
	Remember my credentials

ขั้นตอนที่ 2 : คลิ๊กบนแท็บของ SETUP แล้วคลิ๊ก Wireless Setup ที่อยู่ทางค้านซ้ายมือ

DCS-2132L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Setup Wizard	WIDELESS	TIP				Helpful Hints
Network Setup	In this section, you	can setup and con	figure the wireless set	lings on your camera.	_	You may choose which
Wireless Setup	in this second for	can setup and con	ingore the interess see	ange on your concret		connection using the
Dynamic DNS		Save Se	ttings Don't Save	e Settings		pull-down menu of Site Sorvey or enter the SSID
Tmage Setup	WIRELESS COL	VELOURATION				manually.
Audio and Video						SSID (Service Set
Preset	Enable Wireless	14		Decoment		your wireless network
Motion Detection	Site Survey		SID LIST	(HESLAN)		Such as Default, Conference, My network,
Time and Date	SSID	dennin.				and etc.
Event Setup	Wireless Mode	Intrast	al and a second s			Authentication
SD Card	Channel	Anto				Open: This option
Logout	Authentication	Open	~			to all devices on the
	Encryption	Designer				network. No encryption is provided.
	Default Key	1.01				Shared: Allows
	Key 1	*****				communication only with
	Key 2	*****				the identical WEP (Wired
	Key 3	*****				Equivalent Privacy) settings.
	Key 4	*****				WPA PSK. WPA2 PSK:
		(5 or 13	ASCII, 10 or 26 HEX d	Baracters]		Both modes will remove

ขั้นตอนที่ 3 : ภายใต้ส่วนของ Wireless Configuration ให้ทำเครื่องหมายเพื่อเลือก Enable Wireless แล้วเลือกชื่อของเครือข่ายไร้สาย ในตัวเลือก

WIRELESS CONFIGURATION		
Enable Wireless	\checkmark	
Site Survey	===SSID List===	Rescan
SSID	hotspot@dlink D-Link_DAP-1360	
Wireless Mode	DIR-865L dlink-1709	
Channel	Testtest	
Authentication	D-Link_DIR-612 dlink-24ghz	
Encryption	dracula	
Default Key	DIR-300 dlink_54G+	
Key 1	DIR-850L_SITEX-EXT DIR-300testing	
Key 2	DIR-850L_Phil	
Key 3	Hotspot_1 *f15H@W0rK guest 1	
Key 4	DIR-850L_SITEX 0013	
	hotspot2@dink	haracters)

ขั้นตอนที่ 4 : หลังจากเลือกเครือข่ายไร้สายที่ถูกต้อง ให้ใส่ค่ารหัสผ่าน หลังจากนั้นกดปุ่ม Save Settings เพื่อให้การบันทึกการตั้งค่า

WIRELESS CONFIGU	RATION
Enable Wireless	\checkmark
Site Survey	DIR-850L_Phil V Rescan
SSID	DIR-850L_Phil
Wireless Mode	Infrastructure 🗸
Channel	Auto 🗸
Authentication	WPA2-PSK V
Encryption	TKIP,AES V
Кеу	•••••••••• (8-63 ASCII or 64 HEX characters)
Signal	100
	Save Settings Don't Save Settings



How to Configure the Wireless Settings on the DCS-2132L

Step 1: Access the Configuration page of the camera using the Local IP Address. In this sample the IP Address of the camera is 192.168.0.100. A login screen will appear, enter the username as "**admin**" and then the password that you created for the camera, if no passwords just leave it blank then Click on **OK** button.

Windows Securi	ty
The server 19 server reports	2.168.0.100 is asking for your user name and password. The that it is from DCS-2132L.
Warning: You authenticatio	ir user name and password will be sent using basic in on a connection that isn't secure.
	admin
	Password Remember my credentials
	OK Cancel
	OK

Step 2: Click on the SETUP tab and then Click Wireless Setup on the left side.

D-Link

-5-

DCS-2132L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Setup Wizard	WIRELESS SET	UP.			H I	leipful Hints
Network Setup	In this section, you	a can setup and con	figure the wireless sett	ings on your camera.		ou may choose which
Wireless Setup		[THE STORE		ware and		onnection using the
Dynamic DNS		2946.26	tongs Don't save	Sectings	10 S	arvey or enter the SSID
Tmage Setup	WIRELESS CO	NEIGURATION				vanually.
Audio and Video					s	SID (Service Set
Preset	Enable Wireless	1-1	100 17 12	and the second se	Ŷ	our wireless network
Notion Detection	Site Survey		410 LB4 V	HEAR	5	onference, My network,
Time and Date	SSID	detaut.			•	nd etc.
Event Setup	Wireless Mode	Intrast	ructure 🗸		A	athentication
SD Card	Channel	Anto >			9	pen: This option
Logost	Authentication	Opens	~		10 10	all devices on the
	Encryption	Description	~		2	etwork. No encryption
	Default Key	1.				Second allowed
	Key 1	*****			0	ommunication only with
	Key 2	*****			8	ther devices that have he identical WEP (Wired
	Key 3	*****			E	quivalent Privacy)
	Key 4					
	1.000000000	(5 or 13)	ASCII, 10 or 26 HEX d	aracters)	B	oth modes will require

Step 3: Under *Wireless Configuration* section. Put a check mark on *Enable Wireless*, Then select the name of the wireless network on the drop down box.

WIRELESS CONFIGURATION		
Enable Wireless		
Site Survey	===SSID List===	Rescan
SSID	hotspot@dlink D-Link_DAP-1360	
Wireless Mode	DIR-865L dlink-1798	
Channel	Testtest	
Authentication	D-Link_DIR-612 dlink-24ghz	
Encryption	dracula	
Default Key	DIR-300 dlink_54G+	
Key 1	DIR-850L_SITEX-EXT DIR-300testing	
Key 2	DIR-850L_Phil	
Key 3	Hotspot_1 *f15H@W0rK guest 1	
Key 4	DIR-850L_SITEX 0013	
	hotspot2@dink	haracters)

Step 4: After you select the correct wireless network name key in the password for the wireless network on the **Key** field, then click on **Save Settings** button to save the settings.

WIRELESS CONFI	GURATION
Enable Wireless	\checkmark
Site Survey	DIR-850L_Phil V Rescan
SSID	DIR-850L_Phil
Wireless Mode	Infrastructure 🗸
Channel	Auto 🗸
Authentication	WPA2-PSK V
Encryption	TKIP,AES V
Кеу	(8-63 ASCII or 64 HEX characters)
Signal	100

ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997 ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น. Thai : Mon – Fri : Time 9.00 – 18.00. ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนขัตฤกษ์ และ วันธรรมดา หลัง 18.00 น. English : Sat – Sun , Public Holiday and after 18.00 weekday. Website : <u>www.dlink.co.th</u> email: <u>support@dlink.com.sg</u> Facebook : <u>http://www.facebook.com/DLinkThailandFans</u>

Nationwide D-Link Service Centres

Chang Mai Branch

2/1 Moo 3, Chiang Mai-Lampang Road Tumbon Chang Pueak, Amphoe Mueang Chiang Mal Tumbon Nal Musang, Changwat Chiang Mai 50300, Thailand

Tel : +66 (0) 5340-9452-6 Fax 1 +66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm

Cham Issara Tower II

3rd Floor, Charn Issara Tower II 2922/138 New Perchburi Road Khwang Bangkapi, Khet Huay-Kwang, Bangkok 10328, Thailand

Tel : +66 (0) 2308-2040 Fax +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm

Surat Thani Branch

412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand

Tel : +66 (0) 7721-7907-10 Fax: +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6om

Phitsanulok Branch

117/7 Praongdam Road Amphoe Muearig Philtsanulok Changwat Phitsanulok 65000, Thailand

Tel : +66 (0) 5521-2323-5 Fax: +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to 6pm

Panto Plaza Branch

4th FL Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Thanon Petchburl, Khet Ratchathews Bangkok 10400, Thailand Tel 1 466 (0) 2656 6037 Tel : +66 (0) 2656 6054 Fax: +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm

Phuket Branch

156/3 Phang Nga Road Tumbon Taratyai, Amphoe Mueang Phuket Changwat Phuket 83000, Thailand

Tel : +66 (0) 7623-2906-9 Fax: +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm

Rayong Branch

217/24 Sukhumvit Road Tumbon Noen Phra, Amphoe Mueang Rayong Changwat Rayong 21000, Thailand

Tel:+66 (0) 3880-0631-3 Fax : +66 (0) 3990-0634 Operating hours: Mondays till Sunday 9am to 6pm

Hat Yai Branch

48/106 Phadungpakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand

Tel : +66 (0) 7435-4559-61 Fax: +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm