

FAQ: How to Setup Static IP Address on the DCS-2132L

Release date: 21/04/2014

Model Support: DCS-2132L


H/W: A1 / B1

S/W: 1.03

D-Link[®] Technical Support Setup Procedure

การตั้งค่า IP Address แบบ static ทำได้อย่างไร

ขั้นตอนที่ 1 : เริ่มต้นโดยการเปิดหน้าที่ใช้ในการตั้งค่ากล้อง โดยใช้หมายเลข IP Address โดยในตัวอย่างนี้ใช้ IP Address เป็น 192.168.0.100 เมื่อนำจอในการลือคอินปรากฏขึ้น ให้ใส่บัญชีผู้ใช้งาน (username) และ รหัสผ่าน(password) ที่ได้กำหนดขึ้น ถ้าไม่มีรหัสผ่าน ให้เว้นไว้เป็นช่องว่าง แล้วกดปุ่ม OK

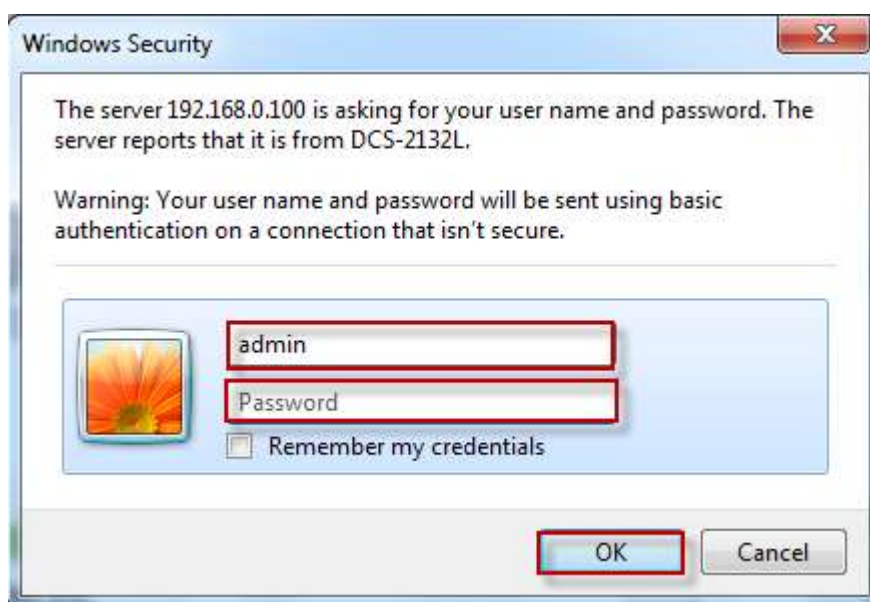

ขั้นตอนที่ 2 : คลิกบนแท็บของ **SETUP** แล้วคลิก **Network Setup** ที่อยู่ทางด้านซ้ายมือ ภายใต้ ส่วนของ **LAN Settings** กรุณาเลือก **Static IP Client** แล้วพิมพ์ค่า **IP Address** ของกล้องโดยควร อยู่ใน **subnet** เดียวกันกับเราเตอร์ คลิกบนปุ่ม **Save Settings** เพื่อบันทึกการตั้งค่า

The screenshot shows the D-Link web interface for the DCS-2132L camera. The 'SETUP' tab is active. In the 'NETWORK SETUP' section, the user is prompted to configure LAN and Internet settings. The 'LAN SETTINGS' section has 'Static IP Client' selected. The IP address is 192.168.0.100, Subnet mask is 255.255.255.0, Default router is 192.168.0.1, and Primary DNS is 8.8.8.8. The 'Save Settings' button is highlighted with a red box and the number 4. The 'Helpful Hints..' section on the right provides information about DHCP, UPnP, and PPPoE settings.

DCS-2132L // LIVE VIDEO **SETUP** ADVANCED MAINTENANCE STATUS HELP

Setup Wizard
Network Setup **1**
Wireless Setup
Dynamic DNS
Image Setup
Audio and Video
Preset
Motion Detection
Time and Date
Event Setup
SD Card
Logout

NETWORK SETUP
You can configure your LAN and Internet settings here.
4 Save Settings Don't Save Settings

LAN SETTINGS
 DHCP
 Static IP Client **2**
IP address 192.168.0.100 **3**
Subnet mask 255.255.255.0
Default router 192.168.0.1
Primary DNS 8.8.8.8
Secondary DNS 0.0.0.0
 Enable UPnP presentation
 Enable UPnP port forwarding
Forwarding Port 1024 Test
Forwarding Status UPnP forwarding is inactive

Helpful Hints..
Select 'DHCP Connection' if you are running a DHCP server on your network and would like an IP address assigned to your IP camera automatically.
UPnP: Enabling UPnP settings will allow you to configure your IP camera as an UPnP device in the network.
PPPoE Setting: If you use the IP camera to connect directly to the Internet, you will need to enter the username and password, which were given to you when you set up your account with your Internet Service Provider. If the camera is behind a router or a gateway, you do not need to configure this setting.

D-Link[®] Technical Support Setup Procedure

How to Setup Static IP on the DCS-2132L

Step 1: Access the Configuration page of the camera using the Local IP Address. In this sample the IP Address of the camera is 192.168.0.100. A login screen will appear, enter the username as **admin** and then the password that you created for the camera, if no passwords just leave it blank then Click on **OK** button.



Step 2: Click on the **SETUP** tab and then Click **Network Setup** on the left side. Under LAN Settings, please select the option **Static IP Client**. Then type the IP Address of the camera that should be on the same subnet of your router. Click on **Save Settings** button to save the settings.

The screenshot shows the D-Link web interface for the DCS-2132L camera. The top navigation bar includes 'LIVE VIDEO', 'SETUP', 'ADVANCED', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' tab is active. On the left sidebar, 'Network Setup' is selected and marked with a red box and the number '1'. The main content area is titled 'NETWORK SETUP' and contains the text 'You can configure your LAN and Internet settings here.' Below this text are two buttons: 'Save Settings' (highlighted with a red box and the number '4') and 'Don't Save Settings'. The 'LAN SETTINGS' section is expanded, showing two radio button options: 'DHCP' and 'Static IP Client' (selected and marked with a red box and the number '2'). Below these are several input fields: 'IP address' (192.168.0.100, marked with a red box and the number '3'), 'Subnet mask' (255.255.255.0), 'Default router' (192.168.0.1), 'Primary DNS' (8.8.8.8), and 'Secondary DNS' (0.0.0.0). There are also checkboxes for 'Enable UPnP presentation' (checked) and 'Enable UPnP port forwarding' (unchecked). Below the checkboxes are 'Forwarding Port' (1024) and 'Forwarding Status' (UPnP forwarding is inactive). On the right side of the interface, there is a 'Helpful Hints..' section with text about DHCP, UPnP, and PPPoE settings.

ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997

ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น.

Thai : Mon – Fri : Time 9.00 – 18.00.

ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนซ์ตฤกษ์ และ วันธรรมดา หลัง 18.00 น.

English : Sat – Sun , Public Holiday and after 18.00 weekday.

Website : www.dlink.co.th

email: support@dlink.com.sg

Facebook : <http://www.facebook.com/DLinkThailandFans>

Nationwide D-Link Service Centres

<p>Chiang Mai Branch 2/1 Moo 3, Chiang Mai-Lampang Road Tumbon Chang Pueak, Amphoe Mueang Chiang Mai Changwat Chiang Mai 50300, Thailand</p> <p>Tel : +66 (0) 5340-9482-6 Fax : +66 (0) 5340-9486 Operating hours: Mondays till Friday 9am to 6pm</p>	<p>Phitsanulok Branch 117/7 Praongdam Road Tumbon Nai Mueang, Amphoe Mueang Phitsanulok Changwat Phitsanulok 65000, Thailand</p> <p>Tel : +66 (0) 5521-2323-5 Fax : +66 (0) 5521-2326 Operating hours: Mondays till Friday 9am to 6pm</p>	
<p>Cham Issara Tower II 3rd Floor, Cham Issara Tower II 2922/138 New Perchburi Road Khwang Bangkokpi, Khet Huay-Kwang, Bangkok 10320, Thailand</p> <p>Tel : +66 (0) 2308-2040 Fax : +66 (0) 2308-2024 Call Center : +66 (0) 2716-6669 Operating hours: Mondays till Friday 9am to 6pm</p>	<p>Pantip Plaza Branch 4th Fl. Pantip Plaza 604/3 Petchburi Road Room 439-440 Kwang Thanon Petchburi, Khet Ratchathewi Bangkok 10400, Thailand Tel : +66 (0) 2656 6037 Tel : +66 (0) 2656 6054 Fax : +66 (0) 2656 6042 Operating hours: Mondays till Sunday 10am to 7pm</p>	<p>Rayong Branch 217/24 Sukhumvit Road Tumbon Noen Phra, Amphoe Mueang Rayong Changwat Rayong 21000, Thailand</p> <p>Tel : +66 (0) 3880-0631-3 Fax : +66 (0) 3880-0634 Operating hours: Mondays till Sunday 9am to 6pm</p>
<p>Surat Thani Branch 412/8 Talat Mai Road Tumbon Talat, Amphoe Mueang Surat Thani Changwat Surat Thani 84000, Thailand</p> <p>Tel : +66 (0) 7721-7907-10 Fax : +66 (0) 7721-7910 Operating hours: Mondays till Friday 9am to 6pm</p>	<p>Phuket Branch 156/3 Phang Nga Road Tumbon Taratyai, Amphoe Mueang Phuket Changwat Phuket 83000, Thailand</p> <p>Tel : +66 (0) 7623-2906-9 Fax : +66 (0) 7623-2909 Operating hours: Mondays till Friday 9am to 6pm</p>	<p>Hat Yai Branch 48/106 Phadungpakdee Road Tumbon Hatyai, Amphoe Hatyai Changwat Songkhla 90110, Thailand</p> <p>Tel : +66 (0) 7435-4559-61 Fax : +66 (0) 7435-4561 Operating hours: Mondays till Friday 9am to 6pm</p>