## How to configure DSL-2640T for Virtual Server (Port Forwarding)

Please note use only hard-wired network connections, to do the setting. \*\* Disable firewall in your PC to avoid login problem\*\*

Step 1 Connect your PC to the LAN port of your DSL-2604T

Step 2 Start up an Internet explorer and key in 192.168.1.1 (by default)

🕘 No page to dis	play - Microsoft Internet Expl	orer
File Edit View	Favorites Tools Help	
🕝 Back 👻 🕥	- 💌 😰 🏠 🔎 Searc	h 📌 Favorites
Address 餐 192.168	.1.1	
Connect to 19	2 168 1 1	
<b>R</b>	E C	u
Please enter you	r user name and password on DSL-G6	504T
User name:	🖸 admin	~
Password:	•••••	
	<u>R</u> emember my password	want to ck File,
	OK Car	ncel et

**By default** Username: admin Password: admin

**Step 3** Click on Advance > LAN Clients to assign Static IP to client (s).

*IP Address: Enter the IP address of the client. Host Name: Give a name to the application.* 



**Step 4** Click **Apply** to allow the rules to be created and it will be appearing under Static Address List.

D-Link Building Networks for Peo	ple	5	DSL-2640T Wireless ADSL Router		
	Home	Advanced	Tools	Status	Help
UPnP Virtual Server	Virtual Serv Coni LAN	er nection: Pvc0 v IP	New IP		
virtual Server	Category	Available Rules		Applied R	ules
Lan Clients	O Games	daracittataria daracittatagaviene		dice350ctv dice3500pv/iew/	
SNMP	<ul> <li>Audio/Video</li> <li>Apps</li> </ul>	Arriston Contraction	Add < Remo	<ul> <li>dica2120Mapch dica2120Mp</li> </ul>	
Filters	O Servers				
Bridge Filters	<b>8</b> Please save an	Add Edit	<b>Delete</b> ake effect !		
Routing					🥺 🛟 Cancel Help

Step 5 Click on Virtual Server > User > Add.

Step 6 Create the rules under Rule Management.

ling Networks for People			DSL Wireless	-2640T ADSL Route	r
	Home	Advanced	Tools	Status	Help
UPnP	Rule Manag	ement			9
ual Server	Rule Prot	e Name application na tocol TCP 🗸	me		
	Port	t Start 🗙	Por Por	tEnd 🗙	
in Clients	_		Ø 🕴		
SNMP		10	opply Cancel		

Rule Name: Application Rule Name Protocol: Type of protocol (e.g. TCP, UDP or TCP and UDP) Port Start: Starting Port Number Port End: Ending Port Number Port Map: Mapping to the starting port Port Map End: Mapping to the ending port

ile Manag	gement				
Ru	le Name cam	era			
Pre	otocol TCF	> <b>~</b>			
Po	rt Start		Port	End	
Po	rt Map		Port	Map End	
		0	63		
		Apply	Cancel		
rotocol	Port Start	Port End	Port Map	Port Map End	Delete
	8080	8080	8080	8080	

Step 7 Click on the Apply icon.

Step 8 Click on the Virtual Server to go back to main menu.

Step 9 Click on User under Category.

D-Link Building Networks for People			DSL- Wireless	2640T ADSL Router	
UPnP	Home Virtual Server Conne	Advanced	Tools 12	Status	Help
Virtual Server	Category Games VPN Audio/Video Apps	Available Rules dcs950hhtp dcs950ctr dcs950ipview 13	14 Add >	Applied Ru dcs950hhtp dcs950ctr dcs950ipview	les
Filters 1 Bridge Filters	1 User Please save and :	Add Edit reboot the device to ta	Delete		Cancel Help

**Step 10** Under **LAN IP**, select the appropriate IP address which the rules will be applied to *Example: 192.168.1.4* 

Step 11 Under the Available Rules, select the rules and click Add.

Step 12 Rules created will be shown under Applied Rules.

Step 13 Click on Apply.

Step 14 Click on Tools > System > Save and Reboot.



Port Forwarding is rules is completed.