

How to Setup Dynamic DNS on DSL-G604T / DSL-2640T.


Please note use only hard-wired network connections, to do the setting.

** Disable firewall in your PC to avoid login problem**

** Please power off and on both of your router and modem after you linkup both of the devices**

Step 1 Connect your PC to the LAN port of your DSL-G604T / DSL-2640T

Step 2 Start up a Internet explorer and key in **192.168.1.1** (by default)

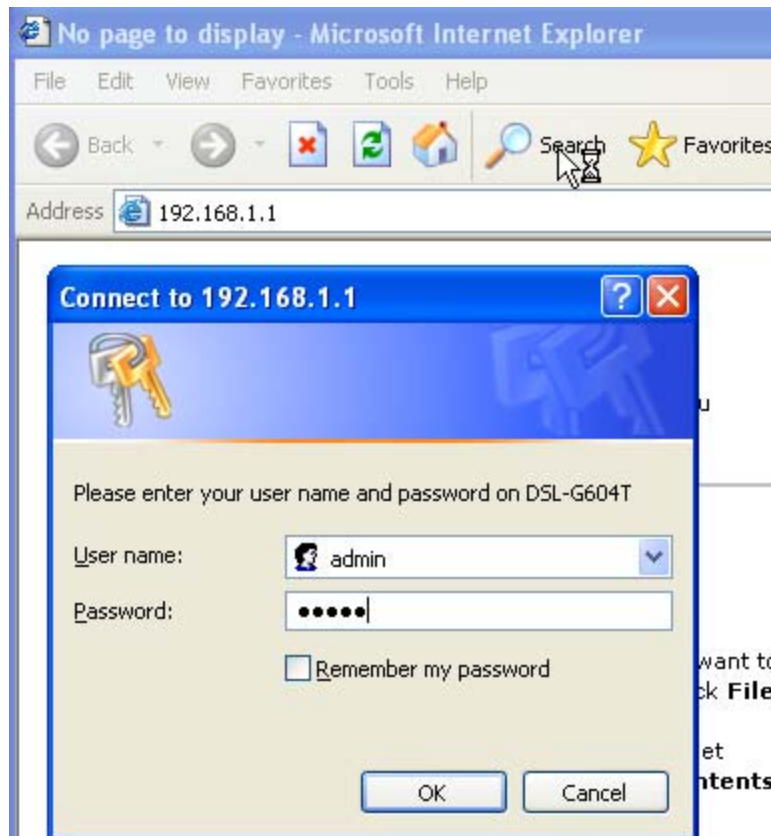

Step 3 Key in your username and password (**by default username is admin password is admin as well**)

Step 4 Click on **Home > Dynamic DNS**.

Step 5 Choose the correct DDNS server from the drop down menu.

Step 6 Fill in the correct username and password in the following fields. (This set of username and password is the DDNS account username and password)

Building Networks for People

Wireless ADSL Router

Home Advanced Tools Status Help

Wizard
Wireless
WAN
LAN
DHCP
DNS
Dynamic DNS

Dynamic DNS Configuration

The DDNS Configuration allows the user to set the configuration of DDNS.

DDNS Server: **Choose the correct DDNS server**

User Configuration:

UserName:

PassWord:

HostName:

Username and password here is referring to DDNS account login username and password that you create

Step 7 Click on “Apply” to apply the setting.

Step 8 Click on Tools > System > click on “save and reboot” to save the setting. That’s all.