


2 Installation

2.1 Connect D-Link dongle and PC

Connect D-Link dongle with your PC. Double click the install package of the software, then follow the following steps to install:

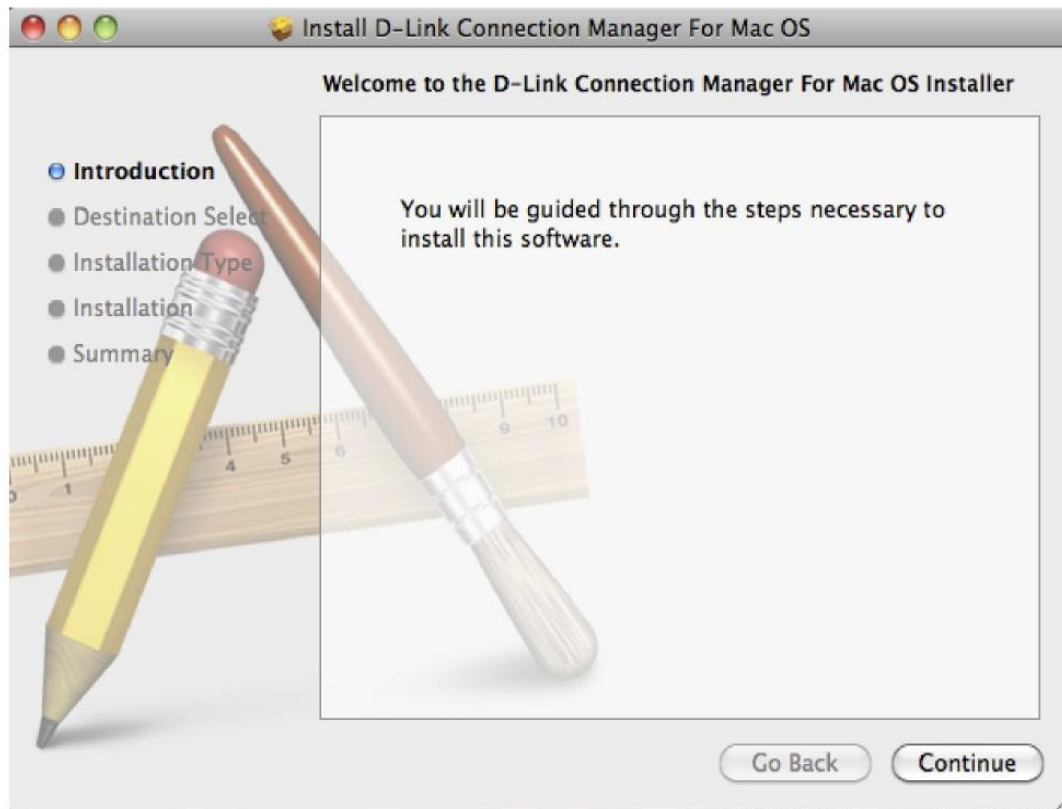

- 1) Press "**Continue**" button on the welcome page.
- 2) Select a destination volume to install software on the volume "Macintosh HD", and then click "**Continue**".

- 3) Select Installation Type “Customize” or “Easy Install”, and then click “**Install**”.
- 4) Please enter user name and password to be authenticated, and click “**OK**” to install.
- 5) Click “**Continue Installation**” to make sure that installing requires user to close.
- 6) Left click “**Close**” to finish software installation.

Note: If you have problems with the above installation operation, please contact the service provider for help.

After the installation, select “**Finder**” → “**Applications**” and there will be a “**D-Link Connection Manager**” program listed in, the D-Link dongle is ready to work normally.

2.2 Running Application Software

After the D-Link dongle is installed and connected normally, double click “**Finder**” → “**Applications**” → “**D-Link Connection Manager**” on the PC to run the application software.

2.3 Disconnect D-Link dongle Safely

Please close the application software first, and then pull out D-Link dongle.

2.4 Software Uninstallation

Close the application program before uninstalling the software.

Select “**Finder**” → “**Applications**” → “**Uninstall D-Link Connection Manager**” to uninstall the software.