

How to enable IPv6 of DIR-868L for StarHub?

Step 1: Open your Internet browser and enter http://dlinkrouter or http://dlinkrouter.local or http://192.168.0.1 into the address bar.



Step 2: Enter your login information. If you have not changed the default settings, the username is Admin and the password field should be left blank. Click **Login**.

LOGIN	
Login to the router :	User Name : Admin Password : Login

Step 3: Click on the Setup tab at the top of the page and click IPv6 from the menu on the left-hand side

Product Page : DIR-868L				Hardware Version : A1 Firmware Version : 1.065HC		
D-Link	<					\prec
DIR-868L	SETUP	1 ADV	/ANCED	TOOLS	STATUS	SUPPORT
INTERNET	IPV6					Helpful Hints
WIRELESS SETTINGS NETWORK SETTINGS PARENTAL CONTROL	Use this section to a method, please con Save Settings	When configuring the router to access the IPv6 internet, be sure to choose the correct IPv6 Connection Type from the drop down menu. If you are unsure of which option to choose, contact your internet Service Provider (ISP). If you are having trouble accessing the IPv6 internet through the router, double check any settings you have entered on this page and				
STORAGE MEDIA SERVER IPV6 2 MYDLINK SETTINGS	IPV6 CONNECTION Choose the mode My IPv6 C LAN IPV6 ADDRES					
WIRELESS	LAN IPv6 Link-Lo	ocal Address	i 6to4 Grd Local Connectivi	ty Only		verify them with your ISP if needed. • More

Step 4: Select Autoconfiguration (SLAAC / DHCPv6) from the drop down list as shown.Step 5: Click on Save Settings.

---- END ----