


D-Link® Technical Support Setup Procedure

How to Change the Admin Password on the Router

Step 1: Open the Internet Explorer (IE) browser, and then go to <http://192.168.1.1>

Step 2: The Login page will come up. Select admin from the drop-down list of username and enter the password.

- The default password is **admin**.

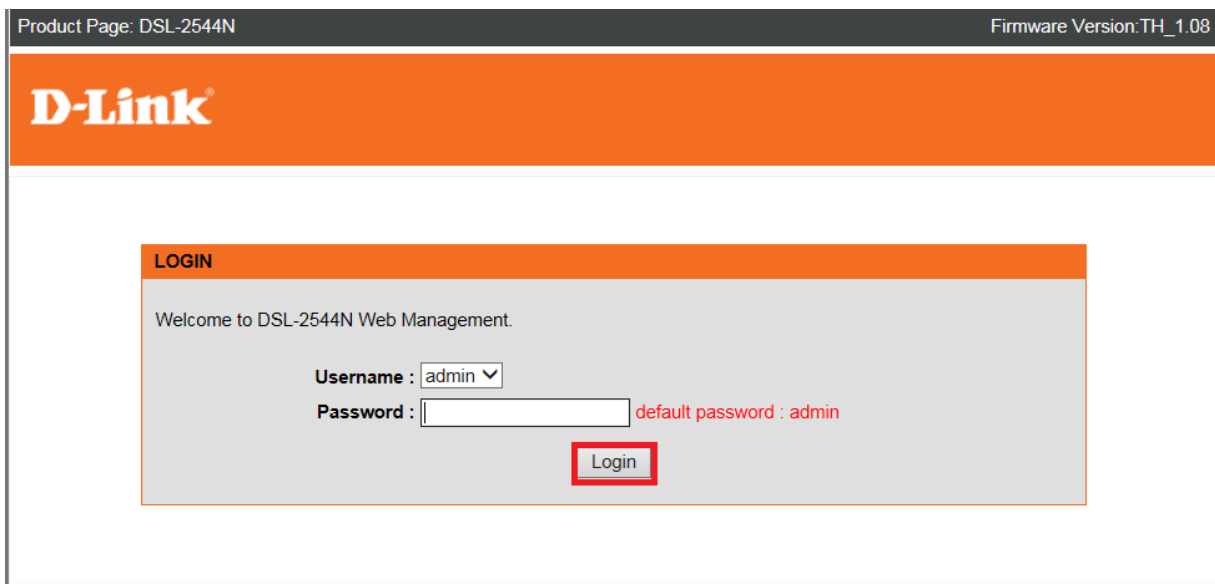

Product Page: DSL-2544N Firmware Version: TH_1.08

D-Link

LOGIN


Welcome to DSL-2544N Web Management.

Username : admin

Password : default password : admin

Login

Step 3: Click on **MAINTENANCE** tab then Click on **Access Controls** on the left hand side.

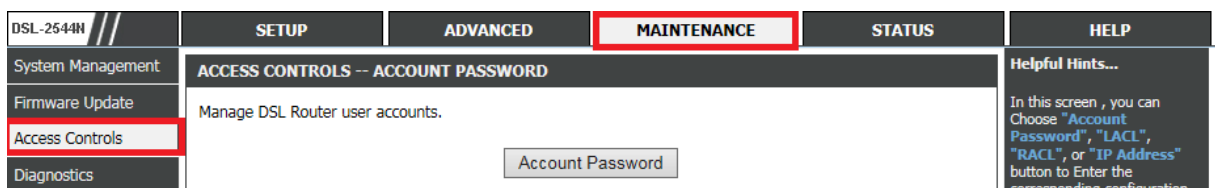

DSL-2544N //	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
System Management	ACCESS CONTROLS -- ACCOUNT PASSWORD				Helpful Hints... In this screen , you can Choose "Account Password", "LACL", "RACL", or "IP Address" button to Enter the corresponding configuration .
Firmware Update	Manage DSL Router user accounts.				
Access Controls	Account Password				
Diagnostics					

Step 4: Click on **Account Password** button under the Access Controls Account Password.

ACCESS CONTROLS -- ACCOUNT PASSWORD

Manage DSL Router user accounts.

Account Password

Step 5: Under **Account Password** Type in your Current Password, New Password and Confirm Password then Click on **Apply** button to save the settings.

ACCOUNT PASSWORD

Username: admin

Current Password:

New Password:

Confirm Password: