

How to Enable Port Forwarding on the DSL-2750U

Step 1: Open a web browser such as Internet Explorer, Mozilla Firefox, Safari and etc. On the Address bar type in the LAN IP Address of the DSL-2750U which is **192.168.1.1** and then press on the Enter key on your keyboard.



Step 2: A login screen will appear, type in the User Name and the Password as "**admin**" all in lower case and then type in Validate Code and then click on the **Log In** button.

LOGIN		
Welcome to DSL-27500 (Web Manageme	
2	Password :	
3 🗸	alidate Code:	CASXN
		GA SXN
		Remember my login info.
		4 Login

Step 3: Click on the ADVANCED tab and then select on Wireless Settings on the left hand side.



Step 4: Under the PORT FORWARDING SETUP section, click on the button Add.

PORT FORWARDING SETUP						
Server	External Port	Protocol	Internal Port	Server IP	Use	Schedule
Name	Start End		Start End	Address	Interface	Rule
Add						

Step 5: Under the PORT FORWARDING SETUP section, configure the following;

- 1. Select the radio button on **Custom Server** and then enter a name for the Server
- 2. Server IP Address: Enter the IP Address of the Device or Application to allow being access on the WAN.
- **3.** Enter the port used on the device or application on the External Port Start, External Port End, Internal Port Start, Internal Port End
- **4.** Select TCP or UDP on the Protocol

PORT FORWARDING SETUP						
Remaining number of entries that can be configured: 32						
Use Interface	: 💽					
 Select a Service 	(Click to Select)		Ŧ			
Custom Server : FTP						
Schedul	Schedule : Always View Available Schedules					
Server IP Address : 192.168.1.2						
External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End		
21	21	ТСР 💌	21	21		
		ТСР 💌				

Step 6: Click on the Apply button to take effect.

L]
	Apply Concol
	Apply Cancel