

# ***USER MANUAL***

***DIR-615***

***VERSION 3.0***



**D-Link<sup>®</sup>**

**WIRELESS**

---

# Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

## Manual Revisions

| Revision | Date          | Description  |
|----------|---------------|--|
| 3.0      | July 23, 2008 | <ul style="list-style-type: none"><li>• Updated for revision C1</li><li>• Added IPv6 Support</li></ul> |

## Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2008 by D-Link Systems, Inc.





All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Systems, Inc.

# Table of Contents

|  |           |                                     |    |
|--|-----------|-------------------------------------|----|
| <b>Preface</b> .....                       | <b>i</b>  | L2TP.....                           | 24 |
| Manual Revisions .....                     | i         | Static IP Address.....              | 26 |
| Trademarks .....                           | i         | Wireless Settings .....             | 27 |
| <b>Product Overview</b> .....              | <b>1</b>  | Manual Wireless Network Setup ..... | 28 |
| Package Contents .....                     | 1         | Network Settings.....               | 30 |
| System Requirements .....                  | 2         | DHCP Server Settings .....          | 31 |
| Features .....                             | 3         | DHCP Reservation .....              | 32 |
| Hardware Overview .....                    | 4         | Virtual Server .....                | 34 |
| Connections.....                           | 4         | Port Forwarding .....               | 36 |
| LEDs .....                                 | 5         | Application Rules .....             | 37 |
| <b>Installation</b> .....                  | <b>6</b>  | QoS Engine .....                    | 38 |
| Before you Begin .....                     | 6         | Network Filters .....               | 39 |
| Wireless Installation Considerations.....  | 7         | Access Control.....                 | 40 |
| Network Diagram .....                      | 8         | Access Control Wizard.....          | 40 |
| Connect to Cable/DSL/Satellite Modem ..... | 9         | Website Filters .....               | 43 |
| Connect to Another Router .....            | 10        | Inbound Filters .....               | 44 |
| Getting Started .....                      | 12        | Firewall Settings .....             | 45 |
| <b>Configuration</b> .....                 | <b>13</b> | Advanced Wireless Settings .....    | 46 |
| Web-based Configuration Utility .....      | 13        | Advanced Network Settings.....      | 47 |
| Internet Connection Setup Wizard.....      | 14        | UPnP .....                          | 47 |
| Manual Configuration.....                  | 19        | Internet Ping Block .....           | 47 |
| Dynamic (Cable) .....                      | 19        | Internet Port Speed .....           | 47 |
| Dynamic IP Address (DHCP) .....            | 20        | Multicast Streams.....              | 47 |
| PPPoE (DSL) .....                          | 21        | IPv6.....                           | 48 |
| PPTP.....                                  | 22        | Link-Local Connectivity .....       | 49 |
|  |           | Static IPv6 (Stateful) .....        | 50 |
|  |           | Static IPv6 (Stateless).....        | 51 |

|  |           |   |            |
|--|-----------|---|------------|
| DHCPv6 (Stateful).....                   | 52        | <b>Connect to a Wireless Network.....</b> | <b>87</b>  |
| DHCPv6 (Stateless).....                  | 53        | Using Windows Vista® .....                | 87         |
| IPv6 over PPPoE (Stateful).....          | 54        | Configure WPA/WPA2 .....                  | 88         |
| IPv6 over PPPoE (Stateless) .....        | 56        | Connect Using WCN 2.0.....                | 90         |
| 6 to 4 Tunneling (Stateful).....         | 58        | Using Windows® XP.....                    | 91         |
| 6 to 4 Tunneling (Stateless) .....       | 59        | Configure WPA-PSK.....                    | 92         |
| IPv6 in IPv4 Tunneling (Stateful).....   | 60        | <b>Troubleshooting .....</b>              | <b>94</b>  |
| IPv6 in IPv4 Tunneling (Stateless) ..... | 61        | <b>Wireless Basics .....</b>              | <b>98</b>  |
| Administrator Settings.....              | 62        | What is Wireless? .....                   | 99         |
| Time Settings.....                       | 63        | Tips.....                                 | 101        |
| SysLog.....                              | 64        | Wireless Modes .....                      | 102        |
| E-mail Settings.....                     | 65        | <b>Networking Basics .....</b>            | <b>103</b> |
| System Settings.....                     | 66        | Check your IP address .....               | 103        |
| Update Firmware .....                    | 67        | Statically Assign an IP address .....     | 104        |
| DDNS.....                                | 68        | <b>Technical Specifications.....</b>      | <b>105</b> |
| System Check.....                        | 69        | <b>Warranty.....</b>                      | <b>106</b> |
| Schedules .....                          | 70        |   |            |
| Device Information.....                  | 71        |   |            |
| Log.....                                 | 73        |   |            |
| Stats.....                               | 74        |   |            |
| Internet Sessions .....                  | 75        |   |            |
| Wireless .....                           | 77        |   |            |
| Support .....                            | 78        |   |            |
| <b>Wireless Security.....</b>            | <b>79</b> |   |            |
| What is WPA? .....                       | 79        |   |            |
| Wireless Connection Setup Wizard .....   | 80        |   |            |
| Add Wireless Device with WPS Wizard..... | 83        |   |            |
| Configure WPA-Personal (PSK).....        | 84        |   |            |
| Configure WPA-Enterprise (RADIUS) .....  | 85        |   |            |

# Package Contents

|   |   |
|---|---|
| <b>D-Link DIR-615 Wireless N Router</b> |  A black wireless router with two antennas and a front panel with several indicator lights.  |
| <b>Power Adapter</b>                    |  A black power adapter with a power cord and a standard two-prong electrical plug.           |
| <b>Ethernet Cable</b>                   |  A blue Ethernet cable with RJ45 connectors on both ends.                                    |
| <b>CD-ROM</b>                           |  A CD-ROM with a white and orange design, labeled "Quick Router Setup Wizard" and "D-Link". |

**Note:** Using a power supply with a different voltage rating than the one included with the DIR-615 will cause damage and void the warranty for this product.

# System Requirements

|   |  |
|---|--|
| <b>Network Requirements</b>                         | <ul style="list-style-type: none"><li>• An Ethernet-based Cable or DSL modem</li><li>• IEEE 802.11n-draft/g wireless clients</li><li>• 10/100 Ethernet</li></ul>   |
| <b>Web-based Configuration Utility Requirements</b> | <p><b>Computer with the following:</b></p> <ul style="list-style-type: none"><li>• Windows®, Macintosh, or Linux-based operating system</li><li>• An installed Ethernet adapter</li></ul> <p><b>Browser Requirements:</b></p> <ul style="list-style-type: none"><li>• Internet Explorer 6.0 or higher</li><li>• Mozilla 1.7.12 or higher</li><li>• Firefox 1.5 or higher</li><li>• Safari 1.0 or higher (with Java 1.3.1 or higher)</li><li>• Flock 0.7.14 or higher</li><li>• Opera 6.0 or higher</li></ul> <p><b>Windows® Users:</b> Make sure you have the latest version of Java installed. Visit <a href="http://www.java.com">www.java.com</a> to download the latest version.</p> |
| <b>CD Installation Wizard Requirements</b>          | <p><b>Computer with the following:</b></p> <ul style="list-style-type: none"><li>• Windows® XP with Service Pack 2 or Vista®</li><li>• An installed Ethernet adapter</li><li>• CD-ROM drive</li></ul>  |


# Features

- **Faster Wireless Networking** - The DIR-615 provides up to 300Mbps\* wireless connection with other 802.11n wireless clients. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio.
- **Compatible with 802.11g Devices** - The DIR-615 is still fully compatible with the IEEE 802.11g standard, so it can connect with existing 802.11g PCI, USB and Cardbus adapters.
- **Advanced Firewall Features** - The Web-based user interface displays a number of advanced network management features including:
  - **Content Filtering** - Easily applied content filtering based on MAC Address, URL, and/or Domain Name.
  - **Filter Scheduling** - These filters can be scheduled to be active on certain days or for a duration of hours or minutes.
  - **Secure Multiple/Concurrent Sessions** - The DIR-615 can pass through VPN sessions. It supports multiple and concurrent IPsec and PPTP sessions, so users behind the DIR-615 can securely access corporate networks.
- **User-friendly Setup Wizard** - Through its easy-to-use Web-based user interface, the DIR-615 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your router to your specific settings within minutes.

\* Maximum wireless signal rate derived from IEEE Standard 802.11g and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

# Hardware Overview


## Connections

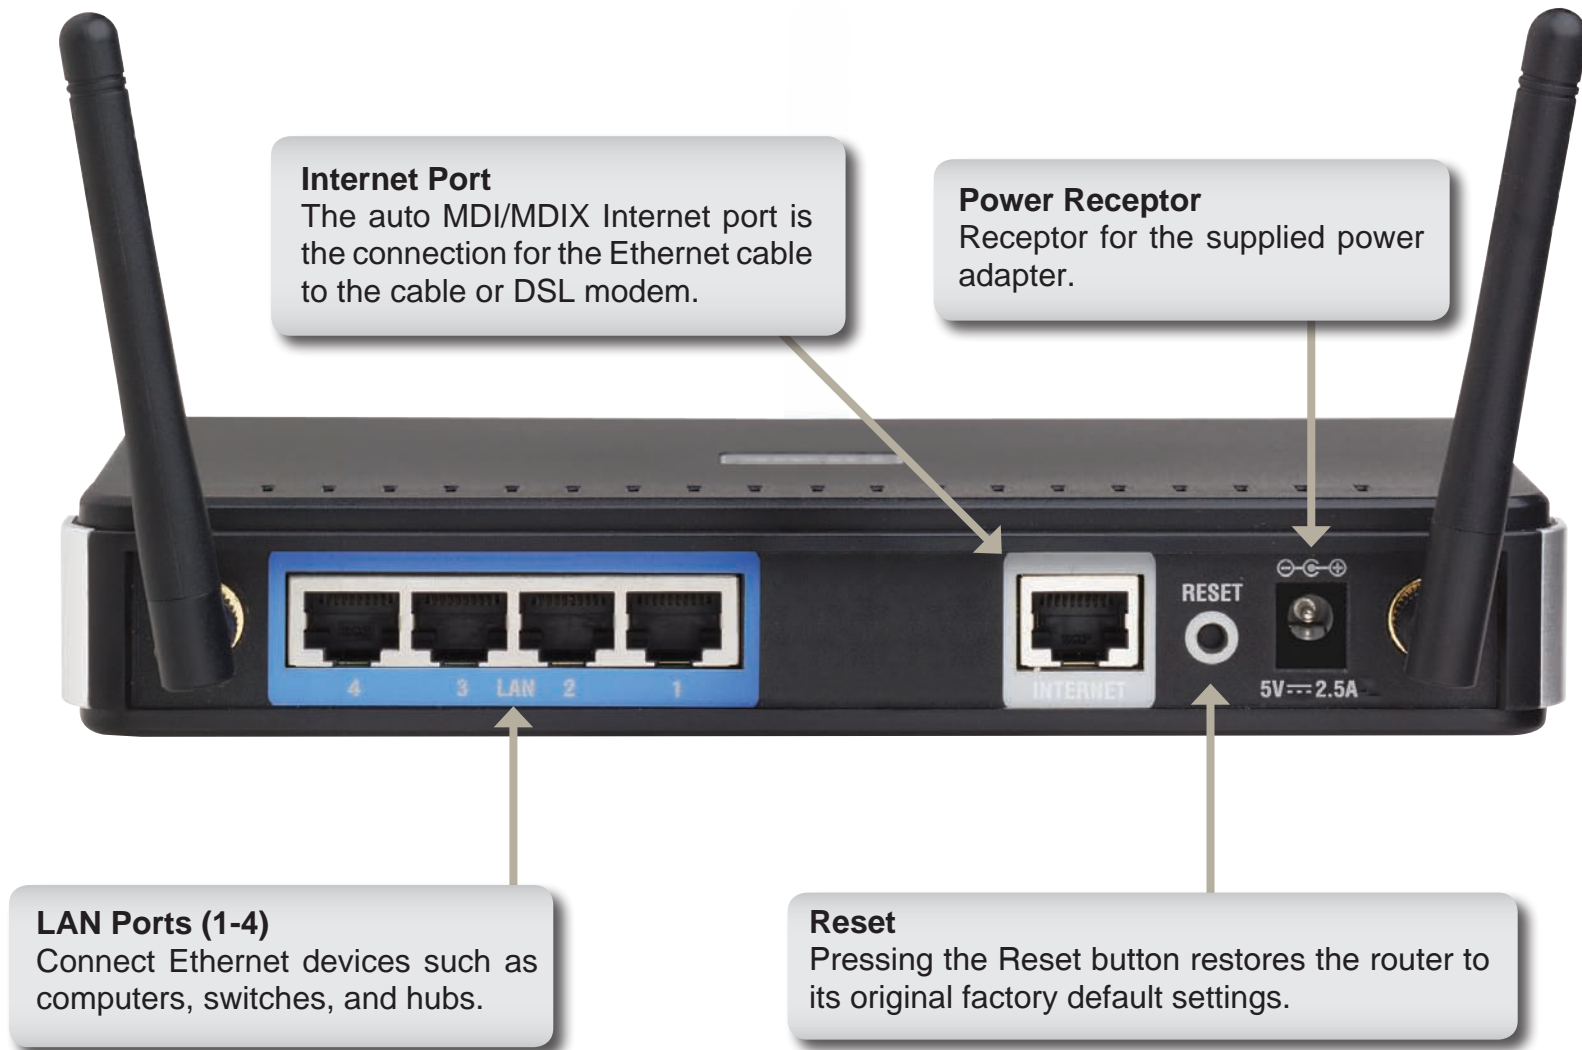



# Hardware Overview

## LEDs

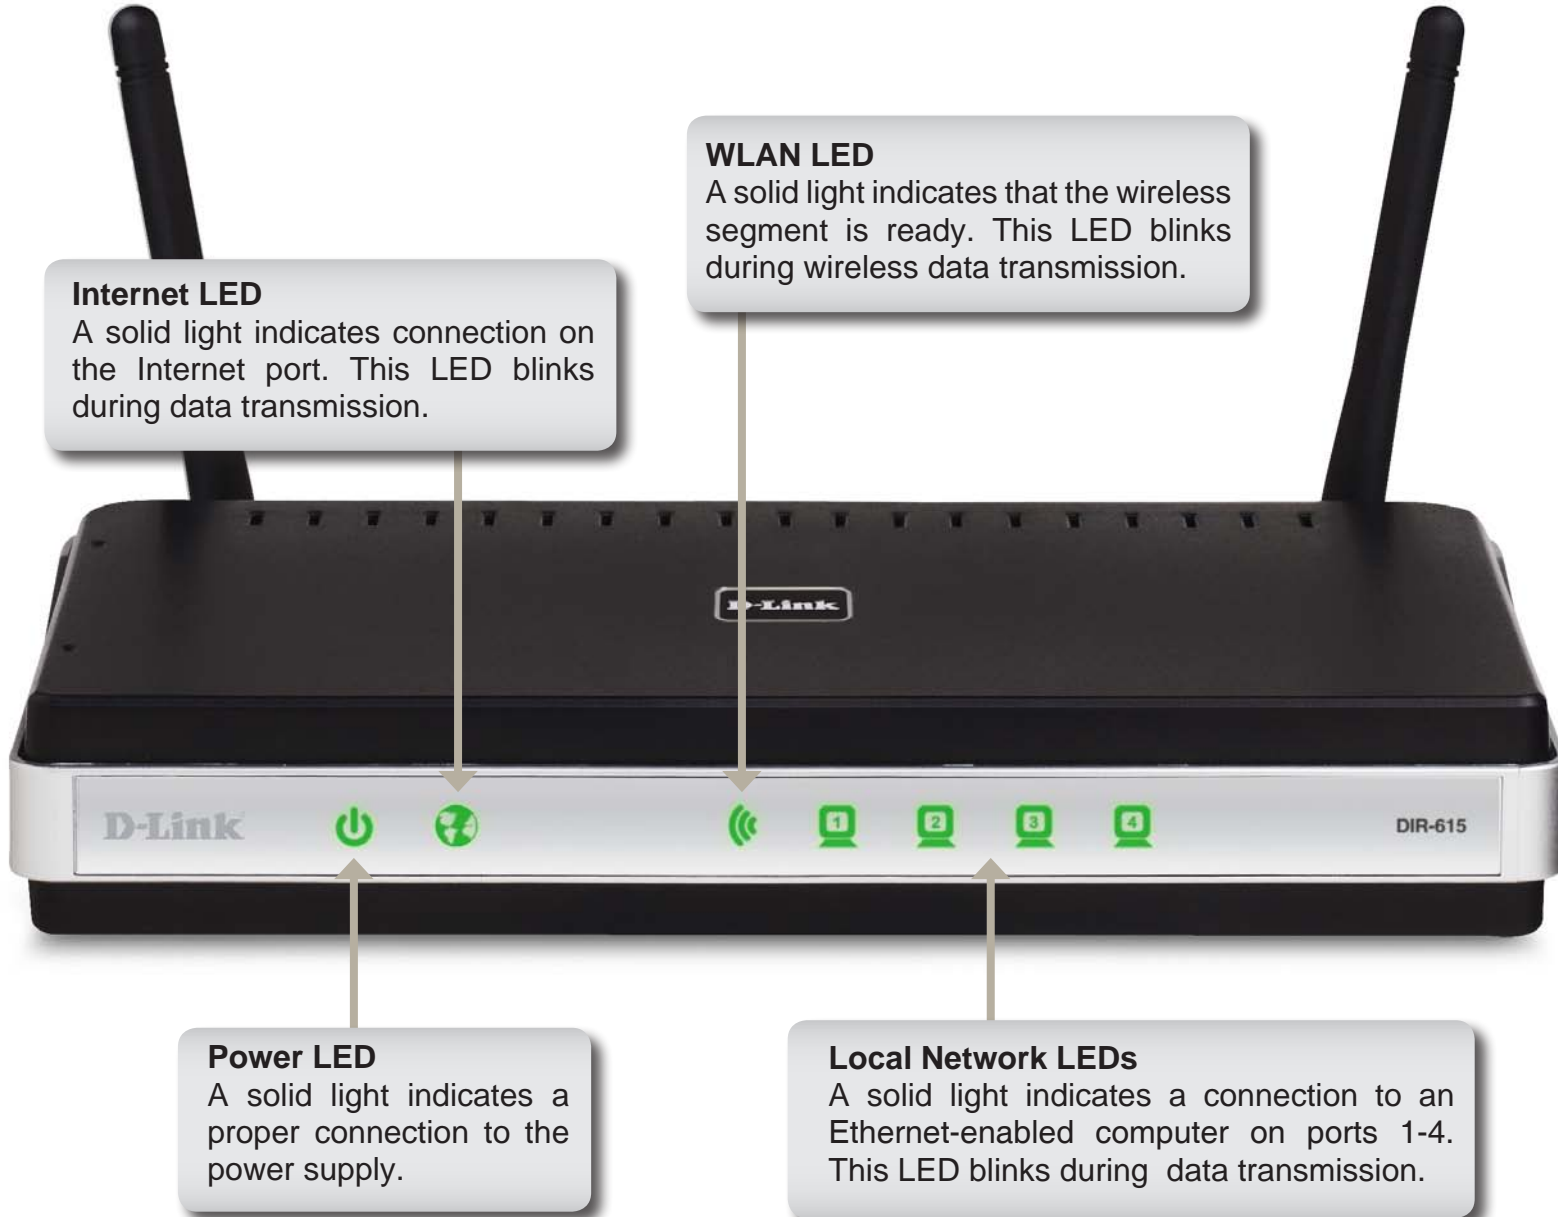

# Installation

This section will walk you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in the attic or garage.

## Before you Begin

- Please configure the router with the computer that was last connected directly to your modem.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, and then turn the modem back on. In some cases, you may need to call your ISP to change connection types (USB to Ethernet).
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoet, Broadjump, or Enternet 300 from your computer or you will not be able to connect to the Internet.
- When running the Setup Wizard from the D-Link CD, make sure the computer you are running the CD from is connected to the Internet and online or the wizard will not work. If you have disconnected any hardware, re-connect your computer back to the modem and make sure you are online.


# Wireless Installation Considerations

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

# Network Diagram

## *YOUR NETWORK SETUP*

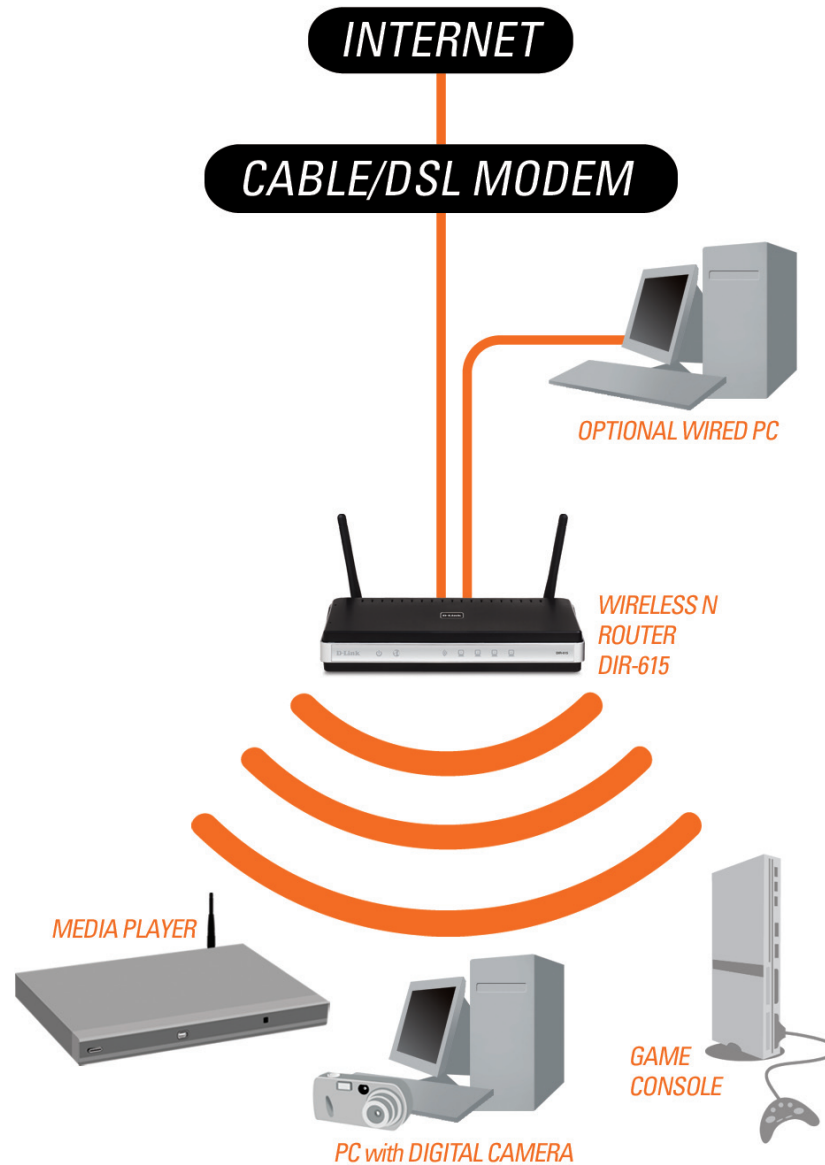

# Connect to Cable/DSL/Satellite Modem

If you are connecting the router to a cable/DSL/satellite modem, please follow the steps below:

1. Place the router in an open and central location. Do not plug the power adapter into the router.
2. Turn the power off on your modem. If there is no on/off switch, then unplug the modem's power adapter. Shut down your computer.
3. Unplug the Ethernet cable (that connects your computer to your modem) from your computer and place it into the Internet port on the router.
4. Plug an Ethernet cable into one of the four LAN ports on the router. Plug the other end into the Ethernet port on your computer.
5. Turn on or plug in your modem. Wait for the modem to boot (about 30 seconds).
6. Plug the power adapter to the router and connect to an outlet or power strip. Wait about 30 seconds for the router to boot.
7. Turn on your computer.
8. Verify the link lights on the router. The power light, Internet light, and the LAN light (the port that your computer is plugged into) should be lit. If not, make sure your computer, modem, and router are powered on and verify the cable connections are correct.
9. Skip to page 13 to configure your router.

# Connect to Another Router

If you are connecting the D-Link router to another router to use as a wireless access point and/or switch, you will have to do the following before connecting the router to your network:

- Disable UPnP™
- Disable DHCP
- Change the LAN IP address to an available address on your network. The LAN ports on the router cannot accept a DHCP address from your other router.

To connect to another router, please follow the steps below:

1. Plug the power into the router. Connect one of your computers to the router (LAN port) using an Ethernet cable. Make sure your IP address on the computer is 192.168.0.xxx (where xxx is between 2 and 254). Please see the **Networking Basics** section for more information. If you need to change the settings, write down your existing settings before making any changes. In most cases, your computer should be set to receive an IP address automatically in which case you will not have to do anything to your computer.
2. Open a web browser and enter **http://192.168.0.1** and press **Enter**. When the login window appears, set the user name to **Admin** and leave the password box empty. Click **Log In** to continue.
3. Click on **Advanced** and then click **Advanced Network**. Uncheck the Enable UPnP checkbox. Click **Save Settings** to continue.
4. Click **Setup** and then click **Network Settings**. Uncheck the Enable DHCP Server server checkbox. Click **Save Settings** to continue.
5. Under Router Settings, enter an available IP address and the subnet mask of your network. Click **Save Settings** to save your settings. Use this new IP address to access the configuration utility of the router in the future. Close the browser and change your computer's IP settings back to the original values as in Step 1.

6. Disconnect the Ethernet cable from the router and reconnect your computer to your network.
7. Connect an Ethernet cable in one of the LAN ports of the router and connect it to your other router. Do not plug anything into the Internet port of the D-Link router.
8. You may now use the other 3 LAN ports to connect other Ethernet devices and computers. To configure your wireless network, open a web browser and enter the IP address you assigned to the router. Refer to the **Configuration** and **Wireless Security** sections for more information on setting up your wireless network.

# Getting Started

The DIR-615 includes a Quick Router Setup Wizard CD. Follow the simple steps below to run the Setup Wizard to guide you quickly through the installation process. You may manually configure your router without the wizard. Refer to the next page to manually setup your router.

Insert the **Quick Router Setup Wizard CD** in the CD-ROM drive. The step-by-step instructions that follow are shown in Windows® XP or Vista®. The steps and screens are similar for the other Windows® operating systems.

If the CD autorun function does not automatically start on your computer, go to **Start > Run**. In the run box type **"D:\DIR615.exe"** (where **D:** represents the drive letter of your CD-ROM drive).

When the autorun screen appears, click **Install Router** and follow the on-screen instructions.



**Note:** It is recommended to write down the login password on the provided CD holder.




# Configuration


This section will show you how to configure your new D-Link wireless router using the web-based configuration utility.

## Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the router (192.168.0.1).

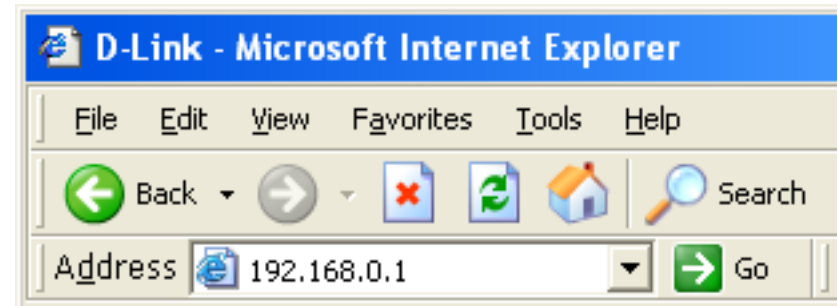

Select **Admin** from the drop-down menu and then enter your password. Leave the password blank by default.

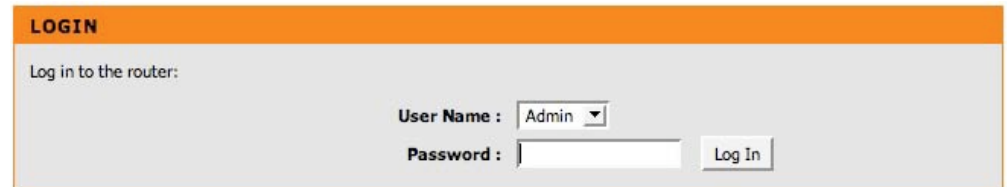

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section for assistance.

# Internet Connection Setup Wizard

Once logged into the web interface of the router, the **Setup > Internet** page will appear. Click the **Internet Connection Setup Wizard** button to quickly configure your router using the setup wizard.

If you want to enter your settings without running the wizard, click **Manual Internet Configuration Wizard** and skip to page 19.


The screenshot displays the D-Link web interface for the DIR-615 router. The top navigation bar includes the D-Link logo and tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar shows menu options for INTERNET, WIRELESS SETTINGS, and NETWORK SETTINGS. The main content area is titled "INTERNET CONNECTION" and contains the following sections:

- INTERNET CONNECTION**: A text box stating, "There are two ways to set up your Internet connection: you can use the Web-based Internet Connection Setup Wizard, or you can manually configure the connection."
- INTERNET CONNECTION SETUP WIZARD**: A section with the text, "If you would like to utilize our easy to use Web-based Wizards to assist you in connecting your new D-Link Systems Router to the Internet, click on the button below." Below this text is a button labeled "Internet Connection Setup Wizard". A **Note** follows: "Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package."
- MANUAL INTERNET CONNECTION OPTIONS**: A section with the text, "If you would like to configure the Internet settings of your new D-Link Systems Router manually, then click on the button below." Below this text is a button labeled "Manual Internet Connection Setup".

On the right side of the page, there is a "Helpful Hints..." section with two paragraphs of text and a "More..." link.

At the bottom of the page, there is a "WIRELESS" section header.


Click **Next** to continue.

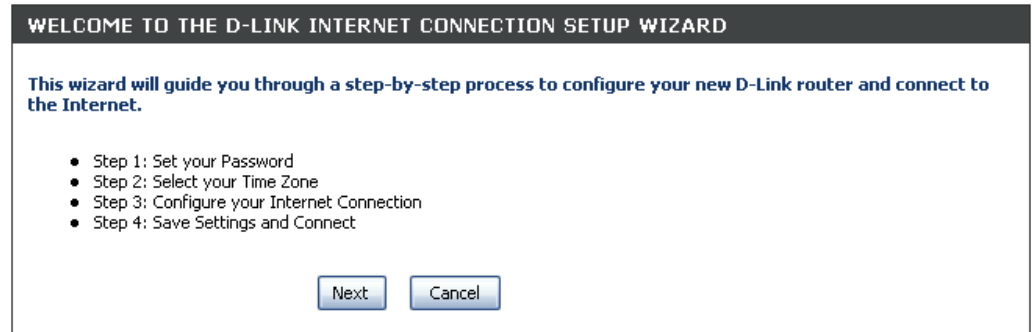

Create a new password and then click **Next** to continue.



Select your time zone from the drop-down menu and then click **Next** to continue.

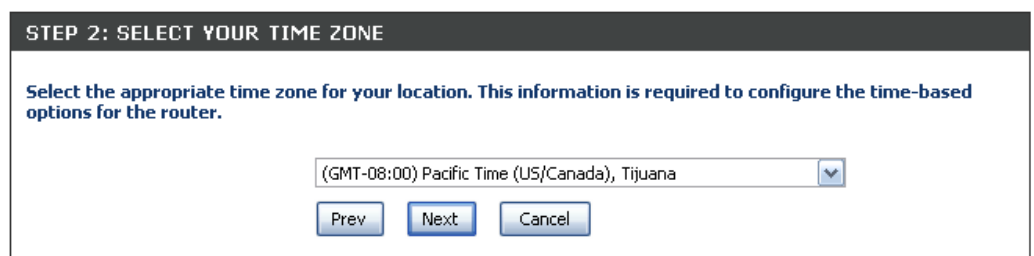

Select the type of Internet connection you use and then click **Next** to continue.

**STEP 3: CONFIGURE YOUR INTERNET CONNECTION**

Your Internet Connection could not be detected, please select your Internet Service Provider (ISP) from the list below. If your ISP is not listed; select the "Not Listed or Don't Know" option to manually configure your connection.

Not Listed or Don't Know

If your Internet Service Provider was not listed or you don't know who it is, please select the Internet connection type below:

- DHCP Connection (Dynamic IP Address)**  
Choose this if your Internet connection automatically provides you with an IP Address. Most Cable Modems use this type of connection.
- Username / Password Connection (PPPoE)**  
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this type of connection.
- Username / Password Connection (PPTP)**  
PPTP client.
- Username / Password Connection (L2TP)**  
L2TP client.
- Static IP Address Connection**  
Choose this option if your Internet Setup Provider provided you with IP Address information that has to be manually configured.

If you selected Dynamic, you may need to enter the MAC address of the computer that was last connected directly to your modem. If you are currently using that computer, click **Clone Your PC's MAC Address** and then click **Next** to continue.

The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.

**DHCP CONNECTION (DYNAMIC IP ADDRESS)**

To set up this connection, please make sure that you are connected to the D-Link Router with the PC that was originally connected to your broadband connection. If you are, then click the Clone MAC button to copy your computer's MAC Address to the D-Link Router.

MAC Address :  (optional)

Host Name :

Note: You may also need to provide a Host Name. If you do not have or know this information, please contact your ISP.

If you selected PPPoE, enter your PPPoE username and password. Click **Next** to continue.

Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.

**Note:** Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

**SET USERNAME AND PASSWORD CONNECTION (PPPOE)**

To set up this connection you will need to have a Username and Password from your Internet Service Provider. If you do not have this information, please contact your ISP.

**Address Mode :**  Dynamic IP  Static IP

**IP Address :**

**User Name :**

**Password :**

**Verify Password :**

**Service Name :**  (optional)

Note: You may also need to provide a Service Name. If you do not have or know this information, please contact your ISP.

If you selected PPTP, enter your PPTP username and password. Click **Next** to continue.

**SET USERNAME AND PASSWORD CONNECTION (PPTP)**

To set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need PPTP IP address. If you do not have this information, please contact your ISP.

**Address Mode :**  Dynamic IP  Static IP

**PPTP IP Address :**

**PPTP Subnet Mask :**

**PPTP Gateway IP Address :**

**PPTP Server IP Address (may be same as gateway) :**

**User Name :**

**Password :**

**Verify Password :**

If you selected L2TP, enter your L2TP username and password. Click **Next** to continue.

### SET USERNAME AND PASSWORD CONNECTION (L2TP)

To set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need L2TP IP address. If you do not have this information, please contact your ISP.

Address Mode :  Dynamic IP  Static IP

L2TP IP Address :

L2TP Subnet Mask :

L2TP Gateway IP Address :

L2TP Server IP Address (may be same as gateway) :

User Name :

Password :

Verify Password :

If you selected Static, enter your network settings supplied by your Internet provider. Click **Next** to continue.

### SET STATIC IP ADDRESS CONNECTION

To set up this connection you will need to have a complete list of IP information provided by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.

IP Address :

Subnet Mask :

Gateway Address :

Primary DNS Address :

Secondary DNS Address :

Click **Connect** to save your settings. Once the router is finished rebooting, click **Continue**. Please allow 1-2 minutes to connect.

### SETUP COMPLETE!

The Internet Connection Setup Wizard has completed. Click the Connect button to save your settings and reboot the router.

# Manual Configuration

## Dynamic (Cable)

If you opt to set up your Internet connection manually, you will be redirected to a WAN page that allows you to select your Internet type and enter the correct configuration parameters.

Select your Internet connection type using the “**My Internet Connection is**” drop-down menu.

Click the **Save Settings** button when you have configured the connection.

The screenshot shows the D-Link DIR-615 router configuration interface. The top navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'SETUP' tab is active, and the 'WAN' section is highlighted. The 'Internet Connection' section provides instructions and a 'Note' about PPPoE. Below this, the 'INTERNET CONNECTION TYPE' section has a dropdown menu set to 'Dynamic IP (DHCP)'. The 'DYNAMIC IP (DHCP) INTERNET CONNECTION TYPE' section contains fields for Host Name, Use Unicasting (checked), Primary DNS Server, Secondary DNS Server, MTU (1500), and MAC Address, with a 'Clone Your PC's MAC Address' button.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

INTERNET WIRELESS SETTINGS NETWORK SETTINGS

**WAN**

**Internet Connection**

Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP, L2TP, and BigPond. If you are unsure of your connection method, please contact your Internet Service Provider.

**Note:** If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Save Settings Don't Save Settings

**INTERNET CONNECTION TYPE**

Choose the mode to be used by the router to connect to the Internet.

My Internet Connection is : Dynamic IP (DHCP)

**DYNAMIC IP (DHCP) INTERNET CONNECTION TYPE :**

Use this Internet connection type if your Internet Service Provider (ISP) didn't provide you with IP Address information and/or a username and password.

Host Name :

Use Unicasting :  (compatibility for some DHCP Servers)

Primary DNS Server :

Secondary DNS Server :

MTU :  (bytes) MTU default = 1500

MAC Address :

Clone Your PC's MAC Address

**WIRELESS**

**Helpful Hints...**

When configuring the router to access the Internet, be sure to choose the correct **Internet Connection Type** from the drop down menu. If you are unsure of which option to choose, contact your **Internet Service Provider (ISP)**.

If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed.

More...

## Dynamic IP Address (DHCP)

**My Internet Connection:** Select **Dynamic IP (DHCP)** to obtain IP Address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.

**Host Name:** The Host Name is optional but may be required by some ISPs.

**Use Unicasting:** Check the box if you are having problems obtaining an IP address from your ISP.

**DNS Addresses:** Enter the Primary DNS server IP address assigned by your ISP.

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1500 is the default MTU.

**MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

**DYNAMIC IP (DHCP) INTERNET CONNECTION TYPE :**

Use this Internet connection type if your Internet Service Provider (ISP) didn't provide you with IP Address information and/or a username and password.

**Host Name :**

**Use Unicasting :**  (compatibility for some DHCP Servers)

**Primary DNS Server :**

**Secondary DNS Server :**

**MTU :**  (bytes) MTU default = 1500

**MAC Address :**



## PPPoE (DSL)

Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

**My Internet Connection:** Select **PPPoE (Username/Password)** from the drop-down menu.

**Address Mode:** Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic**.

**IP Address:** Enter the IP address (Static PPPoE only).

**User Name:** Enter your PPPoE user name.

**Password:** Enter your PPPoE password and then retype the password in the next box.

**Service Name:** Enter the ISP Service Name (optional).

**Reconnection Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**DNS Addresses:** Enter the Primary and Secondary DNS Server Addresses (Static PPPoE only).

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1492 is the default MTU.

**MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

**PPPOE INTERNET CONNECTION TYPE :**

Enter the information provided by your Internet Service Provider (ISP).

**Address Mode :**  Dynamic IP  Static IP

**IP Address :**

**Username :**

**Password :**

**Verify Password :**

**Service Name :**  (optional)

**Reconnect Mode :**  Always on  On demand  Manual

**Maximum Idle Time :**  (minutes, 0=infinite)

**Primary DNS Server :**

**Secondary DNS Server :**

**MTU :**  (bytes) MTU default = 1492

**MAC Address :**

## PPTP

Choose PPTP (Point-to-Point-Tunneling Protocol ) if your ISP uses a PPTP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

**Address Mode:** Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic**.

**PPTP IP Address:** Enter the IP address (Static PPTP only).

**PPTP Subnet Mask:** Enter the Primary and Secondary DNS Server Addresses (Static PPTP only).

**PPTP Gateway:** Enter the Gateway IP Address provided by your ISP.

**PPTP Server IP:** Enter the Server IP provided by your ISP (optional).

**Username:** Enter your PPTP username.

**Password:** Enter your PPTP password and then retype the password in the next box.

**Reconnect Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**DNS Servers:** The DNS server information will be supplied by your ISP (Internet Service Provider.)

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1400 is the default MTU.

**PPTP INTERNET CONNECTION TYPE :**

Enter the information provided by your Internet Service Provider (ISP).

**Address Mode :**  Dynamic IP  Static IP

**PPTP IP Address :**

**PPTP Subnet Mask :**

**PPTP Gateway IP Address :**

**PPTP Server IP Address :**

**Username :**

**Password :**

**Verify Password :**

**Reconnect Mode :**  Always on  On demand  Manual

**Maximum Idle Time :**  (minutes, 0=infinite)

**Primary DNS Server :**

**Secondary DNS Server :**

**MTU :**  (bytes) MTU default = 1400

**MAC Address :**

**MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

## L2TP

Choose L2TP (Layer 2 Tunneling Protocol) if your ISP uses a L2TP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

**Address Mode:** Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic**.

**L2TP IP Address:** Enter the L2TP IP address supplied by your ISP (Static only).

**L2TP Subnet Mask:** Enter the Subnet Mask supplied by your ISP (Static only).

**L2TP Gateway:** Enter the Gateway IP Address provided by your ISP.

**L2TP Server IP:** Enter the Server IP provided by your ISP (optional).

**Username:** Enter your L2TP username.

**Password:** Enter your L2TP password and then retype the password in the next box.

**Reconnect Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**DNS Servers:** Enter the Primary and Secondary DNS Server Addresses (Static L2TP only).

**L2TP INTERNET CONNECTION TYPE :**

Enter the information provided by your Internet Service Provider (ISP).

**Address Mode :**  Dynamic IP  Static IP

**L2TP IP Address :**

**L2TP Subnet Mask :**

**L2TP Gateway IP Address :**

**L2TP Server IP Address :**

**Username :**

**Password :**

**Verify Password :**

**Reconnect Mode :**  Always on  On demand  Manual

**Maximum Idle Time :**  (minutes, 0=infinite)

**Primary DNS Server :**

**Secondary DNS Server :**

**MTU :**  (bytes) MTU default = 1400

**MAC Address :**

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1400 is the default MTU.

**Clone MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

## Static IP Address

Select Static IP Address if all the Internet port's IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

**IP Address:** Enter the IP address assigned by your ISP.

**Subnet Mask:** Enter the Subnet Mask assigned by your ISP.

**Default Gateway:** Enter the Gateway assigned by your ISP.

**DNS Servers:** The DNS server information will be supplied by your ISP (Internet Service Provider.)

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. 1500 is the default MTU.

**MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

**STATIC IP ADDRESS INTERNET CONNECTION TYPE :**

Enter the static address information provided by your Internet Service Provider (ISP).

|                               |  |
|-------------------------------|--|
| <b>IP Address :</b>           | <input type="text" value="0.0.0.0"/>                         |
| <b>Subnet Mask :</b>          | <input type="text" value="255.255.255.0"/>                   |
| <b>Default Gateway :</b>      | <input type="text" value="0.0.0.0"/>                         |
| <b>Primary DNS Server :</b>   | <input type="text" value="0.0.0.0"/>                         |
| <b>Secondary DNS Server :</b> | <input type="text" value="0.0.0.0"/>                         |
| <b>MTU :</b>                  | <input type="text" value="1500"/> (bytes) MTU default = 1500 |
| <b>MAC Address :</b>          | <input type="text" value="00:00:00:00:00:00"/>               |

# Wireless Settings

If you want to configure the wireless settings on your router using the wizard, click **Wireless Connection Setup Wizard** and refer to page 80.

Click **Add Wireless Device with WPS** if you want to add a wireless device using Wi-Fi Protected Setup (WPS) and refer to page 83.

If you want to manually configure the wireless settings on your router click **Manual Wireless Network Setup** and refer to the next page.

**D-Link**

DIR-615 //

INTERNET

WIRELESS SETTINGS

NETWORK SETTINGS

SETUP ADVANCED TOOLS STATUS SUPPORT

**WIRELESS SETTINGS**

The following Web-based wizards are designed to assist you in your wireless network setup and wireless device connection.

Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**WIRELESS NETWORK SETUP WIZARD**

This wizard is designed to assist you in your wireless network setup. It will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure.

Wireless Connection Setup Wizard

**Note:** Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Router.

**ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP) WIZARD**

This wizard is designed to assist you in connecting your wireless device to your router. It will guide you through step-by-step instructions on how to get your wireless device connected. Click the button below to begin.

Add Wireless Device with WPS

**MANUAL WIRELESS NETWORK SETUP**

If your wireless network is already set up with Wi-Fi Protected Setup, manual configuration of the wireless network will destroy the existing wireless network. If you would like to configure the wireless settings of your new D-Link Systems Router manually, then click on the Manual Wireless Network Setup button below.

Manual Wireless Connection Setup

**Helpful Hints...**

If you are new to wireless networking and have never configured a wireless router before, click on **Wireless Connection Setup Wizard** and the router will guide you through a few simple steps to get your wireless network up and running.

If you consider yourself an advanced user and have configured a wireless router before, click **Manual Wireless Connection Setup** to input all the settings manually.

More...

## Manual Wireless Network Setup

**Enable Wireless:** Check the box to enable the wireless function. If you do not want to use wireless, uncheck the box to disable all the wireless functions. Click **Add New** to create your own time schedule to enable the wireless function.

**Wireless Network Name:** Service Set Identifier (SSID) is the name of your wireless network. Create a name using up to 32 characters. The SSID is case-sensitive.

**802.11 Mode:** Select one of the following:

- 802.11g Only** - Select if all of your wireless clients are 802.11g.
- Mixed 802.11g and 802.11b** - Select if you are using both 802.11b and 802.11g wireless clients.
- 802.11b Only** - Select if all of your wireless clients are 802.11b.
- 802.11n Only** - Select only if all of your wireless clients are 802.11n.
- Mixed 802.11n, 802.11b, and 802.11g** - Select if you are using a mix of 802.11n, 11g, and 11b wireless clients.
- Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.

**Enable Auto Channel Scan:** The **Auto Channel Scan** setting can be selected to allow the DIR-615 to choose the channel with the least amount of interference.

### Wireless Channel:

Indicates the channel setting for the DIR-615. By default the channel is set to 6. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network. If you enable **Auto Channel Scan**, this option will be greyed out.

### Transmission Rate:

Select the transmit rate. It is strongly suggested to select **Best (Auto)** for best performance.

**WIRELESS**

Use this section to configure the wireless settings for your D-Link Router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

Save Settings Don't Save Settings

**WIRELESS NETWORK SETTINGS**

Enable Wireless :  Always

Wireless Network Name : dlink (Also called the SSID)

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Enable Auto Channel Scan :

Wireless Channel : 2.437 GHz - CH 6

Transmission Rate : Best (automatic) (Mbit/s)

Channel Width : 20 MHz

Visibility Status :  Visible  Invisible

**WIRELESS SECURITY MODE**

To protect your privacy you can configure wireless security features. This device supports three wireless security modes, including WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

Security Mode : None

**Helpful Hints...**

Changing your Wireless Network Name is the first step in securing your wireless network. Change it to a familiar name that does not contain any personal information.

Enable Auto Channel Scan so that the router can select the best possible channel for your wireless network to operate on.

Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they scan to see what's available. For your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each device.

If you have enabled Wireless Security, make sure you write down the Key or Passphrase that you have configured. You will need to enter this information on any wireless device that you connect to your wireless network.

[More...](#)



**Channel Width:**

Select the Channel Width:

**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.

**20MHz** - Select if you are not using any 802.11n wireless clients. This is the default setting.

**Visibility Status:**

Select **Invisible** if you do not want the SSID of your wireless network to be broadcasted by the DIR-615. If Invisible is selected, the SSID of the DIR-615 will not be seen by Site Survey utilities so your wireless clients will have to know the SSID of your DIR-615 in order to connect to it.

**Wireless Security:**

Refer to page 79 for more information regarding wireless security.

# Network Settings

This section will allow you to change the local network settings of the router and to configure the DHCP settings.

**IP Address:** Enter the IP address of the router. The default IP address is 192.168.0.1.

If you change the IP address, once you click **Apply**, you will need to enter the new IP address in your browser to get back into the configuration utility.

**Subnet Mask:** Enter the Subnet Mask. The default subnet mask is 255.255.255.0.

**Local Domain:** Enter the Domain name (Optional).

**Enable DNS Relay:** Uncheck the box to transfer the DNS server information from your ISP to your computers. If checked, your computers will use the router for a DNS server.

The screenshot displays the D-Link DIR-615 web interface. The top navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'NETWORK SETTINGS' section is active, showing instructions for configuring internal network settings. Below this are sections for 'ROUTER SETTINGS' (with fields for Router IP Address, Subnet Mask, Local Domain Name, and Enable DNS Relay), 'DHCP SERVER SETTINGS' (with fields for Enable DHCP Server, DHCP IP Address Range, DHCP Lease Time, and Always broadcast), and 'ADD DHCP RESERVATION' (with fields for Enable, Computer Name, IP Address, and MAC Address). At the bottom, there is a 'DHCP RESERVATIONS LIST' table and a section for 'NUMBER OF DYNAMIC DHCP CLIENTS : 1' with a table listing client details.

| Enable | Computer Name | MAC Address | IP Address |
|--------|---------------|-------------|------------|
|        |               |             |            |

| NUMBER OF DYNAMIC DHCP CLIENTS : 1 |               |                   |  |
|------------------------------------|---------------|-------------------|--|
| Computer Name                      | IP Address    | MAC Address       | Expire Time  |
| prescott                           | 192.168.0.156 | 00:11:09:2a:94:11 | 23 Hours 18 Minutes <a href="#">Revoke</a> <a href="#">Reserve</a> |

## DHCP Server Settings

DHCP stands for Dynamic Host Control Protocol. The DIR-615 has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to “Obtain an IP Address Automatically.” When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the DIR-615. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

**Enable DHCP Server:** Check this box to enable the DHCP server on your router. Uncheck to disable this function.

**DHCP IP Address Range:** Enter the starting and ending IP addresses for the DHCP server’s IP assignment.

**Note:** If you statically (manually) assign IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.

### DHCP SERVER SETTINGS

Use this section to configure the built-in DHCP Server to assign IP addresses to the computers on your network.

**Enable DHCP Server :**

**DHCP IP Address Range :**  to

**DHCP Lease Time :**  (minutes)

**Always broadcast :**  (compatibility for some DHCP Clients)

**Lease Time:** The length of time for the IP address lease. Enter the Lease time in minutes.

**Always Broadcast:** Enable this function to ensure compatibility with some DHCP clients.

## DHCP Reservation

If you want a computer or device to always have the same IP address assigned, you can create a DHCP reservation. The router will assign the IP address only to that computer or device.

**Note:** This IP address must be within the DHCP IP Address Range.

**Enable:** Check this box to enable the reservation.

**Computer Name:** Enter the computer name or select from the drop-down menu and click <<.

**IP Address:** Enter the IP address you want to assign to the computer or device. This IP Address must be within the DHCP IP Address Range.

**MAC Address:** Enter the MAC address of the computer or device.

**Copy Your PC's MAC Address:** If you want to assign an IP address to the computer you are currently on, click this button to populate the fields.

**Save:** Click **Save** to save your entry. You must click **Save Settings** at the top to activate your reservations.

**Number of Dynamic DHCP Clients:** In this section you can see what LAN devices are currently leasing IP addresses.

**Revoke:** Click **Revoke** to cancel the lease for a specific LAN device and free an entry in the lease table. Do this only if the device no longer needs the leased IP address, because, for example, it has been removed from the network.

**ADD DHCP RESERVATION**

**Enable :**

**Computer Name :**  << Computer Name v

**IP Address :**

**MAC Address :**

---

**DHCP RESERVATIONS LIST**

| Enable | Computer Name | MAC Address | IP Address |  |  |
|--------|---------------|-------------|------------|--|--|
|        |               |             |            |  |  |

---

**NUMBER OF DYNAMIC DHCP CLIENTS : 1**

| Computer Name | IP Address    | MAC Address       | Expire Time         |                        |                         |
|---------------|---------------|-------------------|---------------------|------------------------|-------------------------|
| prescott      | 192.168.0.156 | 00:11:09:2a:94:11 | 23 Hours 18 Minutes | <a href="#">Revoke</a> | <a href="#">Reserve</a> |

**Note:** The Revoke option will not disconnect a PC with a current network session from the network; you would need to use MAC Address Filter to do that. Revoke will only free up a DHCP Address for the very next requester. If the previous owner is still available, those two devices may both receive an IP Address Conflict error, or the second device may still not receive an IP Address; in that case, you may still need to extend the “DHCP IP Address Range” to address the issue, it is located in the DHCP Server section.

**Reserve:** The Reserve option converts this dynamic IP allocation into a DHCP Reservation and adds the corresponding entry to the DHCP Reservations List.

# Virtual Server

The DIR-615 can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The DIR-615 firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the DIR-615 are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling Virtual Server. Depending on the requested service, the DIR-615 redirects the external service request to the appropriate server within the LAN network.

The DIR-615 is also capable of port-redirection meaning incoming traffic to a particular port may be redirected to a different port on the server computer.

Each virtual service that is created will be listed at the bottom of the screen in the Virtual Servers List. There are pre-defined virtual services already in the table. You may use them by enabling them and assigning the server IP to use that particular virtual service.

The screenshot shows the D-Link DIR-615 web interface. The 'VIRTUAL SERVER' section is active, displaying configuration options for a virtual server. Below this, the 'VIRTUAL SERVERS LIST' table is shown with 24 entries. The table has columns for Name, IP Address, Port, Traffic Type, and Schedule. Each row represents a virtual server configuration.

| Name                   | IP Address          | Port           | Traffic Type | Schedule                 |
|------------------------|---------------------|----------------|--------------|--------------------------|
| << Application Name >> | << Computer Name >> | Public Port 0  | Protocol TCP | Schedule Always          |
| << Application Name >> | << Computer Name >> | Private Port 0 | 6            | Inbound Filter Allow All |
| << Application Name >> | << Computer Name >> | Public Port 0  | Protocol TCP | Schedule Always          |
| << Application Name >> | << Computer Name >> | Private Port 0 | 6            | Inbound Filter Allow All |
| << Application Name >> | << Computer Name >> | Public Port 0  | Protocol TCP | Schedule Always          |
| << Application Name >> | << Computer Name >> | Private Port 0 | 6            | Inbound Filter Allow All |
| << Application Name >> | << Computer Name >> | Public Port 0  | Protocol TCP | Schedule Always          |
| << Application Name >> | << Computer Name >> | Private Port 0 | 6            | Inbound Filter Allow All |

Helpful Hints...  
Check the **Application Name** drop down menu for a list of predefined server types. If you select one of the predefined server types, click the arrow button next to the drop down menu to fill out the corresponding field.  
You can select a computer from the list of DHCP clients in the **Computer Name** drop down menu, or you can manually enter the IP address of the computer at which you would like to open the specified port.  
Select a schedule for when the virtual server will be enabled. If you do not see the schedule you need in the list of schedules, go to the **Tools — Schedules** screen and create a new schedule.  
Select a filter that restricts the Internet hosts that can access this virtual server to hosts that you trust. If you do not see the filter you

For a list of ports for common applications, please visit [http://support.dlink.com/faq/view.asp?prod\\_id=1191](http://support.dlink.com/faq/view.asp?prod_id=1191).

This will allow you to open a single port. If you would like to open a range of ports, refer to the next page.

**Name:** Enter a name for the rule or select an application from the drop-down menu. Select an application and click << to populate the fields.

**IP Address:** Enter the IP address of the computer on your local network that you want to allow the incoming service to. If your computer is receiving an IP address automatically from the router (DHCP), your computer will be listed in the “Computer Name” drop-down menu. Select your computer and click <<.

**Private Port/ Public Port:** Enter the port that you want to open next to Private Port and Public Port. The private and public ports are usually the same. The public port is the port seen from the Internet side, and the private port is the port being used by the application on the computer within your local network.

**Protocol Type:** Select **TCP**, **UDP**, or **Both** from the drop-down menu.

**Inbound Filter:** Select **Allow All** (most common) or a created Inbound filter. You may create your own inbound filters in the **Advanced > Inbound Filter** page.

**Schedule:** The schedule of time when the Virtual Server Rule will be enabled. The schedule may be set to Always, which will allow the particular service to always be enabled. You can create your own times in the **Tools > Schedules** section.

| 24 -- VIRTUAL SERVERS LIST |                              |                     |              |               |                             |
|----------------------------|------------------------------|---------------------|--------------|---------------|-----------------------------|
|                            |                              |                     | Port         | Traffic Type  |                             |
| <input type="checkbox"/>   | Name<br><input type="text"/> | << Application Name | Public<br>0  | Both          | Schedule<br>Always          |
|                            | IP Address<br>0.0.0.0        | << Computer Name    | Private<br>0 | Protocol<br>0 | Inbound Filter<br>Allow All |
| <input type="checkbox"/>   | Name<br><input type="text"/> | << Application Name | Public<br>0  | Both          | Schedule<br>Always          |
|                            | IP Address<br>0.0.0.0        | << Computer Name    | Private<br>0 | Protocol<br>0 | Inbound Filter<br>Allow All |
| <input type="checkbox"/>   | Name<br><input type="text"/> | << Application Name | Public<br>0  | Both          | Schedule<br>Always          |
|                            | IP Address<br>0.0.0.0        | << Computer Name    | Private<br>0 | Protocol<br>0 | Inbound Filter<br>Allow All |
| <input type="checkbox"/>   | Name<br><input type="text"/> | << Application Name | Public<br>0  | Both          | Schedule<br>Always          |
|                            | IP Address<br>0.0.0.0        | << Computer Name    | Private<br>0 | Protocol<br>0 | Inbound Filter<br>Allow All |

# Port Forwarding

This will allow you to open a single port or a range of ports.

**Name:** Enter a name for the rule or select an application from the drop-down menu. Select an application and click << to populate the fields.

**IP Address:** Enter the IP address of the computer on your local network that you want to allow the incoming service to. If your computer is receiving an IP address automatically from the router (DHCP), your computer will be listed in the “Computer Name” drop-down menu. Select your computer and click <<.

**TCP/UDP:** Enter the TCP and/or UDP port or ports that you want to open. You can enter a single port or a range of ports. Separate ports with a common.

Example: 24,1009,3000-4000

**Inbound Filter:** Select **Allow All** (most common) or a created Inbound filter. You may create your own inbound filters in the **Advanced > Inbound Filter** page.

**Schedule:** The schedule of time when the Virtual Server Rule will be enabled. The schedule may be set to Always, which will allow the particular service to always be enabled. You can create your own times in the **Tools > Schedules** section.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

VIRTUAL SERVER  
PORT FORWARDING  
APPLICATION RULES  
QOS ENGINE  
NETWORK FILTER  
ACCESS CONTROL  
WEBSITE FILTER  
INBOUND FILTER  
FIREWALL SETTINGS  
ADVANCED WIRELESS  
ADVANCED NETWORK  
IPv6

**PORT FORWARDING RULES :**

This option is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network. This feature allows you to enter ports in various formats including, Port Ranges (100-150), Individual Ports (80, 68, 888), or Mixed (1020-5000, 689).

Save Settings Don't Save Settings

**24 -- PORT FORWARDING RULES**

|                          | Name                | IP Address       | Ports to Open | Schedule  |
|--------------------------|---------------------|------------------|---------------|-----------|
| <input type="checkbox"/> | << Application Name | << Computer Name | 0 TCP         | Always    |
| <input type="checkbox"/> | << Application Name | << Computer Name | 0 UDP         | Allow All |
| <input type="checkbox"/> | << Application Name | << Computer Name | 0 TCP         | Always    |
| <input type="checkbox"/> | << Application Name | << Computer Name | 0 UDP         | Allow All |
| <input type="checkbox"/> | << Application Name | << Computer Name | 0 TCP         | Always    |
| <input type="checkbox"/> | << Application Name | << Computer Name | 0 UDP         | Allow All |

**Helpful Hints...**

Check the **Application Name** drop down menu for a list of predefined applications. If you select one of the predefined applications, click the arrow button next to the drop down menu to fill out the corresponding field.

You can select a computer from the list of DHCP clients in the **Computer Name** drop down menu, or you can manually enter the IP address of the LAN computer to which you would like to open the specified port.

Select a schedule for when the rule will be enabled. If you do not see the schedule you need in the list of schedules, go to the **Tools -- Schedules** screen and create a new schedule.

You can enter ports in various formats:  
Range (50-100) Individual (80, 68, 888) Mixed (1020-5000, 689)

**More...**



# Application Rules

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the DIR-615. If you need to run applications that require multiple connections, specify the port normally associated with an application in the “Trigger Port” field, select the protocol type as TCP or UDP, then enter the firewall (public) ports associated with the trigger port to open them for inbound traffic.

The DIR-615 provides some predefined applications in the table on the bottom of the web page. Select the application you want to use and enable it.

**Name:** Enter a name for the rule. You may select a pre-defined application from the drop-down menu and click <<.

**Trigger:** This is the port used to trigger the application. It can be either a single port or a range of ports.

**Traffic Type:** Select the protocol of the trigger port (TCP, UDP, or Both).

**Firewall:** This is the port number on the Internet side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.

**Traffic Type:** Select the protocol of the firewall port (TCP, UDP, or Both).

**Schedule:** The schedule of time when the Application Rule will be enabled. The schedule may be set to Always, which will allow the particular service to always be enabled. You can create your own times in the **Tools > Schedules** section.

**APPLICATION RULES**

This option is used to open single or multiple ports on your router when the router senses data sent to the Internet on a "trigger" port or port range. Special Applications rules apply to all computers on your internal network.

Save Settings Don't Save Settings

|                          | Name | Application         | Port                    | Traffic Type | Schedule |
|--------------------------|------|---------------------|-------------------------|--------------|----------|
| <input type="checkbox"/> |      | << Application Name | Trigger 0<br>Firewall 0 | TCP          | Always   |
| <input type="checkbox"/> |      | << Application Name | Trigger 0<br>Firewall 0 | TCP          | Always   |
| <input type="checkbox"/> |      | << Application Name | Trigger 0<br>Firewall 0 | TCP          | Always   |
| <input type="checkbox"/> |      | << Application Name | Trigger 0<br>Firewall 0 | TCP          | Always   |

**Helpful Hints...**

Use this feature if you are trying to execute one of the listed network applications and it is not communicating as expected.

Check the **Application Name** drop down menu for a list of predefined applications. If you select one of the predefined applications, click the arrow button next to the drop down menu to fill out the corresponding field.

Select a schedule for when the service will be enabled. If you do not see the schedule you need in the list of schedules, go to the **Tools > Schedules** screen and create a new schedule.

[More...](#)

# QoS Engine

The QoS Engine option helps improve your network gaming performance by prioritizing applications. By default the QoS Engine settings are disabled and application priority is not classified automatically.

**Enable QoS Engine:** This option is disabled by default. Enable this option for better performance and experience with online games and other interactive applications, such as VoIP.

**Automatic Uplink Speed:** This option is enabled by default when the QoS Engine option is enabled. This option will allow your router to automatically determine the uplink speed of your Internet connection.

**Measured Uplink Speed:** This displays the detected uplink speed.

**Manual Uplink Speed:** The speed at which data can be transferred from the router to your ISP. This is determined by your ISP. ISP's offer speed as a download/upload pair. For example, 1.5Mbps/284Kbits. Using this example, you would enter 284. Alternatively you can test your uplink speed with a service such as [www.dslreports.com](http://www.dslreports.com).

The screenshot shows the D-Link DIR-615 web interface. The main navigation bar includes 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'ADVANCED' tab is selected, and the 'QoS ENGINE' option is highlighted in the left sidebar. The main content area is titled 'QoS ENGINE' and contains the following text: 'Use this section to configure D-Link's QoS Engine. The QoS Engine improves your online gaming experience by ensuring that your game traffic is prioritized over other network traffic, such as FTP or Web.' Below this text are two buttons: 'Save Settings' and 'Don't Save Settings'. The 'WAN TRAFFIC SHAPING' section is expanded, showing the following settings:

- Enable QoS Engine:
- Automatic Uplink Speed:
- Measured Uplink Speed: Not Estimated
- Manual Uplink Speed: 128 kbps <<  kbps <<

On the right side of the interface, there is a 'Helpful Hints...' section with the following text: 'If the Measured Uplink Speed is known to be incorrect (that is, it produces suboptimal performance), disable Automatic Uplink Speed and enter the Manual Uplink Speed. Some experimentation and performance measurement may be required to converge on the optimal value.' A 'More...' link is also present.

# Network Filters

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

**Configure MAC Filtering:** Select Turn MAC Filtering Off, allow MAC addresses listed below, or deny MAC addresses listed below from the drop-down menu.

**MAC Address:** Enter the MAC address you would like to filter.  
To find the MAC address on a computer, please refer to the Networking Basics section in this manual.

**DHCP Client:** Select a DHCP client from the drop-down menu and click << to copy that MAC Address.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

**MAC ADDRESS FILTER**

The MAC (Media Access Controller) Address filter option is used to control network access based on the MAC Address of the network adapter. A MAC address is a unique ID assigned by the manufacturer of the network adapter. This feature can be configured to ALLOW or DENY network/Internet access.

Save Settings Don't Save Settings

**24 --- MAC FILTERING RULES**

Configure MAC Filtering below:  
Turn MAC Filtering OFF

| MAC Address       | << | DHCP Client List | Clear |
|-------------------|----|------------------|-------|
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |
| 00:00:00:00:00:00 | << | Computer Name    | Clear |

**Helpful Hints...**  
Create a list of MAC addresses that you would either like to allow or deny access to your network.  
Computers that have obtained an IP address from the router's DHCP server will be in the DHCP Client List. Select a device from the drop down menu, then click the arrow to add that device's MAC address to the list.  
Click the **Clear** button to remove the MAC address from the MAC Filtering list.  
[More...](#)

## Access Control

The Access Control section allows you to control access in and out of your network. Use this feature as Parental Controls to only grant access to approved sites, limit web access based on time or dates, and/or block access from applications like P2P utilities or games.

**Add Policy:** Check the **Enable Access Control** check box and click the **Add Policy** button to start the **Access Control Wizard**.



## Access Control Wizard

Click **Next** to continue with the wizard.

The screenshot shows the 'STEP 1: CHOOSE POLICY NAME' screen of the Access Control Wizard. The main heading is 'STEP 1: CHOOSE POLICY NAME'. Below it, the instruction reads 'Choose a unique name for your policy.' There is a text input field labeled 'Policy Name :' containing the text 'Example 1'. At the bottom of the screen, there are four buttons: 'Prev', 'Next', 'Save', and 'Cancel'.

## Access Control Wizard (continued)

Enter a name for the policy and then click **Next** to continue.

**STEP 1: CHOOSE POLICY NAME**

Choose a unique name for your policy.

Policy Name :

Select a schedule (I.E. Always) from the drop-down menu and then click **Next** to continue.

**STEP 2: SELECT SCHEDULE**

Choose a schedule to apply to this policy.

Details :

Enter the following information and then click **Next** to continue.

- Address Type - Select IP address, MAC address, or Other Machines.
- IP Address - Enter the IP address of the computer you want to apply the rule to.

**STEP 3: SELECT MACHINE**



Select the machine to which this policy applies.

Specify a machine with its IP or MAC address, or select "Other Machines" for machines that do not have a policy.

Address Type :  IP  MAC  Other Machines

IP Address :  <<

Machine Address :  <<

| Machine       |   |   |
|---------------|---|---|
| 192.168.0.100 |  |  |

## Access Control Wizard (continued)

Select the filtering method and then click **Next** to continue.

**STEP 4: SELECT FILTERING METHOD**

Select the method for filtering.

Method :  Log Web Access Only  Block All Access  Block Some Access

Apply Web Filter :

Apply Advanced Port Filters :

Enter the rule:

**Enable** - Check to enable the rule.

**Name** - Enter a name for your rule.

**Dest IP Start** - Enter the starting IP address.

**Dest IP End** - Enter the ending IP address.

**Protocol** - Select the protocol.

**Dest Port Start** - Enter the starting port number.

**Dest Port End** - Enter the ending port number.

**STEP 5: PORT FILTER**

Add Port Filters Rules.

Specify rules to prohibit access to specific IP addresses and ports.

| Enable                   | Name                 | Dest IP Start                        | Dest IP End                                  | Protocol                         | Dest Port Start                | Dest Port End                      |
|--------------------------|----------------------|--------------------------------------|--|----------------------------------|--------------------------------|------------------------------------|
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |
| <input type="checkbox"/> | <input type="text"/> | <input type="text" value="0.0.0.0"/> | <input type="text" value="255.255.255.255"/> | <input type="text" value="Any"/> | <input type="text" value="0"/> | <input type="text" value="65535"/> |

To enable web logging, click Enable.

Click **Save** to save the access control rule.

**STEP 6: CONFIGURE WEB ACCESS LOGGING**

Web Access Logging :  Disabled  Enabled

## Website Filters

Website Filters are used to allow you to set up a list of allowed Web sites that can be used by multiple users through the network. To use this feature select to **Allow** or **Deny**, enter the domain or website and click **Add**, and then click **Save Settings**. You must also select **Apply Web Filter** under the Access Control section (page 40).

**Configure Website Filter Below:** Select **Deny** or **Allow** computers access to only these sites.

**Clear the list below:** Click to delete all entries in the list.

**Website URL/Domain:** Enter the keywords or URLs that you want to allow or deny.

The screenshot displays the D-Link DIR-615 web interface. The top navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The left sidebar lists various configuration sections: VIRTUAL SERVER, PORT FORWARDING, APPLICATION RULES, QOS ENGINE, NETWORK FILTER, ACCESS CONTROL, WEBSITE FILTER (highlighted), INBOUND FILTER, FIREWALL SETTINGS, ADVANCED WIRELESS, ADVANCED NETWORK, and IPv6.

The main content area is titled 'WEBSITE FILTER' and contains the following text: 'The Website Filter option allows you to set up a list of Web sites you would like to allow or deny through your network. To us this feature, you must also select the "Apply Web Filter" checkbox in the Access Control section.' Below this text are two buttons: 'Save Settings' and 'Don't Save Settings'.

Below the main text is a section titled '40 - WEBSITE FILTERING RULES'. It includes the instruction 'Configure Website Filter below:' followed by a dropdown menu set to 'DENY computers access to ONLY these sites'. A 'Clear the list below...' button is also present.

At the bottom of this section is a table with the header 'Website URL/Domain'. The table has two columns and several empty rows for data entry.

On the right side of the interface, there is a 'Helpful Hints...' section with the text: 'Create a list of Web Sites to which you would like to deny or allow through the network. Use with **Advanced** → **Access Control**. More...'

# Inbound Filters

The Inbound Filter option is an advanced method of controlling data received from the Internet. With this feature you can configure inbound data filtering rules that control data based on an IP address range. Inbound Filters can be used with Virtual Server, Port Forwarding, or Remote Administration features.

**Name:** Enter a name for the inbound filter rule.

**Action:** Select **Allow** or **Deny**.

**Enable:** Check to enable rule.

**Source IP Start:** Enter the starting IP address. Enter 0.0.0.0 if you do not want to specify an IP range.

**Source IP End:** Enter the ending IP address. Enter 255.255.255.255 if you do not want to specify and IP range.

**Save:** Click the **Save** button to apply your settings. You must click Save Settings at the top to save the settings.

**Inbound Filter Rules List:** This section will list any rules that are created. You may click the **Edit** icon to change the settings or enable/disable the rule, or click the **Delete** icon to remove the rule.

The screenshot shows the D-Link DIR-615 web interface. The top navigation bar includes 'DIR-615 //', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The left sidebar lists various configuration options: VIRTUAL SERVER, PORT FORWARDING, APPLICATION RULES, QOS ENGINE, NETWORK FILTER, ACCESS CONTROL, WEBSITE FILTER, INBOUND FILTER (selected), FIREWALL SETTINGS, ADVANCED WIRELESS, ADVANCED NETWORK, and IPv6.

The main content area is titled 'INBOUND FILTER' and contains the following text:
   
The Inbound Filter option is an advanced method of controlling data received from the Internet. With this feature you can configure inbound data filtering rules that control data based on an IP address range.
   
Inbound Filters can be used for limiting access to a server on your network to a system or group of systems. Filter rules can be used with Virtual Server, Port Forwarding, or Remote Administration features.

Below this text is the 'ADD INBOUND FILTER RULE' section, which includes:
   
Name: [Text Input]
   
Action: Allow (Dropdown)
   
Remote IP Range: [Table with 3 columns: Enable, Remote IP Start, Remote IP End]

| Enable                   | Remote IP Start | Remote IP End   |
|--------------------------|-----------------|-----------------|
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |
| <input type="checkbox"/> | 0.0.0.0         | 255.255.255.255 |

At the bottom of the 'ADD INBOUND FILTER RULE' section are 'Add' and 'Clear' buttons.

The 'HELPFUL HINTS...' sidebar on the right contains the following text:
   
Give each rule a Name that is meaningful to you.
   
Each rule can either Allow or Deny access from the WAN.
   
Up to eight ranges of WAN IP addresses can be controlled by each rule. The checkbox by each IP range can be used to disable ranges already defined.
   
The starting and ending IP addresses are WAN-side address.
   
Click the Add or Update button to store a finished rule in the Rules List below.
   
Click the Edit icon in the Rules List to change a rule.
   
Click the Delete icon in the Rules List to permanently remove a rule.
   
More...



# Firewall Settings

A firewall protects your network from the outside world. The D-Link DIR-615 offers a firewall type functionality. The SPI feature helps prevent cyber attacks. Sometimes you may want a computer exposed to the outside world for certain types of applications. If you choose to expose a computer, you can enable DMZ. DMZ is short for Demilitarized Zone. This option will expose the chosen computer completely to the outside world.

**Enable SPI:** SPI (Stateful Packet Inspection, also known as dynamic packet filtering) helps to prevent cyber attacks by tracking more state per session. It validates that the traffic passing through the session conforms to the protocol.

**NAT Endpoint Filtering:** Select one of the following for TCP and UDP ports:  
**Endpoint Independent** - Any incoming traffic sent to an open port will be forwarded to the application that opened the port. The port will close if idle for 5 minutes.

**Address Restricted** - Incoming traffic must match the IP address of the outgoing connection.

**Address + Port Restriction** - Incoming traffic must match the IP address and port of the outgoing connection.

**Enable Anti-Spoof Checking:** Enable this option to provide protection from certain kinds of “spoofing” attacks.

**Enable DMZ Host:** If an application has trouble working from behind the router, you can expose one computer to the Internet and run the application on that computer.

**Note:** Placing a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.

**IP Address:** Specify the IP address of the computer on the LAN that you want to have unrestricted Internet communication. If this computer obtains its IP address automatically using DHCP, be sure to make a static reservation on the **System > Network Settings** page so that the IP address of the DMZ machine does not change.

The screenshot displays the D-Link DIR-615 Firewall Settings interface. The main content area is titled "FIREWALL SETTINGS" and includes the following sections:

- Enable SPI:** A checkbox that is currently unchecked.
- NAT ENDPOINT FILTERING:**
  - UDP Endpoint Filtering:** Radio buttons for Endpoint Independent, Address Restricted (selected), and Port And Address Restricted.
  - TCP Endpoint Filtering:** Radio buttons for Endpoint Independent, Address Restricted, and Port And Address Restricted (selected).
- ANTI-SPOOF CHECKING:** A checkbox for "Enable anti-spoof checking" which is unchecked.
- DMZ HOST:**
  - A checkbox for "Enable DMZ Host" which is unchecked.
  - A field for "DMZ IP Address" with the value "0.0.0.0" and a dropdown menu for "Computer Name".

On the right side, there is a "Helpful Hints..." section with text explaining the DMZ option and a "More..." link.

# Advanced Wireless Settings

**Transmit Power:** Set the transmit power of the antennas.

**Beacon Period:** Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. 100 is the default setting and is recommended.

**RTS Threshold:** This value should remain at its default setting of 2432. If inconsistent data flow is a problem, only a minor modification should be made.

**Fragmentation Threshold:** The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

**DTIM Interval:** (Delivery Traffic Indication Message) 3 is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

**WLAN Partition:** This enables 802.11d operation. 802.11d is a wireless specification developed to allow implementation of wireless networks in countries that cannot use the 802.11 standard. This feature should only be enabled if you are in a country that requires it.

**WMM Enable:** WMM is QoS for your wireless network. This will improve the quality of video and voice applications for your wireless clients.

**Short GI:** Check this box to reduce the guard interval time therefore increasing the data capacity. However, it's less reliable and may create higher data loss.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

**ADVANCED WIRELESS**

If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings.

Save Settings Don't Save Settings

**ADVANCED WIRELESS SETTINGS**

Transmit Power : High

Beacon Period : 100 (20..1000)

RTS Threshold : 2346 (0..2347)

Fragmentation : 2346 (256..2346)

DTIM Interval : 1 (1..255)

WLAN Partition :

WMM Enable :

Short GI :

**Helpful Hints...**

It is recommended that you leave these parameters at their default values. Adjusting them could limit the performance of your wireless network.

Use **802.11d** only for countries where it is required.

Enabling **WMM** can help control latency and jitter when transmitting multimedia content over a wireless connection.

[More...](#)

# Advanced Network Settings

**UPnP Settings:** To use the Universal Plug and Play (UPnP™) feature click on **Enabled**. UPnP provides compatibility with networking equipment, software and peripherals.

**WAN Ping:** Unchecking the box will not allow the DIR-615 to respond to pings. Blocking the Ping may provide some extra security from hackers. Check the box to allow the Internet port to be “pinged”.

**WAN Port Speed:** You may set the port speed of the Internet port to 10Mbps, 100Mbps, or auto. Some older cable or DSL modems may require you to set the port speed to 10Mbps.

**Multicast Streams:** Check the box to allow multicast traffic to pass through the router from the Internet.

The screenshot displays the D-Link DIR-615 Advanced Network Settings interface. The left sidebar lists various configuration categories, with 'ADVANCED NETWORK' selected. The main content area is divided into several sections:

- ADVANCED NETWORK:** A warning message states, "If you are not familiar with these Advanced Network settings, please read the help section before attempting to modify these settings." Below this are 'Save Settings' and 'Don't Save Settings' buttons.
- UPNP:** The section title is 'Universal Plug and Play (UPnP) supports peer-to-peer Plug and Play functionality for network devices.' The 'Enable UPnP' checkbox is checked.
- WAN PING:** A warning message states, "If you enable this feature, the WAN port of your router will respond to ping requests from the Internet that are sent to the WAN IP Address." The 'Enable WAN Ping Respond' checkbox is checked. The 'WAN Ping Inbound Filter' is set to 'Allow All'.
- WAN PORT SPEED:** The 'WAN Port Speed' is set to '10/100Mbps Auto'.
- MULTICAST STREAMS:** The 'Enable Multicast Streams' checkbox is checked.

On the right side, there is a 'Helpful Hints...' section with additional information:

- UPnP helps other UPnP LAN hosts interoperate with the router.** Leave the UPnP option enabled as long as the LAN has other UPnP applications.
- For added security, it is recommended that you disable the WAN Ping Respond option.** Ping is often used by malicious Internet users to locate active networks or PCs.
- The WAN speed is usually detected automatically.** If you are having problems connecting to the WAN, try selecting the speed manually.
- If you are having trouble receiving multicast streams from the Internet, make sure the Multicast Streams option is enabled.**

# IPv6

**Enable IPv6:** Check to enable IPv6.

**IPv6 Connection Type:** Select the IPv6 configuration type from the drop-down box.

**LAN IPv6 Address Settings:** Displays the IPv6 address of the router.

The screenshot displays the IPv6 configuration page of a D-Link DIR-655 router. The interface includes a navigation menu on the left with categories like VIRTUAL SERVER, PORT FORWARDING, APPLICATION RULES, QOS ENGINE, NETWORK FILTER, ACCESS CONTROL, WEBSITE FILTER, INBOUND FILTER, FIREWALL SETTINGS, ROUTING, ADVANCED WIRELESS, WISH, WFI-PROTECTED SETUP, and ADVANCED NETWORK. The main content area is titled 'IPv6' and contains the following sections:

- IPv6:** A header section with a sub-header 'IPv6' and a description: 'Use this section to configure your IPv6 Connection type. If you are unsure of your connection method, please contact your Internet Service Provider.' Below this are 'Save Settings' and 'Don't Save Settings' buttons.
- Enable IPv6:** A section with the label 'Enable IPv6' and a checkbox that is currently unchecked.
- IPv6 CONNECTION TYPE:** A section with the instruction 'Choose the mode to be used by the router to connect to the IPv6 Internet.' Below this is a dropdown menu labeled 'My IPv6 Connection is:' with 'link-local only' selected.
- LAN IPv6 ADDRESS SETTING:** A section with the instruction 'Use this section to configure the internal network settings of your router. The LAN IPv6 Link-Local Address is the IPv6 Address that you use to access the Web-based management interface.' Below this, the 'LAN IPv6 Link-Local Address' is displayed as 'FE80::2AA:00FF:FE3F:2A1C/64'.

On the right side of the interface, there is a 'Support' section with 'Helpful Hints...'. The hints include: 'When configuring the router to access the IPv6 Internet, be sure to choose the correct IPv6 Connection Type from the drop-down menu. If you are unsure of which option to choose, contact your Internet Service Provider (ISP). If you are having trouble accessing the IPv6 Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed.'

## Link-Local Connectivity

**My IPv6 Connection:** Select **Link-Local Only** from the drop-down menu.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

The screenshot shows the D-Link DIR-615 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar lists various configuration options, with IPv6 selected. The main content area is titled 'IPv6' and contains the following sections:

- IPv6:** A header section with a description: "Use this section to configure your IPv6 Connection type. If you are unsure of your connection method, please contact your Internet Service Provider." Below this are two buttons: "Save Settings" and "Don't Save Settings".
- IPv6 CONNECTION TYPE:** A section with the instruction "Choose the mode to be used by the router to the IPv6 Internet." Below this, a dropdown menu is set to "Link-local only".
- LAN IPv6 ADDRESS SETTINGS:** A section with the instruction "Use this section to configure the internal network settings of your router." Below this, the "LAN IPv6 Link-Local Address" is displayed as "FE80::240:F4FF:FE03:1A9C/64".

On the right side of the interface, there is a "Helpful Hints..." section with the following text:

When configuring the router to access the IPv6 Internet, be sure to choose the correct IPv6 Connection Type from the drop down menu. If you are unsure of which option to choose, contact your Internet Service Provider (ISP).

If you are having trouble accessing the IPv6 Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed.

[More...](#)

## Static IPv6 (Stateful)

**My IPv6 Connection:** Select **Static IPv6** from the drop-down menu.

**WAN IPv6 Address Settings:** Enter the address settings supplied by your Internet provider (ISP).

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)** or **Stateless**. Refer to the next page for Stateless.

**IPv6 Address Range Start:** Enter the start IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Range End:** Enter the end IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Lifetime:** Enter the IPv6 Address Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |   |
|---|---|
| Choose the mode to be used by the router to the IPv6 Internet.  |   |
| My IPv6 Connection is :   | Static IPv6 ▾                                   |
| WAN IPv6 ADDRESS SETTINGS :   |   |
| Enter the IPv6 address information provided by your Internet Service Provider (ISP).  |   |
| IPv6 Address :  | <input type="text"/>                            |
| Subnet Prefix Length :  | <input type="text"/>                            |
| Default Gateway :   | <input type="text"/>                            |
| Primary DNS Address :   | <input type="text"/>                            |
| Secondary DNS Address :   | <input type="text"/>                            |
| LAN IPv6 ADDRESS SETTINGS :   |   |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |   |
| LAN IPv6 Address :  | <input type="text"/> /64                        |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64                     |
| ADDRESS AUTOCONFIGURATION SETTINGS  |   |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |   |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/>             |
| Autoconfiguration Type :  | Stateful (DHCPv6) ▾                             |
| IPv6 Address Range(Start):  | <input type="text"/> : <input type="text"/> /64 |
| IPv6 Address Range(End):  | <input type="text"/> : <input type="text"/> /64 |
| IPv6 Address Lifetime:  | 30 <input type="text"/> (minutes)               |

## Static IPv6 (Stateless)

**My IPv6 Connection:** Select **Static IPv6** from the drop-down menu.

**WAN IPv6 Address Settings:** Enter the address settings supplied by your Internet provider (ISP).

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateless**. Refer to the previous page for Stateful.

**Router Advertisement Lifetime:** Enter the Router Advertisement Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |                                     |
|---|-------------------------------------|
| Choose the mode to be used by the router to the IPv6 Internet.  |                                     |
| My IPv6 Connection is :   | Static IPv6 ▾                       |
| WAN IPv6 ADDRESS SETTINGS :   |                                     |
| Enter the IPv6 address information provided by your Internet Service Provider (ISP).  |                                     |
| IPv6 Address :  | <input type="text"/>                |
| Subnet Prefix Length :  | <input type="text"/>                |
| Default Gateway :   | <input type="text"/>                |
| Primary DNS Address :   | <input type="text"/>                |
| Secondary DNS Address :   | <input type="text"/>                |
| LAN IPv6 ADDRESS SETTINGS :   |                                     |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |                                     |
| LAN IPv6 Address :  | <input type="text"/> /64            |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64         |
| ADDRESS AUTOCONFIGURATION SETTINGS  |                                     |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |                                     |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/> |
| Autoconfiguration Type :  | Stateless ▾                         |
| Router Advertisement Lifetime:  | 30 <input type="text"/> (minutes)   |

## DHCPv6 (Stateful)

**My IPv6 Connection:** Select **DHCPv6** from the drop-down menu.

**IPv6 DNS Settings:** Select either **Obtain DNS server address automatically** or **Use the following DNS Address**.

**Primary/Secondary DNS Address:** Enter the primary and secondary DNS server addresses.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)** or **Stateless**. Refer to the next page for Stateless.

**IPv6 Address Range Start:** Enter the start IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Range End:** Enter the end IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Lifetime:** Enter the IPv6 Address Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |  |
|---|--|
| Choose the mode to be used by the router to the IPv6 Internet.  |  |
| My IPv6 Connection is :   | <input type="text" value="DHCPv6"/>            |
| IPv6 DNS SETTINGS :   |  |
| Obtain DNS server address automatically or enter a specific DNS server address.   |  |
| <input checked="" type="radio"/>  | Obtain DNS server address automatically        |
| <input type="radio"/>   | Use the following DNS address                  |
| Primary DNS Address :   | <input type="text"/>                           |
| Secondary DNS Address :   | <input type="text"/>                           |
| LAN IPv6 ADDRESS SETTINGS :   |  |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |  |
| LAN IPv6 Address :  | <input type="text"/> /64                       |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64                    |
| ADDRESS AUTOCONFIGURATION SETTINGS  |  |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |  |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/>            |
| Autoconfiguration Type :  | <input type="text" value="Stateful (DHCPv6)"/> |
| IPv6 Address Range(Start):  | <input type="text"/> :: <input type="text"/>   |
| IPv6 Address Range(End):  | <input type="text"/> :: <input type="text"/>   |
| IPv6 Address Lifetime:  | <input type="text" value="30"/> (minutes)      |



## DHCPv6 (Stateless)

**My IPv6 Connection:** Select **DHCPv6** from the drop-down menu.

**IPv6 DNS Settings:** Select either **Obtain DNS server address automatically** or **Use the following DNS Address**.

**Primary/Secondary DNS Address:** Enter the primary and secondary DNS server addresses.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateless**. Refer to the previous page for Stateful.

**Router Advertisement Lifetime:** Enter the Router Advertisement Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |   |
|---|---|
| Choose the mode to be used by the router to the IPv6 Internet.  |   |
| My IPv6 Connection is :   | <input type="text" value="DHCPv6"/>   |
| IPv6 DNS SETTINGS :   |   |
| Obtain DNS server address automatically or enter a specific DNS server address.   |   |
|   | <input checked="" type="radio"/> Obtain DNS server address automatically<br><input type="radio"/> Use the following DNS address |
| Primary DNS Address :   | <input type="text"/>  |
| Secondary DNS Address :   | <input type="text"/>  |
| LAN IPv6 ADDRESS SETTINGS :   |   |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |   |
| LAN IPv6 Address :  | <input type="text"/> /64  |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64   |
| ADDRESS AUTOCONFIGURATION SETTINGS  |   |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |   |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/>   |
| Autoconfiguration Type :  | <input type="text" value="Stateless"/>  |
| Router Advertisement Lifetime:  | <input type="text" value="30"/> (minutes)   |

## IPv6 over PPPoE (Stateful)

**My IPv6 Connection:** Select **PPPoE** from the drop-down menu.

**PPPoE:** Enter the PPPoE account settings supplied by your Internet provider (ISP).

**Address Mode:** Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic**.

**IP Address:** Enter the IP address (Static PPPoE only).

**User Name:** Enter your PPPoE user name.

**Password:** Enter your PPPoE password and then retype the password in the next box.

**Service Name:** Enter the ISP Service Name (optional).

**Reconnection Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**IPv6 DNS Settings:** Select either **Obtain DNS server address automatically** or **Use the following DNS Address**.

**Primary/Secondary DNS Address:** Enter the primary and secondary DNS server addresses.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**IPv6 CONNECTION TYPE**

Choose the mode to be used by the router to the IPv6 Internet.

My IPv6 Connection is : PPPoE

---

**PPPOE :**

Enter the information provided by your Internet Service Provider (ISP).

Address Mode :  Dynamic IP  Static IP

IP Address :

User Name :

Password :

Verify Password :

Service Name :  (optional)

Reconnect Mode :  Always on  On demand  Manual

Maximum Idle Time :  (minutes, 0=infinite)

MTU :  (bytes)

---

**IPv6 DNS SETTINGS :**

Obtain DNS server address automatically or enter a specific DNS server address.

Obtain DNS server address automatically

Use the following DNS address

Primary DNS Address :

Secondary DNS Address :

---

**LAN IPv6 ADDRESS SETTINGS :**

Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again.

LAN IPv6 Address :  /64

LAN IPv6 Link-Local Address : **FE80::240:F4FF:FE03:1A9C/64**

---

**ADDRESS AUTOCONFIGURATION SETTINGS**

Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.

Enable Autoconfiguration :

Autoconfiguration Type : Stateful (DHCPv6)

IPv6 Address Range(Start):  ::

IPv6 Address Range(End):  ::

IPv6 Address Lifetime:  (minutes)

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)** or **Stateless**. Refer to the next page for Stateless.

**IPv6 Address Range Start:** Enter the start IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Range End:** Enter the end IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Lifetime:** Enter the IPv6 Address Lifetime (in minutes).

## IPv6 over PPPoE (Stateless)

**My IPv6 Connection:** Select **PPPoE** from the drop-down menu.

**PPPoE:** Enter the PPPoE account settings supplied by your Internet provider (ISP).

**Address Mode:** Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic**.

**IP Address:** Enter the IP address (Static PPPoE only).

**User Name:** Enter your PPPoE user name.

**Password:** Enter your PPPoE password and then retype the password in the next box.

**Service Name:** Enter the ISP Service Name (optional).

**Reconnection Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**IPv6 DNS Settings:** Select either **Obtain DNS server address automatically** or **Use the following DNS Address**.

**Primary/Secondary DNS Address:** Enter the primary and secondary DNS server addresses.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**IPv6 CONNECTION TYPE**

Choose the mode to be used by the router to the IPv6 Internet.

My IPv6 Connection is : PPPoE

---

**PPPOE :**

Enter the information provided by your Internet Service Provider (ISP).

Address Mode :  Dynamic IP  Static IP

IP Address :

User Name :

Password :

Verify Password :

Service Name :  (optional)

Reconnect Mode :  Always on  On demand  Manual

Maximum Idle Time :  (minutes, 0=infinite)

MTU :  (bytes)

---

**IPv6 DNS SETTINGS :**

Obtain DNS server address automatically or enter a specific DNS server address.

Obtain DNS server address automatically

Use the following DNS address

Primary DNS Address :

Secondary DNS Address :

---

**LAN IPv6 ADDRESS SETTINGS :**

Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again.

LAN IPv6 Address :  /64

LAN IPv6 Link-Local Address : **FE80::240:F4FF:FE03:1A9C/64**

---

**ADDRESS AUTOCONFIGURATION SETTINGS**

Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.

Enable Autoconfiguration :

Autoconfiguration Type : Stateless

Router Advertisement Lifetime:  (minutes)

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)** or **Stateless**.

**Router Advertisement Lifetime:** Enter the Router Advertisement Lifetime (in minutes).

## 6 to 4 Tunneling (Stateful)

**My IPv6 Connection:** Select **6 to 4** from the drop-down menu.

**6 to 4 Settings:** Enter the IPv6 settings supplied by your Internet provider (ISP).

**Primary/Secondary DNS Address:** Enter the primary and secondary DNS server addresses.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)** or **Stateless**. Refer to the next page for Stateless.

**IPv6 Address Range Start:** Enter the start IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Range End:** Enter the end IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Lifetime:** Enter the IPv6 Address Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |                                       |
|---|---------------------------------------|
| Choose the mode to be used by the router to the IPv6 Internet.  |                                       |
| My IPv6 Connection is :   | 6 to 4                                |
| 6to4 SETTINGS :   |                                       |
| Enter the IPv6 address information provided by your Internet Service Provider (ISP).  |                                       |
| 6to4 Address :  | 0:0:0:0:0:0:0                         |
| Primary DNS Address :   | <input type="text"/>                  |
| Secondary DNS Address :   | <input type="text"/>                  |
| LAN IPv6 ADDRESS SETTINGS :   |                                       |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |                                       |
| LAN IPv6 Address :  | 2002:0:0:0001 ::1/64                  |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64           |
| ADDRESS AUTOCONFIGURATION SETTINGS  |                                       |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |                                       |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/>   |
| Autoconfiguration Type :  | Stateful (DHCPv6)                     |
| IPv6 Address Range(Start):  | 2002:0:0:0001 :: <input type="text"/> |
| IPv6 Address Range(End):  | 2002:0:0:0001 :: <input type="text"/> |
| IPv6 Address Lifetime:  | 30 (minutes)                          |

## 6 to 4 Tunneling (Stateless)

**My IPv6 Connection:** Select **6 to 4** from the drop-down menu.

**6 to 4 Settings:** Enter the IPv6 settings supplied by your Internet provider (ISP).

**Primary/Secondary DNS Address:** Enter the primary and secondary DNS server addresses.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateless**. Refer to the previous page for Stateful.

**Router Advertisement Lifetime:** Enter the Router Advertisement Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |                                     |
|---|-------------------------------------|
| Choose the mode to be used by the router to the IPv6 Internet.  |                                     |
| My IPv6 Connection is :   | 6 to 4                              |
| 6to4 SETTINGS :   |                                     |
| Enter the IPv6 address information provided by your Internet Service Provider (ISP).  |                                     |
| 6to4 Address :  | 0:0:0:0:0:0:0                       |
| Primary DNS Address :   | <input type="text"/>                |
| Secondary DNS Address :   | <input type="text"/>                |
| LAN IPv6 ADDRESS SETTINGS :   |                                     |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |                                     |
| LAN IPv6 Address :  | 2002:0:0:0001::1/64                 |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64         |
| ADDRESS AUTOCONFIGURATION SETTINGS  |                                     |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |                                     |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/> |
| Autoconfiguration Type :  | Stateless                           |
| Router Advertisement Lifetime:  | 30 (minutes)                        |

## IPv6 in IPv4 Tunneling (Stateful)

**My IPv6 Connection:** Select **IPv6 in IPv4 Tunnel** from the drop-down menu.

**IPv6 in IPv4 Tunnel Settings:** Enter the settings supplied by your Internet provider (ISP).

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateless**. Refer to the previous page for Stateless.

**Router Advertisement Lifetime:** Enter the Router Advertisement Lifetime (in minutes).

**IPv6 CONNECTION TYPE**

Choose the mode to be used by the router to the IPv6 Internet.

My IPv6 Connection is :

**IPv6 in IPv4 TUNNEL SETTINGS :**

Enter the IPv6 in IPv4 Tunnel information provided by your Tunnel Broker.

Remote IPv4 Address :

Remote IPv6 Address :

Local IPv4 Address :

Local IPv6 Address :

Primary DNS Address :

Secondary DNS Address :

**LAN IPv6 ADDRESS SETTINGS :**

Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again.

LAN IPv6 Address :  /64

LAN IPv6 Link-Local Address : FE80::240:F4FF:FE03:1A9C/64

**ADDRESS AUTOCONFIGURATION SETTINGS**

Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.

Enable Autoconfiguration :

Autoconfiguration Type :

IPv6 Address Range(Start):  :

IPv6 Address Range(End):  :

IPv6 Address Lifetime:  (minutes)



## IPv6 in IPv4 Tunneling (Stateless)

**My IPv6 Connection:** Select **IPv6 in IPv4 Tunnel** from the drop-down menu.

**IPv6 in IPv4 Tunnel Settings:** Enter the settings supplied by your Internet provider (ISP).

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN Link-Local Address:** Displays the Router's LAN Link-Local Address.

**Enable Autoconfiguration:** Check to enable the Autoconfiguration feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)** or **Stateless**. Refer to the next page for Stateless.

**IPv6 Address Range Start:** Enter the start IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Range End:** Enter the end IPv6 Address for the DHCPv6 range for your local computers.

**IPv6 Address Lifetime:** Enter the IPv6 Address Lifetime (in minutes).

| IPv6 CONNECTION TYPE  |                                     |
|---|-------------------------------------|
| Choose the mode to be used by the router to the IPv6 Internet.  |                                     |
| My IPv6 Connection is :   | IPv6 in IPv4 Tunnel ▾               |
| IPv6 in IPv4 TUNNEL SETTINGS :  |                                     |
| Enter the IPv6 in IPv4 Tunnel information provided by your Tunnel Broker.   |                                     |
| Remote IPv4 Address :   | <input type="text"/>                |
| Remote IPv6 Address :   | <input type="text"/>                |
| Local IPv4 Address :  | <input type="text"/>                |
| Local IPv6 Address :  | <input type="text"/>                |
| Primary DNS Address :   | <input type="text"/>                |
| Secondary DNS Address :   | <input type="text"/>                |
| LAN IPv6 ADDRESS SETTINGS :   |                                     |
| Use this section to configure the internal network settings of your router. If you change the LAN IPv6 Address here, you may need to adjust your PC's network settings to access the network again. |                                     |
| LAN IPv6 Address :  | <input type="text"/> /64            |
| LAN IPv6 Link-Local Address :   | FE80::240:F4FF:FE03:1A9C/64         |
| ADDRESS AUTOCONFIGURATION SETTINGS  |                                     |
| Use this section to setup IPv6 Autoconfiguration to assign IP addresses to the computers on your network.   |                                     |
| Enable Autoconfiguration :  | <input checked="" type="checkbox"/> |
| Autoconfiguration Type :  | Stateless ▾                         |
| Router Advertisement Lifetime:  | 30 <input type="text"/> (minutes)   |

# Administrator Settings

This page will allow you to change the Administrator and User passwords. You can also enable Remote Management. There are two accounts that can access the management interface through the web browser. The accounts are admin and user. Admin has read/write access while user has read-only access. User can only view the settings but cannot make any changes. Only the admin account has the ability to change both admin and user account passwords.

**Admin Password:** Enter a new password for the Administrator Login Name. The administrator can make changes to the settings.

**User Password:** Enter the new password for the User login. If you login as the User, you can only see the settings, but cannot change them.

**Gateway Name:** Enter a name for the DIR-615 router.

**Remote Management:** Remote management allows the DIR-615 to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform Administrator tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.

**Remote Admin Port:** The port number used to access the DIR-615. Example: `http://x.x.x.x:8080` whereas x.x.x.x is the Internet IP address of the DIR-615 and 8080 is the port used for the Web Management interface.

**Inbound Filter:** This section will list any rules that are created. You may click the **Edit** icon to change the settings or enable/disable the rule, or click the **Delete** icon to remove the rule.

The screenshot shows the D-Link DIR-615 web management interface. The top navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar lists various configuration categories: ADMIN, TIME, SYSLOG, EMAIL SETTINGS, SYSTEM, FIRMWARE, DYNAMIC DNS, SYSTEM CHECK, and SCHEDULES. The main content area is titled 'ADMINISTRATOR SETTINGS' and contains the following sections:

- ADMINISTRATOR SETTINGS:** A text box explaining that the 'admin' and 'user' accounts can access the management interface. The admin has read/write access and can change passwords, while the user has read-only access. Below this is a note: "By default there is no password configured. It is highly recommended that you create a password to keep your router secure." There are two buttons: "Save Settings" and "Don't Save Settings".
- ADMIN PASSWORD:** A section titled "Please enter the same password into both boxes, for confirmation." It contains two input fields: "Password:" and "Verify Password:".
- USER PASSWORD:** A section titled "Please enter the same password into both boxes, for confirmation." It contains two input fields: "Password:" and "Verify Password:".
- SYSTEM NAME:** A section with a label "Gateway Name:" and a text input field containing "D-Link DIR-625".
- ADMINISTRATION:** A section with the following options:
  - Enable Remote Management:
  - Remote Admin Port:
  - Remote Admin Inbound Filter:
  - Details:

On the right side of the interface, there is a "Helpful Hints..." section with the following text:

For security reasons, it is recommended that you change the password for the Admin and User accounts. Be sure to write down the new and passwords to avoid having to reset the router in case they are forgotten.

Enabling Remote Management, allows you or others to change the router configuration from a computer on the Internet.

Choose a port to open for remote management.

Select a filter that controls access as needed for this admin port. If you do not see the filter you need in the list of filters, go to the **Advanced** → **Inbound Filter** screen and create a new filter.

**More...**

# Time Settings

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the Time Server. Daylight Saving can also be configured to automatically adjust the time when needed.

**Time Zone:** Select the Time Zone from the drop-down menu.

**Daylight Saving:** To select Daylight Saving time manually, select enabled or disabled, and enter a start date and an end date for daylight saving time.

**Enable NTP Server:** NTP is short for Network Time Protocol. NTP synchronizes computer clock times in a network of computers. Check this box to use a NTP server. This will only connect to a server on the Internet, not a local server.

**NTP Server Used:** Enter the NTP server or select one from the drop-down menu.

**Manual:** To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, Minute, and Second and then click **Set Time**. You can also click **Copy Your Computer's Time Settings**.

**D-Link**

DIR-615 // SETUP ADVANCED **TOOLS** STATUS SUPPORT

ADMIN  
TIME  
SYSLOG  
EMAIL SETTINGS  
SYSTEM  
FIRMWARE  
DYNAMIC DNS  
SYSTEM CHECK  
SCHEDULES

**TIME**

**Time Configuration**

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the NTP (Network Time Protocol) Server. Daylight Saving can also be configured to automatically adjust the time when needed.

Save Settings Don't Save Settings

**TIME CONFIGURATION**

Current Router Time : Saturday, January 31, 2004 2:50:54 PM  
Time Zone : (GMT-08:00) Pacific Time (US/Canada), Tijuana

Enable Daylight Saving :

Daylight Saving Offset : +1:00

Daylight Saving Dates :

|           | Month | Week | Day of Week | Time |
|-----------|-------|------|-------------|------|
| DST Start | Apr   | 1st  | Sun         | 2 am |
| DST End   | Oct   | 5th  | Sun         | 2 am |

**AUTOMATIC TIME CONFIGURATION**

Enable NTP Server :

NTP Server Used : << Select NTP Server

**SET THE DATE AND TIME MANUALLY**

Date And Time :

|      |      |        |     |        |    |
|------|------|--------|-----|--------|----|
| Year | 2004 | Month  | Jan | Day    | 31 |
| Hour | 2    | Minute | 50  | Second | 45 |
|      |      |        |     |        | PM |

Copy Your Computer's Time Settings

Helpful Hints...  
Good timekeeping is important for accurate logs and scheduled firewall rules.  
More...

**WIRELESS**

# SysLog

The Broadband Router keeps a running log of events and activities occurring on the Router. You may send these logs to a SysLog server on your network.

**Enable Logging to SysLog Server:** Check this box to send the router logs to a SysLog Server.

**SysLog Server IP Address:** The address of the SysLog server that will be used to send the logs. You may also select your computer from the drop-down menu (only if receiving an IP address from the router via DHCP).

The screenshot shows the D-Link web interface for the DIR-615 router. The main navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The left sidebar lists various configuration categories: ADMIN, TIME, SYSLOG (selected), EMAIL SETTINGS, SYSTEM, FIRMWARE, DYNAMIC DNS, SYSTEM CHECK, and SCHEDULES. The main content area is titled 'SYSLOG' and contains the following text: 'The SysLog options allow you to send log information to a SysLog Server.' Below this text are two buttons: 'Save Settings' and 'Don't Save Settings'. The 'SYSLOG SETTINGS' section includes:
 

- Enable Logging To Syslog Server:**
- Syslog Server IP Address:** 0.0.0.0 << Computer Name

 A sidebar on the right contains 'Helpful Hints...' and 'More...' links. The bottom of the page features a 'WIRELESS' banner.

# E-mail Settings

The Email feature can be used to send the system log files, router alert messages, and firmware update notification to your e-mail address.

**Enable Email Notification:** When this option is enabled, router activity logs are e-mailed to a designated e-mail address.

**From Email Address:** This e-mail address will appear as the sender when you receive a log file or firmware upgrade notification via e-mail.

**To Email Address:** Enter the e-mail address where you want the e-mail sent.

**SMTP Server Address:** Enter the SMTP server address for sending e-mail. If your SMTP server requires authentication, select this option.

**Enable Authentication:** Check this box if your SMTP server requires authentication.

**Account Name:** Enter your account for sending e-mail.

**Password:** Enter the password associated with the account. Re-type the password associated with the account.

**On Log Full:** When this option is selected, logs will be sent via e-mail when the log is full.

**On Schedule:** Selecting this option will send the logs via e-mail according to schedule.

**Schedule:** This option is enabled when On Schedule is selected. You can select a schedule from the list of defined schedules. To create a schedule, go to **Tools > Schedules**.

The screenshot shows the D-Link DIR-615 web interface. The top navigation bar includes 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The left sidebar lists various settings categories: ADMIN, TIME, SYSLOG, EMAIL SETTINGS (selected), SYSTEM, FIRMWARE, DYNAMIC DNS, SYSTEM CHECK, and SCHEDULES. The main content area is titled 'EMAIL SETTINGS' and contains the following sections:

- Email Settings:** A descriptive text box stating: "The Email feature can be used to send the system log files, router alert messages, and firmware update notification to your email address." Below this are two buttons: "Save Settings" and "Don't Save Settings".
- ENABLE:** A section with the option "Enable Email Notification:" which is checked with a green box.
- EMAIL SETTINGS:** A form with the following fields:
  - From Email Address: [text input]
  - To Email Address: [text input]
  - SMTP Server Address: [text input]
  - Enable Authentication:
  - Account Name: [text input]
  - Password: [text input]
  - Verify Password: [text input]
- EMAIL LOG WHEN FULL OR ON SCHEDULE:** A section with the following options:
  - On Log Full:
  - On Schedule:
  - Schedule: [dropdown menu showing "Never"]
  - Details: [text input showing "Never"]

The bottom of the page features a "WIRELESS" section header.

# System Settings

**Save Settings to Local Hard Drive:** Use this option to save the current router configuration settings to a file on the hard disk of the computer you are using. First, click the **Save** button. You will then see a file dialog, where you can select a location and file name for the settings.

**Load Settings from Local Hard Drive:** Use this option to load previously saved router configuration settings. First, use the **Browse** control to find a previously save file of configuration settings. Then, click the **Load** button to transfer those settings to the router.

**Restore to Factory Default Settings:** This option will restore all configuration settings back to the settings that were in effect at the time the router was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current router configuration settings, use the **Save** button above.

**Reboot Device:** Click to reboot the router.

**D-Link**

DIR-615 // SETUP ADVANCED **TOOLS** STATUS SUPPORT

**ADMIN**

**SYSTEM SETTINGS**

The System Settings section allows you to reboot the device, or restore the router to the factory default settings. Restoring the unit to the factory default settings will erase all settings, including any rules that you have created.

The current system settings can be saved as a file onto the local hard drive. The saved file or any other saved setting file created by device can be uploaded into the unit.

**Helpful Hints...**

Once your router is configured the way you want it, you can save the configuration settings to a configuration file.

You might need this file so that you can load your configuration later in the event that the router's default settings are restored.

To save the configuration, click the **Save Configuration** button.

**More...**

**WIRELESS**

# Update Firmware

You can upgrade the firmware of the Router here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on **Browse** to locate the firmware file to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.

**Firmware Upgrade:** Click on **Check Online Now for Latest Firmware Version** to find out if there is an updated firmware; if so, download the new firmware to your hard drive.

**Browse:** After you have downloaded the new firmware, click **Browse** to locate the firmware update on your hard drive. Click **Upload** to complete the firmware upgrade.

**Notifications Options:** Check **Automatically Check Online for Latest Firmware Version** to have the router check automatically to see if there is a new firmware upgrade.

Check **Email Notification of Newer Firmware Version** to have the router send an e-mail when there is a new firmware available.

The screenshot displays the D-Link DIR-615 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar lists various configuration options, with FIRMWARE selected. The main content area is titled 'FIRMWARE' and contains the following sections:

- FIRMWARE INFORMATION:** Shows 'Current Firmware Version : 2.20', 'Current Firmware Date : 2007/05/15', and 'Latest Firmware Version : 2.20'. A link 'Click here to access firmware online.' is provided.
- FIRMWARE UPGRADE:** Includes a note: 'Note: Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the Tools → System screen.' Below this, instructions state: 'To upgrade the firmware, your PC must have a wired connection to the router. Enter the name of the firmware upgrade file, and click on the Upload button.' There is an 'Upload' field with a 'Browse...' button and an 'Upload' button.
- FIRMWARE UPGRADE NOTIFICATION OPTIONS:** Contains two checkboxes: 'Automatically Check Online for Latest Firmware Version' (checked) and 'Email Notification of Newer Firmware Version' (unchecked).

The bottom of the page features the 'WIRELESS' logo.

# DDNS

The DDNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter in your domain name to connect to your server no matter what your IP address is.

**DDNS:** Dynamic Domain Name System is a method of keeping a domain name linked to a changing IP Address. Check the box to enable DDNS.

**Server Address:** Choose your DDNS provider from the drop down menu.

**Host Name:** Enter the Host Name that you registered with your DDNS service provider.

**Username or Key:** Enter the Username for your DDNS account.

**Password or Key:** Enter the Password for your DDNS account.

**Timeout:** Enter a time (in hours).

**Status:** Displays the current connection status to your DDNS server.

The screenshot shows the D-Link DIR-615 web interface. The top navigation bar includes 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'DYNAMIC DNS' section is highlighted in orange. The main content area contains the following text and fields:

**DYNAMIC DNS**

The DDNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter your host name to connect to your game server no matter what your IP address is.

Sign up for D-Link's Free DDNS service at [www.DLinkDDNS.com](http://www.DLinkDDNS.com).

Buttons: Save Settings, Don't Save Settings

---

**DYNAMIC DNS**

Enable Dynamic DNS:

Server Address:  << Select Dynamic DNS Server

Host Name:  (e.g.: me.mydomain.net)

Username or Key:

Password or Key:

Verify Password or Key:

Timeout:  (hours)

Status: Disconnect

The sidebar on the right contains 'Helpful Hints...' and 'More...' links.



# System Check

**Ping Test:** The Ping Test is used to send Ping packets to test if a computer is on the Internet. Enter the IP Address that you wish to Ping, and click **Ping**.

**Ping Results:** The results of your ping attempts will be displayed here.

The screenshot displays the D-Link DIR-615 web interface. At the top, the D-Link logo is visible. Below it, a navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The TOOLS tab is selected, and the PING TEST tool is active. The interface is divided into three main sections: a description of the Ping Test, a form for entering a host name or IP address, and a section for displaying ping results. A sidebar on the left lists various system settings, and a 'Helpful Hints...' section on the right provides additional information about the Ping Test.

| DIR-615        | SETUP  | ADVANCED | TOOLS | STATUS | SUPPORT  |
|----------------|--|----------|-------|--------|--|
| ADMIN          | <b>PING TEST</b>   |          |       |        | <b>Helpful Hints...</b><br>"Ping" checks whether a computer on the Internet is running and responding. Enter either the IP address of the target computer or enter its fully qualified domain name.<br><a href="#">More...</a> |
| TIME           | Ping Test sends "ping" packets to test a computer on the Internet.   |          |       |        |  |
| SYSLOG         | <b>PING TEST</b><br>Host Name or IP Address : <input type="text"/> <input type="button" value="Ping"/> <input type="button" value="Stop"/> |          |       |        |  |
| EMAIL SETTINGS | <b>PING RESULT</b><br>Enter a host name or IP address above and click 'Ping'   |          |       |        |  |
| SYSTEM         | <b>WIRELESS</b>  |          |       |        |  |
| FIRMWARE       |  |          |       |        |  |
| DYNAMIC DNS    |  |          |       |        |  |
| SYSTEM CHECK   |  |          |       |        |  |
| SCHEDULES      |  |          |       |        |  |

# Schedules

**Name:** Enter a name for your new schedule.

**Days:** Select a day, a range of days, or All Week to include every day.

**Time:** Check **All Day - 24hrs** or enter a start and end time for your schedule.

**Save:** Click **Save** to save your schedule. You must click Save Settings at the top for your schedules to go into effect.

**Schedule Rules List:** The list of schedules will be listed here. Click the **Edit** icon to make changes or click the **Delete** icon to remove the schedule.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

**SCHEDULES**

The Schedule configuration option is used to manage schedule rules for various firewall and parental control features.

Save Settings Don't Save Settings

**ADD SCHEDULE RULE**

Name:

Day(s):  All Week  Select Day(s)

Sun  Mon  Tue  Wed  Thu  Fri  Sat

All Day - 24 hrs:

Start Time: 0 : 0 AM (hour:minute, 12 hour time)

End Time: 0 : 0 AM (hour:minute, 12 hour time)

Save Clear

**SCHEDULE RULES LIST**

| Name | Day(s) | Time Frame |
|------|--------|------------|
|      |        |            |

**Helpful Hints...**

Schedules are used with a number of other features to define when those features are in effect.

Give each schedule a name that is meaningful to you. For example, a schedule for Monday through Friday from 3:00pm to 9:00pm, might be called "After School".

Click **Save** to add a completed schedule to the list below.

Click the **Edit** icon to change an existing schedule.

Click the **Delete** icon to permanently delete a schedule.

More...

**WIRELESS**

## Device Information

This page displays the current information for the DIR-615. It will display the LAN, WAN (Internet), and Wireless information.

If your Internet connection is set up for a Dynamic IP address then a **Release** button and a **Renew** button will be displayed. Use **Release** to disconnect from your ISP and use **Renew** to connect to your ISP.

If your Internet connection is set up for PPPoE, a **Connect** button and a **Disconnect** button will be displayed. Use **Disconnect** to drop the PPPoE connection and use **Connect** to establish the PPPoE connection.

See the following page for more information.

| D-Link   |   |
|--|---|
| DIR-615  | STATUS  |
| DEVICE INFO<br>LOGS<br>STATISTICS<br>INTERNET SESSIONS<br>WIRELESS | <b>DEVICE INFORMATION</b><br>All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.   |
|  | <b>GENERAL</b><br>Time : Thursday, March 01, 2007 1:30:08 PM<br>Firmware Version : 3.00, 2007/02/12   |
|  | <b>WAN</b><br>Connection Type : DHCP Client<br>QoS Engine : Active<br>Cable Status :<br>Network Status :<br>Connection Up Time : <input type="button" value="Renew"/> <input type="button" value="Release"/><br>MAC Address : 00:03:64:00:01:23<br>IP Address :<br>Subnet Mask :<br>Default Gateway :<br>Primary DNS Server :<br>Secondary DNS Server : |

**General:** Displays the router's time and firmware version.

**WAN:** Displays the MAC address and the public IP settings for the router.

**LAN:** Displays the MAC address and the private (local) IP settings for the router.

**Wireless LAN:** Displays the wireless MAC address and your wireless settings such as SSID and Channel.

**LAN Computers:** Displays computers and devices that are connected to the router via Ethernet and that are receiving an IP address assigned by the router (DHCP).

**IGMP Multicast Memberships:**

Displays the Multicast Group IP Address.

The screenshot shows the D-Link DIR-615 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar lists menu items: DEVICE INFO, LOGS, STATISTICS, INTERNET SESSIONS, and WIRELESS. The main content area is titled 'DEVICE INFORMATION' and contains several sections:

- GENERAL:** Shows the current time as Thursday, March 01, 2007 1:30:08 PM and the firmware version as 2.00, 2007/02/12.
- WAN:** Displays connection details for a DHCP Client, including MAC Address (00:03:64:00:01:23), IP Address, Subnet Mask, Default Gateway, Primary DNS Server, and Secondary DNS Server. There are 'Renew' and 'Release' buttons for the connection.
- LAN:** Shows local network settings: MAC Address (00:03:64:00:01:24), IP Address (192.168.0.1), Subnet Mask (255.255.255.0), and DHCP Server.
- WIRELESS LAN:** Displays wireless settings: MAC Address (00:40:F4:FF:E8:1B), Network Name (SSID) (dlink), Channel (4), Security Mode (Disabled), and Wi-Fi Protected Setup (Enabled/Not Configured).
- LAN COMPUTERS:** A table listing connected devices:
 

| IP Address    | Name (if any) | MAC               |
|---------------|---------------|-------------------|
| 192.168.0.100 | PMLab-6       | 00:16:17:44:4a:d9 |
- IGMP MULTICAST MEMBERSHIPS:** A table listing multicast group addresses:
 

| Multicast Group Address |
|-------------------------|
| 224.0.0.252             |
| 239.255.255.250         |

The right sidebar contains 'Helpful Hints...' and 'More...' links.

# Log

The router automatically logs (records) events of possible interest in its internal memory. If there isn't enough internal memory for all events, logs of older events are deleted but logs of the latest events are retained. The Logs option allows you to view the router logs. You can define what types of events you want to view and the level of the events to view. This router also has external Syslog Server support so you can send the log files to a computer on your network that is running a Syslog utility.

**What to View:** You can select the types of messages that you want to display from the log. Firewall & Security, System, and Router Status messages can be selected.

**View Levels:** There are three levels of message importance: Informational, Warning, and Critical. Select the levels that you want displayed in the log.

**Apply Log Settings:** Will filter the log results so that only the selected options appear.

**Refresh:** Updates the log details on the screen so it displays any recent activity.

**Clear:** Clears all of the log contents.

**Email Now:** This option will send a copy of the router log to the e-mail address configured in the **Tools > Email Settings** screen.

**Save Log:** This option will save the router to a log file on your computer.

**D-Link**

DIR-615

SETUP ADVANCED TOOLS STATUS SUPPORT

DEVICE INFO

LOGS

STATISTICS

INTERNET SESSIONS

WIRELESS

**LOGS**

**System Logs**

Use this option to view the router logs. You can define what types of events you want to view and the event levels to view. This router also has external syslog server support so you can send the log files to a computer on your network that is running a syslog utility.

**LOG OPTIONS**

**What to View :**  Firewall & Security  System  Router Status

**View Levels :**  Critical  Warning  Informational

Apply Log Settings Now

**LOG DETAILS**

Refresh Clear Email Now Save Log

[INFO] Thu Mar 01 13:35:51 2007 Log viewed by IP address 192.152.81.216  
 [INFO] Thu Mar 01 13:33:49 2007 Blocked incoming TCP connection request from 67.129.235.161:1363 to 67.130.140.145:1433  
 [INFO] Thu Mar 01 13:33:46 2007 Previous message repeated 1 time  
 [INFO] Thu Mar 01 13:32:43 2007 Blocked incoming TCP connection request from 67.129.235.161:2097 to 67.130.140.145:5900  
 [INFO] Thu Mar 01 13:32:40 2007 Previous message repeated 1 time  
 [INFO] Thu Mar 01 13:32:27 2007 Blocked incoming TCP connection request from 67.129.235.161:1701 to 67.130.140.145:135  
 [INFO] Thu Mar 01 13:32:25 2007 Previous message repeated 1 time  
 [INFO] Thu Mar 01 13:29:13 2007 Blocked incoming ICMP packet (ICMP type 8) from 84.112.37.99 to 67.130.140.145  
 [INFO] Thu Mar 01 13:29:11 2007 Previous message repeated 1 time  
 [INFO] Thu Mar 01 13:20:16 2007 Stored configuration to non-volatile memory  
 [INFO] Thu Mar 01 13:20:12 2007 Policy Example 1 started; Internet access for IP address 192.168.0.100 changed to: Allowed, Web Sites - Restricted, Logged, Ports - Restricted  
 [INFO] Thu Mar 01 13:20:12 2007 Internet access for IP address 192.168.0.100 set to: Allowed, Web Sites - None Blocked, Ports - None Blocked  
 [INFO] Thu Mar 01 13:20:12 2007 One or more Internet access policies are in effect. Internet access will be restricted according to these policies  
 [INFO] Thu Mar 01 13:09:15 2007 Blocked incoming ICMP packet (ICMP type 8) from 200.92.202.36 to 67.130.140.145  
 [INFO] Thu Mar 01 13:09:13 2007 Previous message repeated 1 time  
 [INFO] Thu Mar 01 13:07:13 2007 Allowed configuration authentication by IP address 192.152.81.216  
 [INFO] Thu Mar 01 13:04:12 2007 Administrator logout

**Helpful Hints...**

Check the log frequently to detect unauthorized network usage.

You can also have the log mailed to you periodically. Refer to [Tools -> EMail](#).

[More...](#)

# Stats

The screen below displays the Traffic Statistics. Here you can view the amount of packets that pass through the DIR-615 on both the Internet and the LAN ports. The traffic counter will reset if the device is rebooted.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

DEVICE INFO  
LOGS  
STATISTICS  
INTERNET SESSIONS  
WIRELESS

**TRAFFIC STATISTICS**

**Network Traffic Stats**

Traffic Statistics display Receive and Transmit packets passing through your router.

Refresh Statistics Clear Statistics

**LAN STATISTICS**

|                        |                        |
|------------------------|------------------------|
| Sent : 36459           | Received : 22978       |
| TX Packets Dropped : 0 | RX Packets Dropped : 0 |
| Collisions : 0         | Errors : 0             |

**WAN STATISTICS**

|                        |                        |
|------------------------|------------------------|
| Sent : 19151           | Received : 31483       |
| TX Packets Dropped : 0 | RX Packets Dropped : 0 |
| Collisions : 0         | Errors : 0             |

**WIRELESS STATISTICS**

|                        |                  |
|------------------------|------------------|
| Sent : 10330           | Received : 25649 |
| TX Packets Dropped : 0 | Errors : 0       |

Helpful Hints...

This is a summary of the number of packets that have passed between the WAN and the LAN since the router was last initialized.

More...

**WIRELESS**

# Internet Sessions

The Internet Sessions page displays full details of active Internet sessions through your router. An Internet session is a conversation between a program or application on a LAN-side computer and a program or application on a WAN-side computer.

**Local:** The IP address and, where appropriate, port number of the local application.

**NAT:** The port number of the LAN-side application as viewed by the WAN-side application.

**Internet:** The IP address and, where appropriate, port number of the application on the Internet.

**Protocol:** The communications protocol used for the conversation.

Product Page: DIR-625 Hardware Version: C1 Firmware Version: 3.00

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

DEVELOPER INFO INTERNET SESSIONS Helpful Hints...  
 This page displays the full details of active internet sessions to your router. This is a list of all active conversations between WAN computers and LAN computers.  
 More...

| Local             | NAT  | Internet            | Protocol | State | Dir | Priority | Time Out |
|-------------------|------|---------------------|----------|-------|-----|----------|----------|
| 192.168.0.1:80    | 8080 | 192.152.81.222:1774 | TCP      | EST   | In  | 196      | 7800     |
| 192.168.0.1:80    | 8080 | 192.152.81.222:1773 | TCP      | EST   | In  | 255      | 7800     |
| 192.168.0.1:80    | 8080 | 192.152.81.222:1772 | TCP      | CL    | In  | 169      | 225      |
| 192.168.0.1:80    | 8080 | 192.152.81.222:1771 | TCP      | CL    | In  | 169      | 223      |
| 192.168.0.1:80    | 8080 | 192.152.81.222:1770 | TCP      | CL    | In  | 169      | 231      |
| 67.130.140.145:68 | 68   | 67.130.140.152:67   | UDP      | -     | Out | 137      | 227      |
| 192.168.0.1:80    | 8080 | 192.152.81.222:1769 | TCP      | CL    | In  | 169      | 198      |
| 192.168.0.1:80    | 8080 | 192.152.81.222:1768 | TCP      | CL    | In  | 169      | 174      |

**State:** State for sessions that use the TCP protocol:

NO: None -- This entry is used as a placeholder for a future connection that may occur.

SS: SYN Sent -- One of the systems is attempting to start a connection.

EST: Established -- the connection is passing data.

FW: FIN Wait -- The client system has requested that the connection be stopped.

CW: Close Wait -- The server system has requested that the connection be stopped.

TW: Time Wait -- Waiting for a short time while a connection that was in FIN Wait is fully closed.

LA: Last ACK -- Waiting for a short time while a connection that was in Close Wait is fully closed.

CL: Closed -- The connection is no longer active but the session is being tracked in case there are any retransmitted packets still pending.

**Dir:** The direction of initiation of the conversation:

**Out** - Initiated from LAN to WAN.

**In** - Initiated from WAN to LAN.

**Priority:** The preference given to outbound packets of this conversation by the QoS Engine logic. Smaller numbers represent higher priority.

**Time Out:** The number of seconds of idle time until the router considers the session terminated. The initial value of Time Out depends on the type and state of the connection.

**300 seconds** - UDP connections.

**240 seconds** - Reset or closed TCP connections. The connection does not close instantly so that lingering packets can pass or the connection can be re-established.

**7800 seconds** - Established or closing TCP connections.



# Wireless

The wireless client table displays a list of current connected wireless clients. This table also displays the connection time and MAC address of the connected wireless clients.

The screenshot shows the D-Link DIR-615 web interface. The top navigation bar includes 'DIR-615', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'STATUS' tab is selected, and the 'WIRELESS' sub-tab is active. The main content area displays the 'Associated Wireless Client List' with a table showing one connected client. A 'Helpful Hints...' sidebar on the right provides additional information.

| D-Link            |  |          |       |            |  |             |            |      |      |            |              |               |     |    |
|-------------------|--|----------|-------|------------|--|-------------|------------|------|------|------------|--------------|---------------|-----|----|
| DIR-615           | SETUP  | ADVANCED | TOOLS | STATUS     | SUPPORT  |             |            |      |      |            |              |               |     |    |
| DEVICE INFO       | <b>WIRELESS</b>  |          |       |            | <b>Helpful Hints...</b><br>This is a list of all wireless clients that are currently connected to your wireless router.<br><br><a href="#">More...</a> |             |            |      |      |            |              |               |     |    |
| LOGS              | <b>Associated Wireless Client List</b>   |          |       |            |  |             |            |      |      |            |              |               |     |    |
| STATISTICS        | Use this option to view the wireless clients that are connected to your wireless router.   |          |       |            |  |             |            |      |      |            |              |               |     |    |
| INTERNET SESSIONS | NUMBER OF WIRELESS CLIENTS : 1   |          |       |            |  |             |            |      |      |            |              |               |     |    |
| WIRELESS          | <table border="1"> <thead> <tr> <th>MAC Address</th> <th>IP Address</th> <th>Mode</th> <th>Rate</th> <th>Signal (%)</th> </tr> </thead> <tbody> <tr> <td>0015E9F98114</td> <td>192.168.0.111</td> <td>11g</td> <td>54</td> <td>80</td> </tr> </tbody> </table> |          |       |            |  | MAC Address | IP Address | Mode | Rate | Signal (%) | 0015E9F98114 | 192.168.0.111 | 11g | 54 |
| MAC Address       | IP Address   | Mode     | Rate  | Signal (%) |  |             |            |      |      |            |              |               |     |    |
| 0015E9F98114      | 192.168.0.111  | 11g      | 54    | 80         |  |             |            |      |      |            |              |               |     |    |
| <b>WIRELESS</b>   |  |          |       |            |  |             |            |      |      |            |              |               |     |    |

# Support

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

MENU  
SETUP  
ADVANCED  
TOOLS  
STATUS  
GLOSSARY

**SUPPORT MENU**

- [Setup](#)
- [Advanced](#)
- [Tools](#)
- [Status](#)
- [Glossary](#)

**SETUP HELP**

- [Internet Connection](#)
- [WAN](#)
- [Wireless](#)
- [Network Settings](#)

**ADVANCED HELP**

- [Virtual Server](#)
- [Port Forwarding](#)
- [Application Rules](#)
- [Routing](#)
- [Access Control](#)
- [Web Filter](#)
- [MAC Address Filter](#)
- [Firewall](#)
- [Inbound Filter](#)
- [Advanced Wireless](#)

**TOOLS HELP**

- [Admin](#)
- [Time](#)
- [Syslog](#)
- [Email Settings](#)
- [System](#)
- [Firmware](#)
- [Dynamic DNS](#)
- [Windows Connect Now](#)
- [System Check](#)
- [Schedules](#)
- [Sentinel Services](#)

**STATUS HELP**

- [Device Info](#)
- [Wireless](#)
- [Routing](#)
- [Logs](#)
- [Statistics](#)
- [Active Sessions](#)

**WIRELESS**

# Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The DIR-615 offers the following types of security:

- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)
- WPA2-PSK(Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)

## What is WPA?

WPA, or Wi-Fi Protected Access, is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. This key must be the exact same key entered on your wireless router or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

# Wireless Connection Setup Wizard

To run the security wizard, browse to the Setup page and then click the **Wireless Connection Setup Wizard** button.

**D-Link**

DIR-615 // SETUP ADVANCED TOOLS STATUS SUPPORT

INTERNET  
WIRELESS SETTINGS  
NETWORK SETTINGS

**WIRELESS SETTINGS**

The following Web-based wizards are designed to assist you in your wireless network setup and wireless device connection.

Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**WIRELESS NETWORK SETUP WIZARD**

This wizard is designed to assist you in your wireless network setup. It will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure.

Wireless Connection Setup Wizard

**Note:** Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Router.

**ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP) WIZARD**

This wizard is designed to assist you in connecting your wireless device to your router. It will guide you through step-by-step instructions on how to get your wireless device connected. Click the button below to begin.

Add Wireless Device with WPS

**MANUAL WIRELESS NETWORK SETUP**

If your wireless network is already set up with Wi-Fi Protected Setup, manual configuration of the wireless network will destroy the existing wireless network. If you would like to configure the wireless settings of your new D-Link Systems Router manually, then click on the Manual Wireless Network Setup button below.

Manual Wireless Connection Setup

**Helpful Hints...**

If you are new to wireless networking and have never configured a wireless router before, click on **Wireless Connection Setup Wizard** and the router will guide you through a few simple steps to get your wireless network up and running.

If you consider yourself an advanced user and have configured a wireless router before, click **Manual Wireless Connection Setup** to input all the settings manually.

More...

Click **Next** to continue.

**WELCOME TO THE D-LINK WIRELESS SECURITY SETUP WIZARD**

This wizard will guide you through a step-by-step process to setup your wireless network and make it secure.

- Step 1: Name your Wireless Network
- Step 2: Secure your Wireless Network
- Step 3: Set your Wireless Security Password

Next Cancel

Enter the SSID (Service Set Identifier). The SSID is the name of your wireless network. Create a name using up to 32 characters. The SSID is case-sensitive.

**STEP 1: NAME YOUR WIRELESS NETWORK**

Your wireless network needs a name so it can be easily recognized by wireless clients. For security purposes, it is highly recommended to change the pre-configured network name of [dlink].

Wireless Network Name (SSID):

Select the level of security for your wireless network:

- Best - WPA2 Authentication
- Better - WPA Authentication
- None - No security

Click **Next** to continue.

**STEP 2: SECURE YOUR WIRELESS NETWORK**

In order to protect your network from hackers and unauthorized users, it is highly recommended you choose one of the following wireless network security settings.

There are three levels of wireless security -Good Security, Better Security, AND Best Security. The level you choose depends on the security features your wireless adapters support.

**BEST**  Select this option if your wireless adapters SUPPORT WPA2

**BETTER**  Select this option if your wireless adapters SUPPORT WPA

**GOOD**  Select this option if your wireless adapters DO NOT SUPPORT WPA

**NONE**  Select this option if you do not want to activate any security features

For information on which security features your wireless adapters support, please refer to the adapters' documentation.

Note: All D-Link wireless adapters currently support WPA.

If you selected **Best** or **Better**, enter a password between 8-63 characters.

If you selected Good, enter 13 characters or 26 Hex digits.

Click **Next** to continue.

**STEP 3: SET YOUR WIRELESS SECURITY PASSWORD**

You have selected your security level - you will need to set a wireless security password.

Wireless Security Password:

(8 to 63 characters)

Note: You will need to enter the same password as keyed in this step into your wireless clients in order to enable proper wireless communication.

If you selected **Better**, the following screen will show you your Pre-Shared Key to enter on your wireless clients.

Click **Save** to finish the Security Wizard.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

**Wireless Network Name (SSID):** dlink

**Encryption:** WPA-PSK/TKIP (also known as WPA Personal)

**Pre-Shared Key:** password1M2Z

If you selected **Best**, the following screen will show you your Pre-Shared Key to enter on your wireless clients.

Click **Save** to finish the Security Wizard.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

**Wireless Network Name (SSID):** dlink


**Encryption:** WPA2-PSK/AES (also known as WPA2 Personal)

**Pre-Shared Key:** password

If you selected WPA-Enterprise, the RADIUS information will be displayed. Click **Save** to finish the Security Wizard.

# Add Wireless Device with WPS Wizard

From the **Setup > Wireless Settings** screen, click **Add Wireless Device with WPS**.

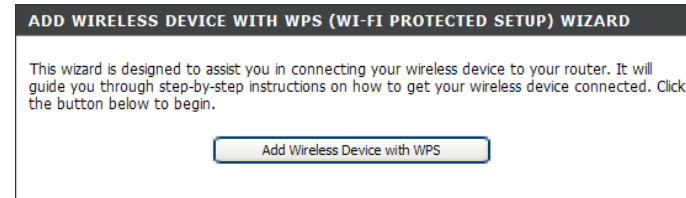


Select **Auto** to add a wireless client using WPS (Wi-Fi Protected Setup). Once you select **Auto** and click **Connect**, you will have a 120 second time limit to apply the settings to your wireless client(s) and successfully establish a connection.

If you select **Manual**, a settings summary screen will appear. Write down the security key and enter this on your wireless clients.



**PIN:** Select this option to use PIN method. In order to use this method you must know the wireless client's 8 digit PIN and click **Connect**.

**PBC:** Select this option to use PBC (Push Button) method to add a wireless client. Click **Connect**.

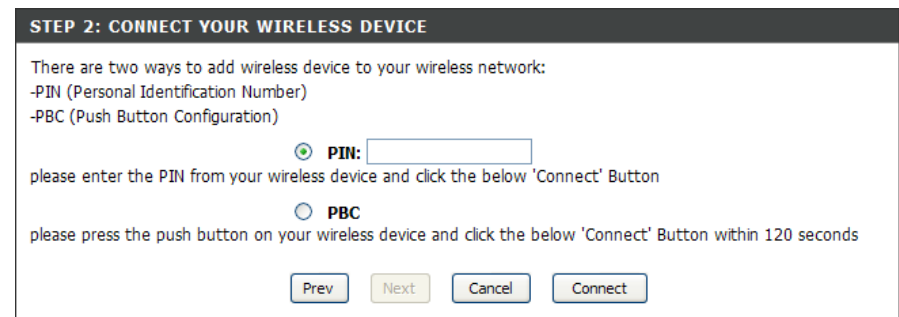

# Configure WPA-Personal (PSK)

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Setup** and then click **Wireless Settings** on the left side.
2. Next to *Security Mode*, select **WPA-Personal**.
3. Next to *WPA Mode*, select **Auto**, **WPA2 Only**, or **WPA Only**. Use **Auto** if you have wireless clients using both WPA and WPA2.
4. Next to *Cypher Type*, select **TKIP and AES**, **TKIP**, or **AES**. If you have wireless clients that use both types, use **TKIP and AES**.
5. Next to *Group Key Update Interval*, enter the amount of time before the group key used for broadcast and multicast data is changed (3600 is default).
6. Next to *Pre-Shared Key*, enter a key (passphrase). The key is entered as a pass-phrase in ASCII format at both ends of the wireless connection. The pass-phrase must be between 8-63 characters.
7. Click **Save Settings** to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA-PSK on your adapter and enter the same passphrase as you did on the router.

**WIRELESS SECURITY MODE**

To protect your privacy you can configure wireless security features. This device supports three wireless security modes, including WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

Security Mode :  ▼

**WPA**

Use **WPA or WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

WPA Mode :  ▼

Cipher Type :  ▼

Group Key Update Interval :  (seconds)

**PRE-SHARED KEY**

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

Pre-Shared Key :



# Configure WPA-Enterprise (RADIUS)

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Setup** and then click **Wireless Settings** on the left side.
2. Next to *Security Mode*, select **WPA-Enterprise**.
3. Next to *WPA Mode*, select **Auto**, **WPA2 Only**, or **WPA Only**. Use **Auto** if you have wireless clients using both WPA and WPA2.
4. Next to *Cypher Type*, select **TKIP and AES**, **TKIP**, or **AES**. If you have wireless clients that use both types, use **TKIP and AES**.
5. Next to *Group Key Update Interval*, enter the amount of time before the group key used for broadcast and multicast data is changed (3600 is default).
6. Next to *Authentication Timeout*, enter the amount of time before a client is required to re-authenticate (60 minutes is default).
7. Next to *RADIUS Server IP Address* enter the IP Address of your RADIUS server.
8. Next to *RADIUS Server Port*, enter the port you are using with your RADIUS server. 1812 is the default port.
9. Next to *RADIUS Server Shared Secret*, enter the security key.

**WIRELESS SECURITY MODE**

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

**Security Mode:**

---

**WPA**

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES (CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

**WPA Mode:**

**Group Key Update Interval:**  (seconds)

---

**EAP (802.1X)**

When WPA enterprise is enabled, the router uses EAP (802.1x) to authenticate clients via a remote RADIUS server.

**Authentication Timeout:**  (minutes)

**RADIUS server IP Address:**

**RADIUS server Port:**

**RADIUS server Shared Secret:**

**MAC Address Authentication:**

10. If the *MAC Address Authentication* box is selected then the user will need to connect from the same computer whenever logging into the wireless network.
11. Click **Advanced** to enter settings for a secondary RADIUS Server.
12. Click **Apply Settings** to save your settings.

### EAP (802.1X)

When WPA enterprise is enabled, the router uses EAP (802.1x) to authenticate clients via a remote RADIUS server.

**Authentication Timeout :**  (minutes)

**RADIUS server IP Address :**

**RADIUS server Port :**

**RADIUS server Shared Secret :**

**MAC Address Authentication :**

**Optional backup RADIUS server:**

**Second RADIUS server IP Address :**

**Second RADIUS server Port :**

**Second RADIUS server Shared Secret :**

**Second MAC Address Authentication :**

# Connect to a Wireless Network Using Windows Vista®

Windows Vista® users may use the built-in wireless utility. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows Vista® utility as seen below.



If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

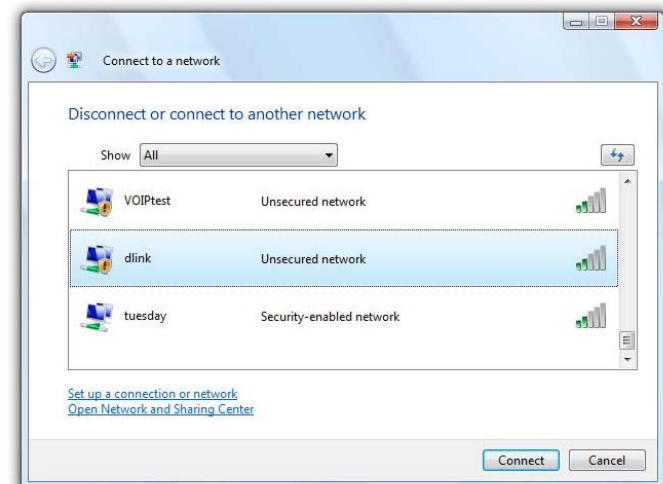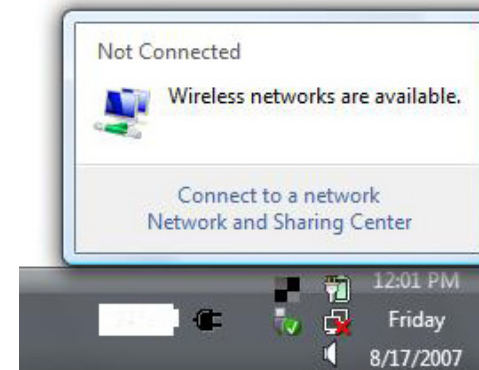


## Configure WPA/WPA2

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows Vista® Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.

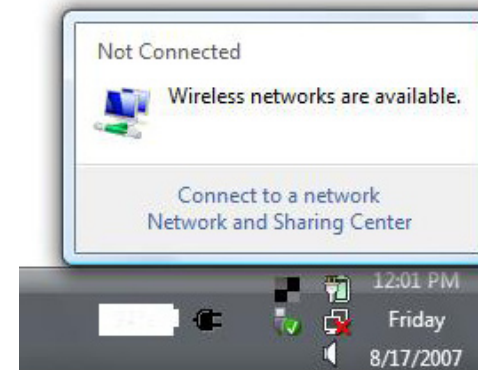


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

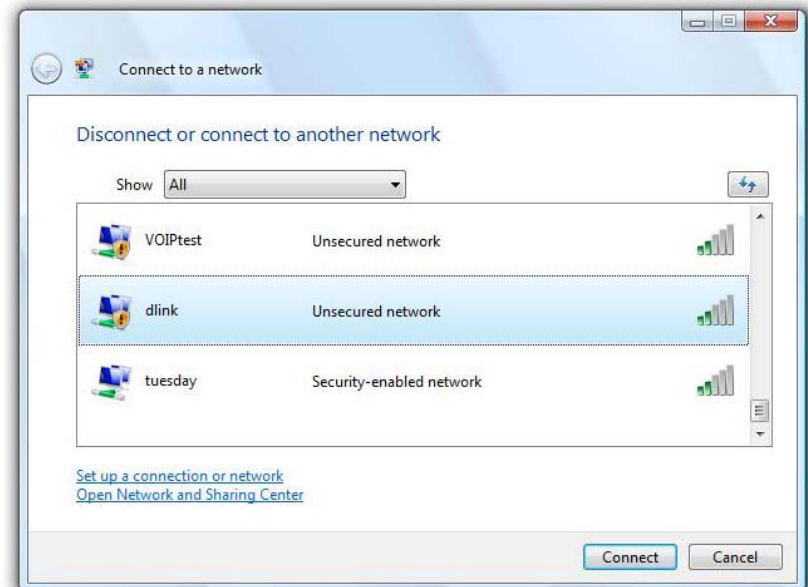

3. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

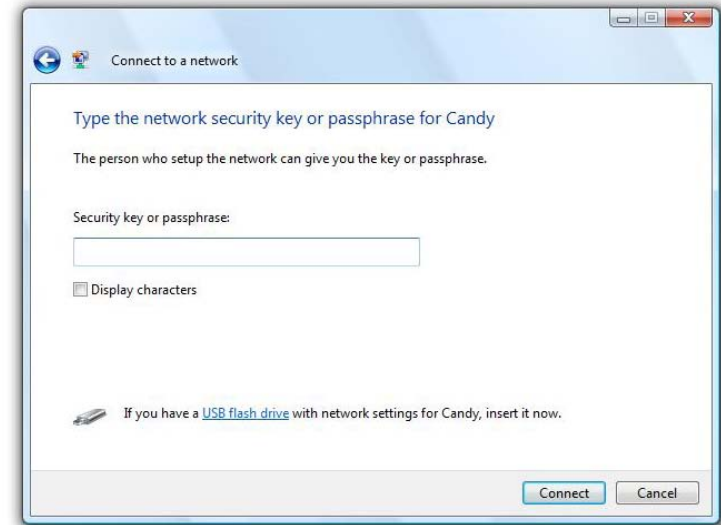


## Connect Using WCN 2.0

The router supports Wi-Fi protection, referred to as WCN 2.0 in Windows Vista®. The following instructions for setting this up depends on whether you are using Windows Vista® to configure the router or third party software.

When you first set up the router, Wi-Fi protection is disabled and unconfigured. To enjoy the benefits of Wi-Fi protection, the router must be both enabled and configured. There are three basic methods to accomplish this: use Windows Vista's built-in support for WCN 2.0, use software provided by a third party, or manually configure.

If you are running Windows Vista®, log into the router and click the **Enable** checkbox in the **Basic > Wireless** section. Use the Current PIN that is displayed on the **Advanced > Wi-Fi Protected Setup** section or choose to click the **Generate New PIN** button or **Reset PIN to Default** button.

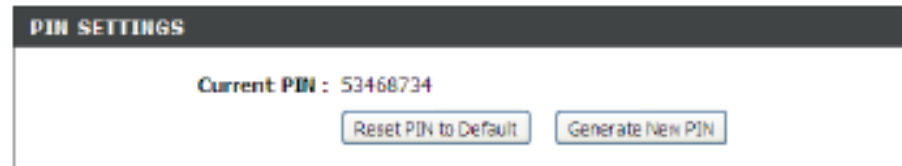

If you are using third party software to set up Wi-Fi Protection, carefully follow the directions. When you are finished, proceed to the next section to set up the newly-configured router.

# Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

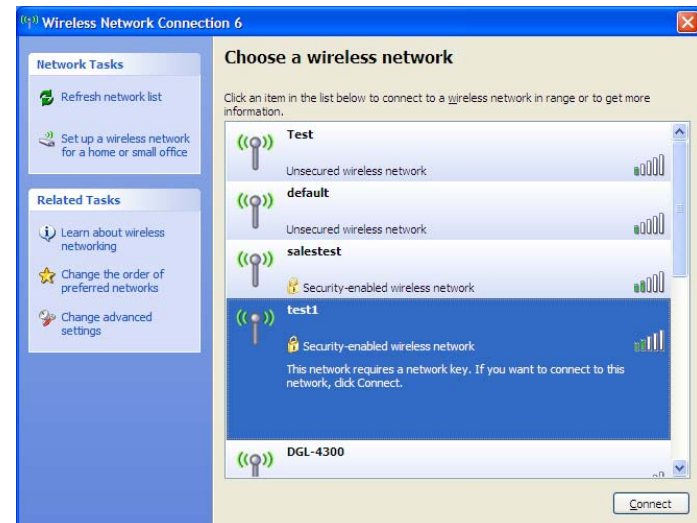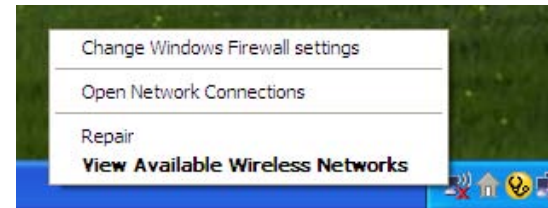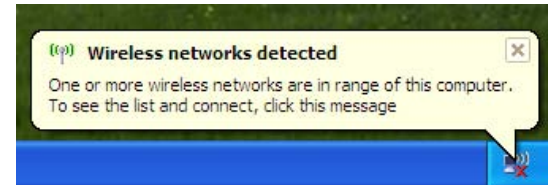


## Configure WPA-PSK

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.

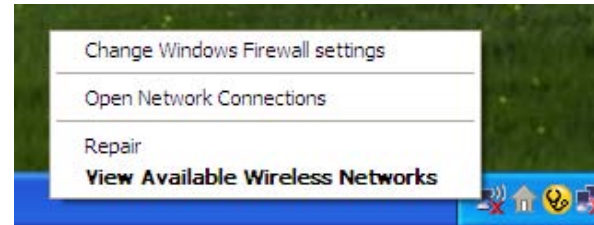


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

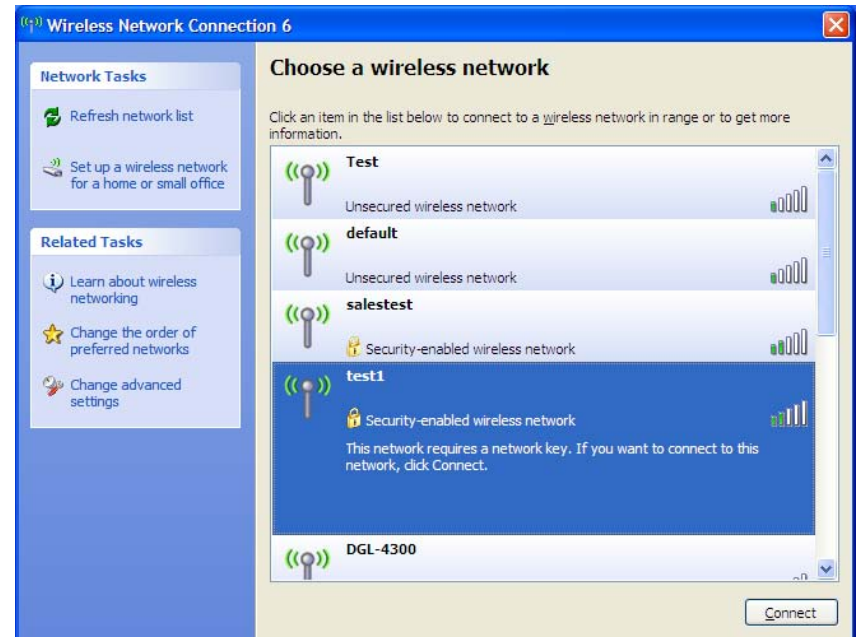



3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

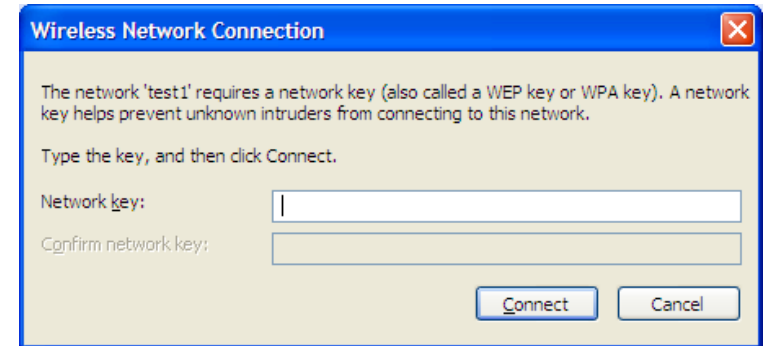

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DIR-615. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screen shots on your computer will look similar to the following examples.)

## 1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (192.168.0.1 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
  - Internet Explorer 6.0 or higher
  - Netscape 8 or higher
  - Mozilla 1.7.12 (5.0) or higher
  - Opera 8.5 or higher
  - Safari 1.2 or higher (with Java 1.3.1 or higher)
  - Camino 0.8.4 or higher
  - Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
  - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
  - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
  - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
  - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

## 2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Unfortunately this process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is 192.168.0.1. When logging in, the username is **admin** and leave the password box empty.

### 3. Why can't I connect to certain sites or send and receive e-mails when connecting through my router?

If you are having a problem sending or receiving e-mail, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

**Note: AOL DSL+ users must use MTU of 1400.**

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on **Start** and then click **Run**.
- Windows® 95, 98, and Me users type in **command** (Windows® NT, 2000, and XP users type in **cmd**) and press **Enter** (or click **OK**).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

**ping [url] [-f] [-l] [MTU value]**

Example: **ping yahoo.com -f -l 1472**

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.

Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52

Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 93ms, Maximum = 203ms, Average = 132ms

C:\>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, lets say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with (1452+28=1480).

Once you find your MTU, you can now configure your router with the proper MTU size.

To change the MTU rate on your router follow the steps below:

- Open your browser, enter the IP address of your router (192.168.0.1) and click **OK**.
- Enter your username (admin) and password (blank by default). Click **OK** to enter the web configuration page for the device.
- Click on **Setup** and then click **Manual Configure**.
- To change the MTU enter the number in the MTU field and click **Save Settings** to save your settings.
- Test your e-mail. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

## **What is Wireless?**

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

## **Why D-Link Wireless?**

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

## **How does wireless work?**

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

## **Wireless Local Area Network (WLAN)**

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

## **Wireless Personal Area Network (WPAN)**

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

## **Who uses wireless?**

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

### **Home**

- Gives everyone at home broadband access
- Surf the web, check e-mail, instant message, and etc
- Gets rid of the cables around the house
- Simple and easy to use

### **Small Office and Home Office**

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space



## **Where is wireless used?**

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like: Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

## **Tips**

Here are a few things to keep in mind, when you install a wireless network.

### **Centralize your router or Access Point**

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

### **Eliminate Interference**

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

## Security

Don't let your next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

# Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad-Hoc** – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more DIR-615 wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

# Networking Basics

## Check your IP address


After you install your adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type **cmd** and click **OK**. (Windows Vista® users type **cmd** in the **Start Search** box.)

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

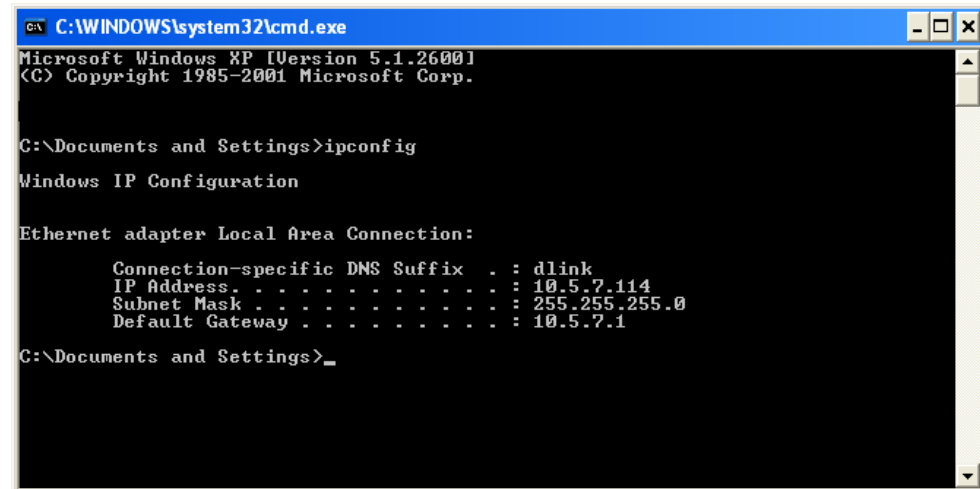

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

## Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

### Step 1

Windows Vista® - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections**.

Windows® XP - Click on **Start > Control Panel > Network Connections**.

Windows® 2000 - From the desktop, right-click **My Network Places > Properties**.

### Step 2

Right-click on the **Local Area Connection** which represents your network adapter and select **Properties**.

### Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

### Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

**Example:** If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

### Step 5

Click **OK** twice to save your settings.

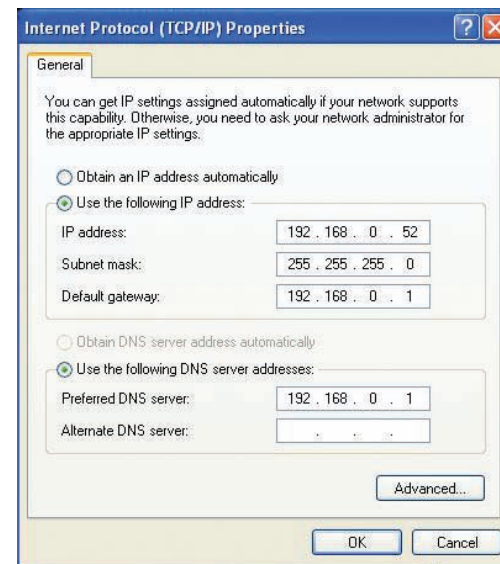

# Technical Specifications

## Standards

- IEEE 802.11n (draft 2.0)
- IEEE 802.11g
- IEEE 802.3
- IEEE 802.3u

## Security

- WPA-Personal
- WPA2-Personal
- WPA-Enterprise
- WPA2-Enterprise

## Wireless Signal Rates\*

- 108Mbps
- 54Mbps
- 36Mbps
- 18Mbps
- 11Mbps
- 6Mbps
- 2Mbps
- 48Mbps
- 24Mbps
- 12Mbps
- 9Mbps
- 5.5Mbps
- 1Mbps

## MSC (0-15)

- 130Mbps (270)
- 104Mbps (216)
- 66Mbps (135)
- 52Mbps (108)
- 26Mbps (54)
- 12Mbps (27)
- 117Mbps (243)
- 78Mbps (162)
- 58.5Mbps (121.5)
- 39Mbps (81)
- 19.5Mbps (40.5)
- 6.5Mbps (13.5)

## Frequency Range

- 2.4GHz to 2.483GHz

## Transmitter Output Power

- 17dBm  $\pm$  2dB

## LEDs

- Power
- Internet
- WLAN
- LAN (10/100)

## Operating Temperature

- 32°F to 104°F ( 0°C to 40°C)

## Humidity

- 95% maximum (non-condensing)

## Safety & Emissions

- FCC
- IC
- CE

## Dimensions

- L = 7.6 inches
- W = 4.6 inches
- H = 1.2inches

## Warranty

- 1 Year Limited

\* Maximum wireless signal rate derived from IEEE Standard 802.11g and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

Copyright ©2008 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

**CE Mark Warning:**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

**FCC Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.