


How to configure DSL-G604T to connect to internet manually.

Step 1 Connect your PC to the LAN port of your DSL-G604T


Step 2 Start up a Internet explorer and key in 192.168.1.1 (by default)

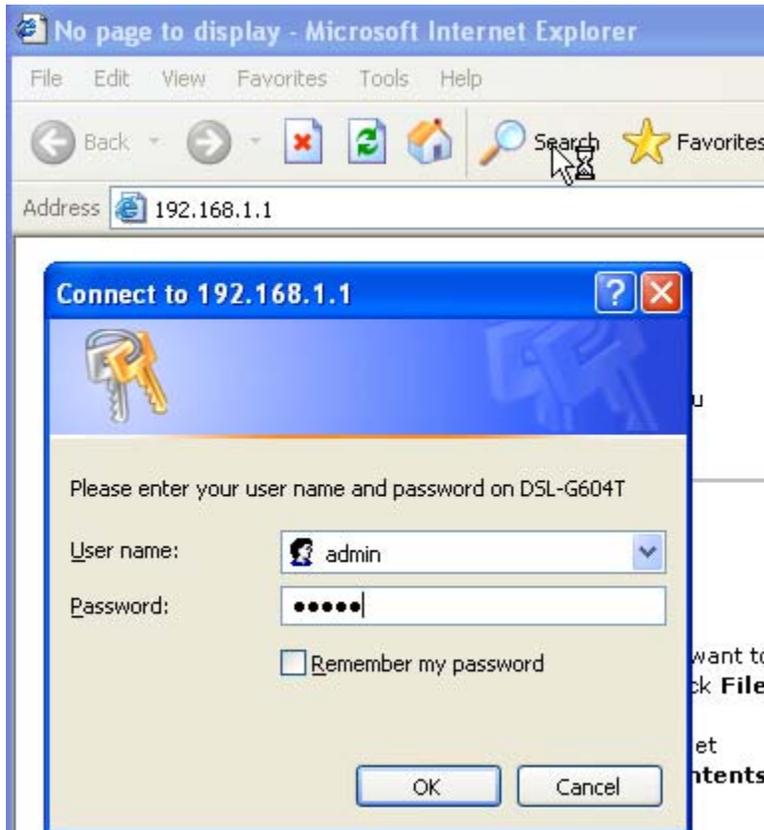

Step 3 Key in your username and password (by default username is admin password is admin as well)

Step 4 Once you login to the D-Link configuration page click on **Advanced > PPP**

For **Connection Setting** change it to **Manual**.

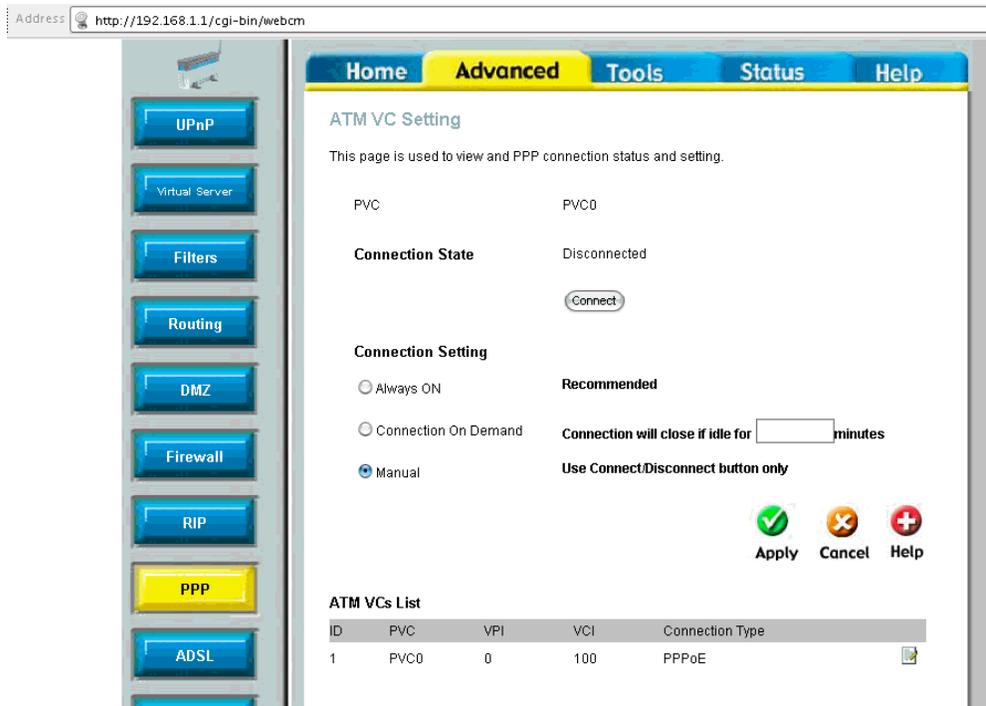

Step 5 Click on **Apply**.

Step 6 After **Apply**, click on **Home > WAN** and do a **"Save and reboot"**



Step 7 After rebooting go back to **Advanced > PPP**, so from now on you have to manually click on **Connect** to get your internet connection.