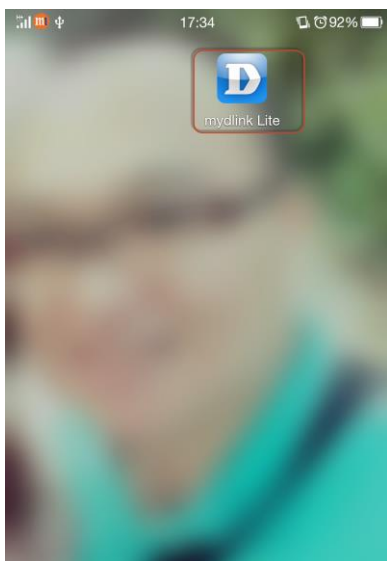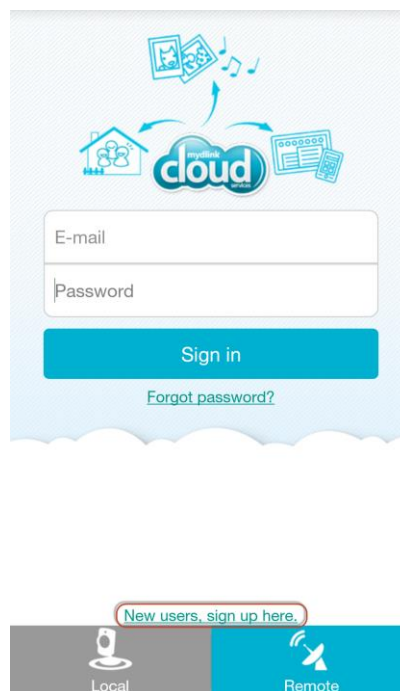## How to: Setting up the DCS-5030L with New mydlink Account Using Android device (Wireless)

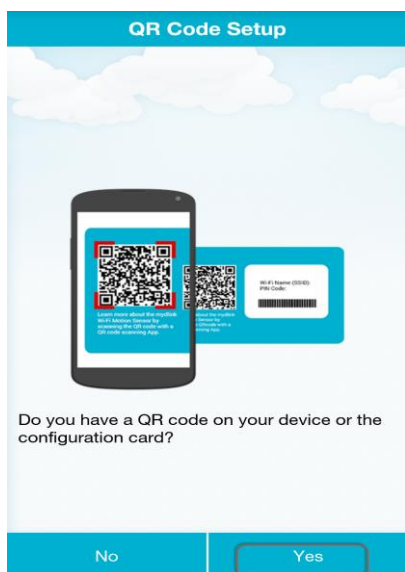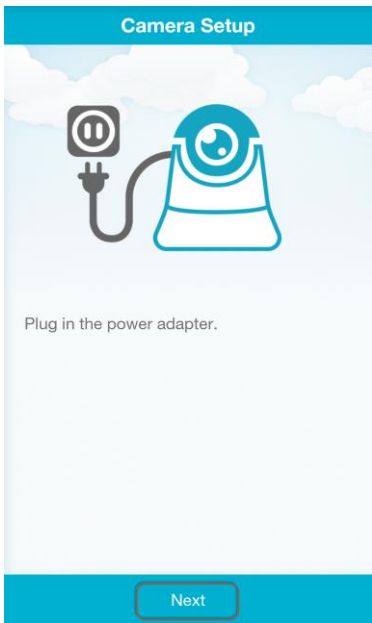|	
Step 1: Connect the power of the camera. **Step 2:** Open **Mydlink Lite** Apps on the Android mobile device. 	**Step 3:** Click on **New users, sign up here.**
Step 4: Click on **Yes.** 	**Step 5:** Scan the **QR Code** on the device.

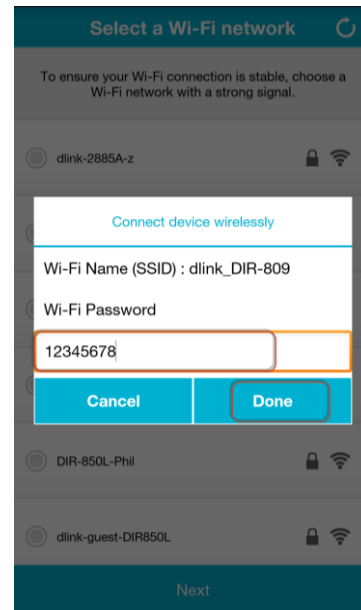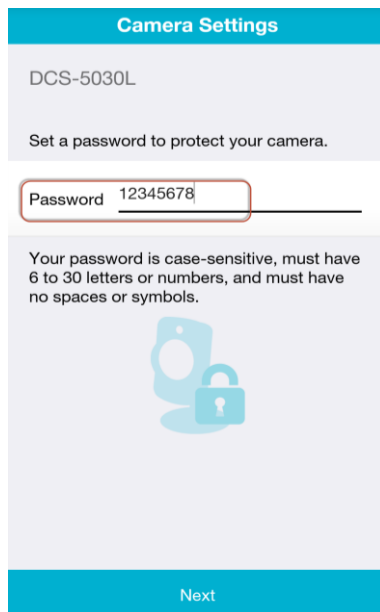| **Step 6:** Click on **Next**	**Step 7:** Click on **NO.**
Plug in the power adapter.	Is there a WPS button on your Wi-Fi router?
Step 8: Select Direct Conection	**Step 9:** Click on **Ready.**
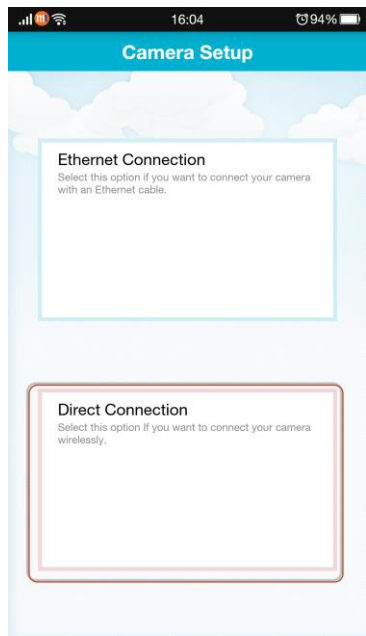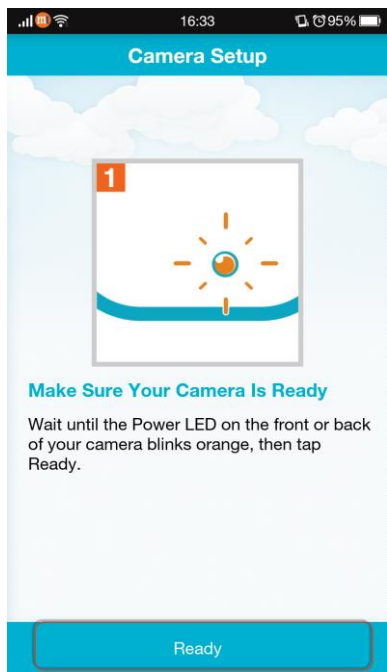
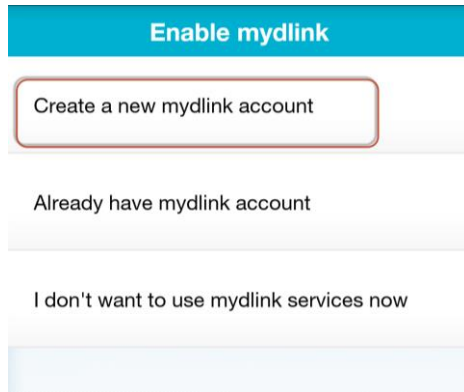| Step 10: Select the Wi-Fi network which you want to connect to.	Step 11: Enter the Wi-Fi password and press Done
Select a Wi-Fi network To ensure your Wi-Fi connection is stable, choose a Wi-Fi network with a strong signal. dlink-2885A-z DIR850L_2.4G DIR850L_2.4G dlink_DIR-809 DIR-850L-Phil dlink-guest-DIR850L Next	Select a Wi-Fi network To ensure your Wi-Fi connection is stable, choose a Wi-Fi network with a strong signal. dlink-2885A-z Connect device wirelessly Wi-Fi Name (SSID) : dlink_DIR-809 Wi-Fi Password 12345678 Cancel Done DIR-850L-Phil dlink-guest-DIR850L Next
Step 12: Give a device password.	Step 13: Click on OK.
Camera Settings DCS-5030L Set a password to protect your camera. Password 12345678 Your password is case-sensitive, must have 6 to 30 letters or numbers, and must have no spaces or symbols. Next	Camera Settings DCS-5030L Set a password to protect your camera. Password 12345678 Successful The time zone has been set according to your phone's region settings. Any further changes can be made on device settings page. OK Next
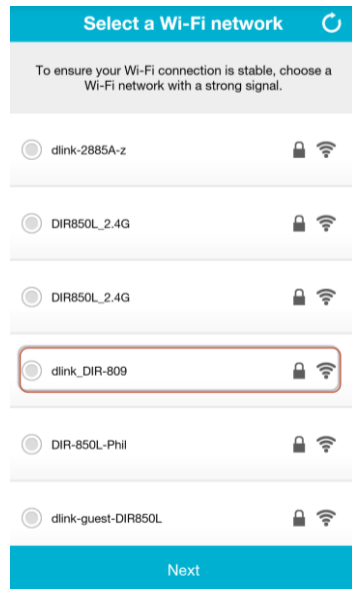
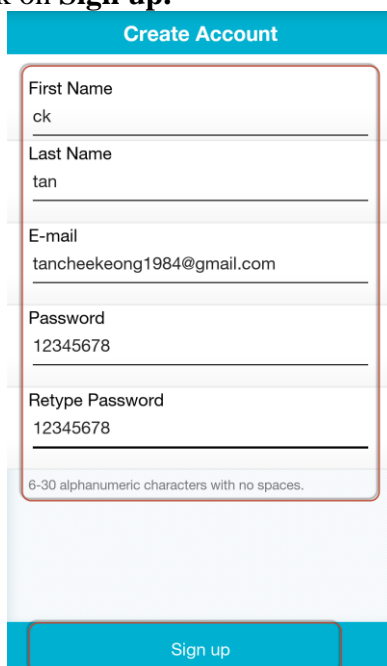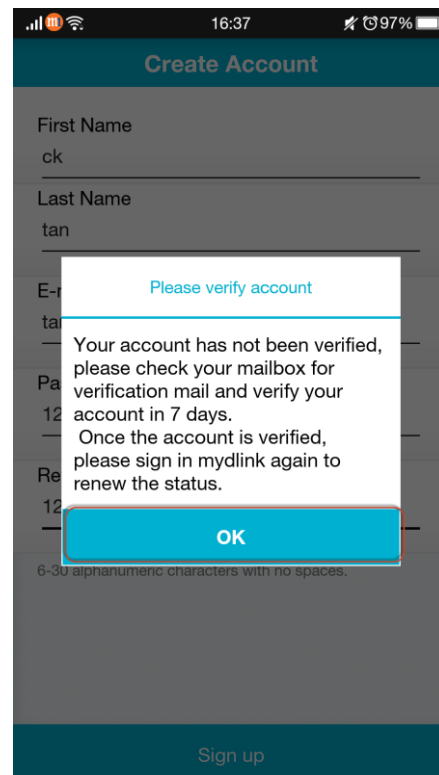| Step 14: Click on **Create a new mydlink account.**	Step 15: Click on **Accept**.
Step 16: 1) Please Enter: a) Your first Name b) Your last Name c) Your E-mail (It will be use as your login name.) d) Password for the Mydlink Account (6 to 30 alphanumeric with no space) 2) Click on **Sign up.** 	Step 17: Click on **OK.**

Thank you