How to configure DDNS

Please note use only hard-wired network connections, to do the setting.
*** Disable firewall in your PC to avoid login problem***

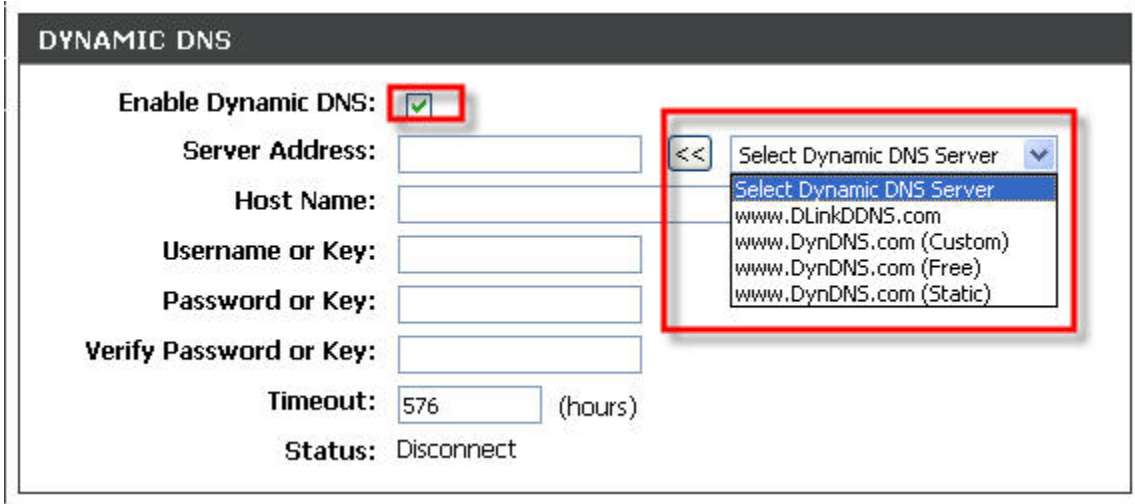**Step 1** Ensure that you have an **Internet connection** before proceeding.

Step 2 Go to Tools tab and click on Dynamic DNS

Step 3 Enable Dynamic DNS function. Select from the drop down list your DDNS provider.
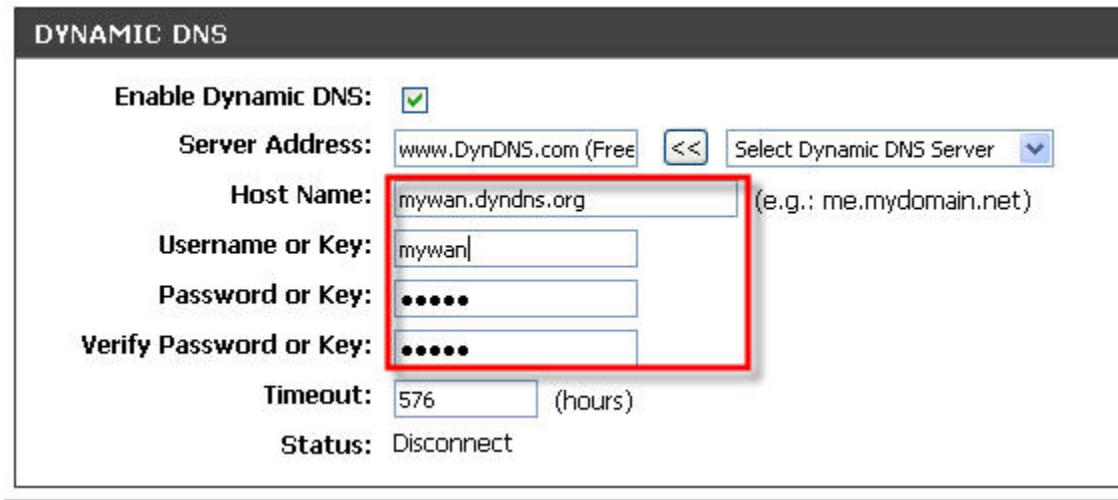
Step 4 Key in the necessary details.

Step 5 Click on "Save Settings"

Step 6 You should see "Connected" at the status.

End of procedure