

## How to: Setup always record to SD Card DCS-960L?

Step 1: Connect the power of the camera and power on. Step 2: Open Internet Explorer and enter http://sg.mydlink.com




Step 3: Enter mydlink registered username and password. Click on Sign In.



Step 4: Select DCS-960L. Click on Settings


DCS-960L 32774368	Live View Settings
	Device Name: Model Name: DC5-960L Device activated on: 2016-05-18 15:00:45 Hardware Version: A1

Step 5: Click on Advanced Settings.

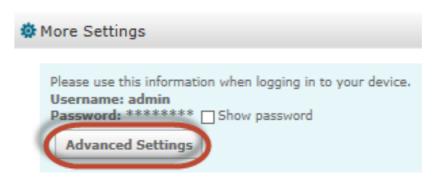


**D-Link**<sup>®</sup>Technical Support Setup Procedure

Step 6: Click on Open the Advanced Settings window.

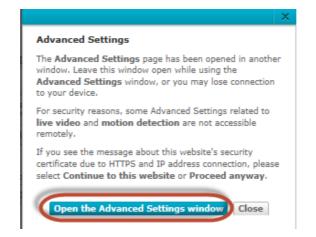

Step 7: Copy down the IP address of the DCS-960L show in the URL bar.

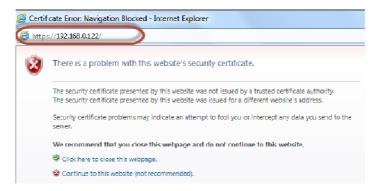

**Step 8:** Open Internet Explorer and enter the IP address of the camera that you had copy down on the URL bar.



Step 9: Enter the camera user name and password that had set during setting up of the camera. Click on OK.



**D-Link** Technical Support Setup Procedure

## Step 10:

- a) Click on Setup > SD Recording.
- b) Put a Tick in the box beside SD Recording.
- c) Select Always
- d) Select 5 Seconds for Pre event Recording.
- e) Select Video for Recording type.
- f) Type in 200 in the box beside Keep Free Space.
- g) Tick Cyclic
- h) Click on Save Settings

DCS-960L	LIVE VIDEO	SETUP MAINTENANCE STATU
Wizard	SD RECORDING	
Network Setup		e and schedule the recording of your camera. You must select the chec
Wireless Setup	of 'SD Recording' to tur	n on the feature.
Dynamic DNS		Save Settings Don't Save Settings
Image Setup	SD RECORDING	
Audio and Video	SD Recording	Z
Preset	Trigger by	Mation V
Motion Detection	Only During	
Sound Detection	Source	Profile 1 V ( Configurable in <u>Audio and Video</u> )
Mail	Recording Type	Pre-event recording : 5 V Seconds
FTP		O Snapshot
Snapshot		Video
Video Clip		Recording Length : 5 🗸 minutes per file
SD Recording	SD Card	Keep Free Space 200 MB (Minimum is 200 )
SD Management		Cyclic
Time and Date		Save Settings Don't Save Settings
Day/Night Mode		Don't Save Setungs

--- END ---